

GOAL ZERO
YETI™400
SOLAR GENERATOR

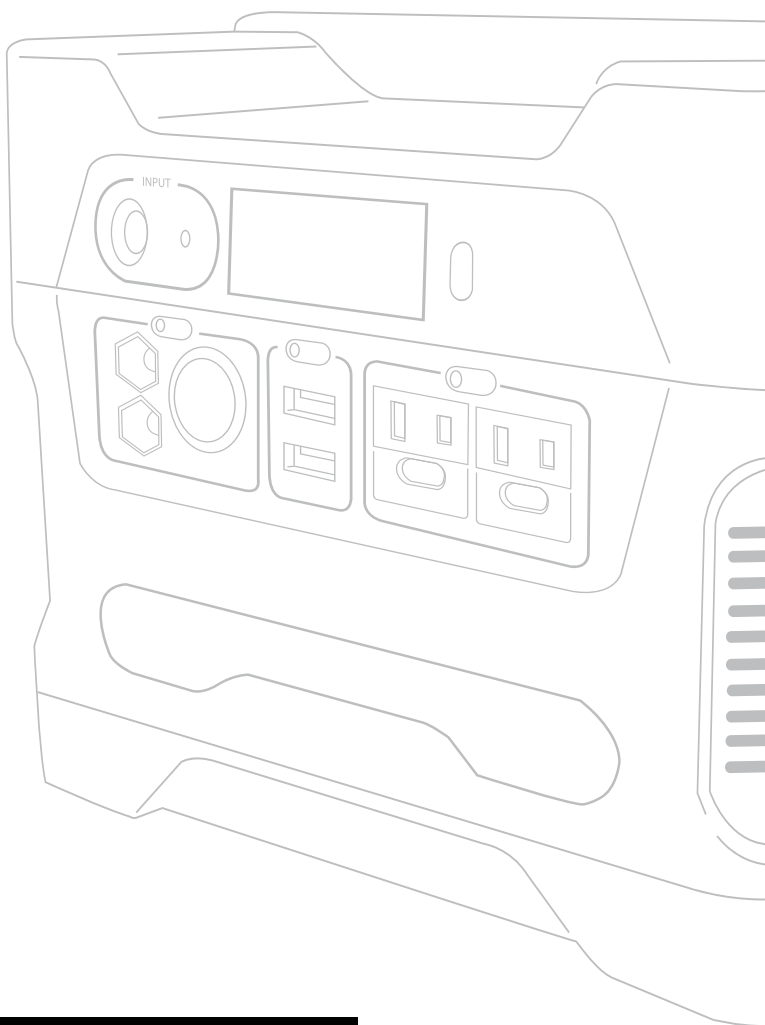


TABLE OF CONTENTS

We'd like to officially welcome you to the GZ Nation. This is a family dedicated to changing the world, one person at a time. Share your stories, get involved and show us what you've got at GoalZero.com

Getting Started	2
i. Get to Know Your YETI	
ii. Unpacking Your YETI	
iii. What it Powers	
Charging your YETI	4
i. Charging from Solar	
ii. Charging from the Wall	
iii. Charging from the Car	
Using your YETI	6
i. What can I Power?	
ii. How to Use	
iii. Best-Use Strategy	
iv. Cold Weather Usage	
v. LCD Display	
vi. Pure-Sine Wave Inverter	
vii. Storage and Downtime Maintenance	
viii. Chaining your YETI	
Technical Specifications	9
Frequently Asked Questions	10
Troubleshooting	13
Education	14
i. Batteries 101	
ii. Solar 101	
Warranty and Contact Info	16


Congrats on your new Goal Zero YETI 400 Solar Generator, a plug-and-play generator for emergencies, camping, or wherever you need power. With 400 watt-hours of power/energy, you can keep laptops, appliances, lights and more going for hours longer.

Make sure you go online and register your product to activate your warranty. You'll also be able to sign up to receive notifications and alerts regarding the YETI. www.GoalZero.com/warranty



CHARGE ME NOW: Before reading through the rest of the manual, plug your YETI into the wall. You should store your YETI plugged in, so the battery is always healthy and full.

Get To Know Your Gear

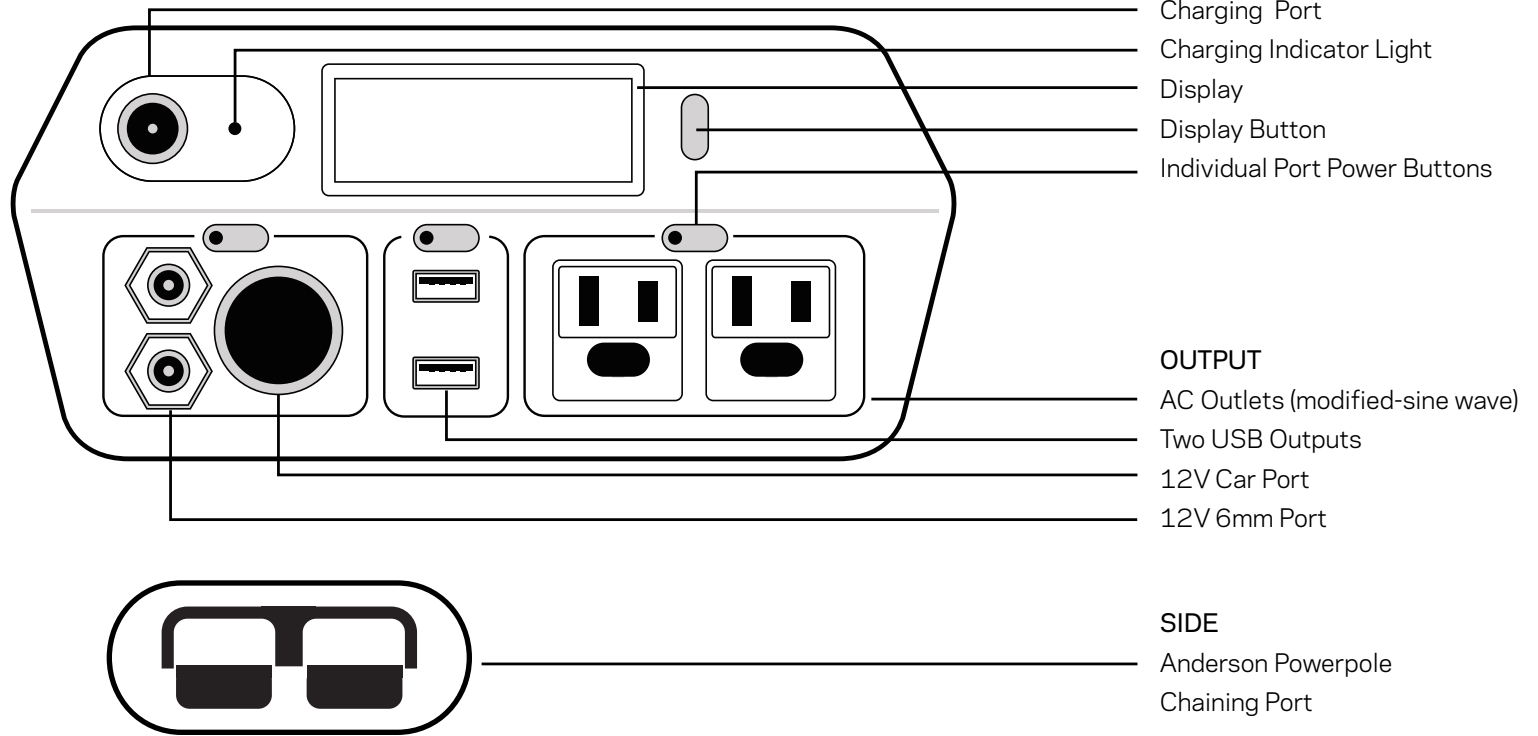


Unpacking your YETI

- A** AC Wall Charger (2 pieces)
- B** Goal Zero Yeti 400 Solar Generator
- C** Legacy-Nomad Adapter (4.7 to 8mm)



What it Powers

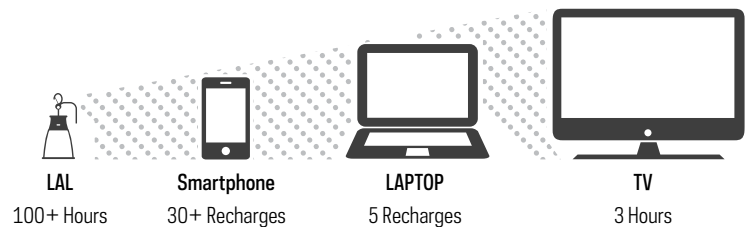


See page 12 for more details

Charging Your YETI

CHARGE ME NOW: Before using or storing, plug your YETI into the wall until it is fully charged. If at any point you hear a beeping from your YETI, plug it into a power source, like an AC outlet or a solar panel, as soon as possible. This built-in warning indicator is to help prevent battery damage when the charge gets low. For more tips and tricks on keeping your battery healthy, see the BATTERY 101 section.

LCD Battery Display: The LCD Battery Display indicates the charge level of your YETI. There are 5 segments to the battery, approximating 20% - 40% - 60% - 80% - 100% capacity. As you use your YETI, segments will disappear from the display, indicating the remaining charge. When charging your YETI you will notice a battery segment blinking at a 1 second interval. This indicates the current charge status. Once your YETI is fully charged, all battery segments will be lit and remain solid.

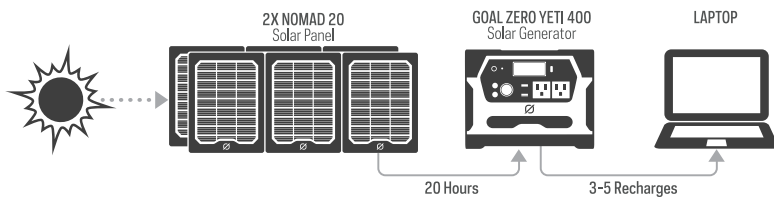


Charging from Solar

The YETI's charging port is located on the top-left corner of the faceplate and has a blue ring around it. This 8mm port is designed to work with Goal Zero solar panels and is capable of taking in 120W of solar.

1. Place your solar panel where it will get as much direct sunlight as possible. See the graphic in the SOLAR 101 section for help.
2. Insert the blue-ringed plug from the panel into the INPUT port on the front of the YETI. You will know the YETI is charging when the blue LED light next to the INPUT port lights up, and the battery segments in the LCD BATTERY DISPLAY are blinking. The YETI is fully charged when all battery segments stop blinking and remain solid.
3. Some GOAL ZERO panels are chainable to provide more power to your YETI and reduce solar charge times. The INPUT port is capable of taking in 120W of solar.

When connecting older versions of the NOMAD and BOULDER Solar Panels, use the Legacy-Nomad Adapter Cable or the 8.0mm to 8.0mm Adapter Cable to connect to the YETI.

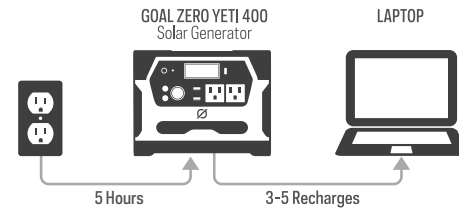

Charging from the Wall

Using the included AC Wall Charger, plug your YETI into any wall outlet. You will know the Yeti is charging when the blue LED light next to the INPUT port turns on, and battery segments in the BATTERY DISPLAY are blinking. The YETI is fully charged when all battery segments stop blinking and remain solid. The YETI should recharge from the wall in about 5 hours.



1. The AC wall charger comes in two pieces. Connect the two pieces by plugging the cable into the box

Charging from your Car

To charge your YETI from a car or 12V source, you will need to purchase an **8.0 mm to 12V charger** from GOALZERO.com. Call our Customer Solutions Center at 1-888-794-6250 for help identifying the charger.

Using your YETI

What to power from your YETI:

USB: Smartphones, MP3 Players, Digital Cameras, E-readers, Tablets, etc.

12V: Goal Zero Lights, Car adapters, etc.

AC: Laptops, CPAP, Display Monitors, Appliances, TVs, etc.

How to use your YETI:

1. Press the power button located above each port you will be using.
2. You'll know the port is turned on when the green LED light on the button is illuminated.

**When the AC port is not in use, turn it off to conserve power.


3. Plug in your gear for power anywhere life takes you.
4. If possible, keep your YETI plugged into a power source when not in use.

Best-Use Strategy:

When recharging gear with your YETI, take note of the LCD Battery Display. If you plug in devices that have a high power requirement, the charge level of your YETI can drop quickly and you may not get exactly 400Wh of power. On the flipside, if you're recharging devices that draw power more slowly (a tablet), you will get closer to 400Wh from your YETI. If you're experiencing shorter runtimes, you may want to check the device's power requirements, see TROUBLESHOOTING for help

Cold Weather Usage:

Cold temperatures (below freezing) can impact the YETI's battery capacity. If you'll be living off-grid in sub-zero conditions, we recommend keeping your YETI in an insulated cooler, and connected to a power source (solar panels). The natural heat generated by the YETI contained in an insulated cooler will keep battery capacity at its highest.

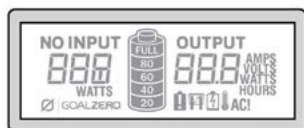

LCD Display:

Your YETI is equipped with an advanced LCD display that shows insightful information about your power consumption.

1. The INPUT section on the left side of the display indicates the amount of watts going into your YETI from your charging source, like the wall, 12V charger, or solar panel.
 - a. When charging from a solar panel, notice the change in the number of watts going into your YETI when you angle the panel toward the sun.
 - b. If the power flow is below a measurable point, the display will

show LOW. If charging from the sun, reposition your solar panels into more direct sunlight.





2. The BATTERY outline in the middle of the display indicates the current charge level of your YETI. You can read more about the charging your YETI on page 4.

3. The OUTPUT section on the right side of the display indicates the amount of power your devices are pulling from the YETI. This information can be displayed in AMPS, VOLTS, WATTS, AMP HOURS (Ah), and WATT HOURS (Wh).

- a. Press and hold the DISPLAY button until the display begins flashing. Release the button and press again to scroll through different display options
- b. AMPS, VOLTS, and WATTS are all indicators of runtime, meaning they will give you a good estimate of how long you'll be able to use the devices plugged in before the YETI needs to be charged.
- c. Wh and Ah reflect the power usage over the lifetime of the YETI. To reset these numbers, press and hold the DISPLAY button for 10 seconds. The OUTPUT display will begin flashing, and then stop flashing - release the button to reset the totals.

**To efficiently monitor your power usage, reset Wh and Ah after you fully charge your YETI.

4. Yeti 400 Warnings:

-  Battery Fail: Replace internal battery
-  Blown Fuse: Contact Goal Zero Solutions Center
-  Low Battery: Plug into power source immediately
-  Temperature Warning; Too Hot: Unplug YETI and allow it to cool down
- AC!** Inverter Fail: Device is pulling too much power. Unplug device and turn AC inverter off and on. Contact Goal Zero Solutions Center

Pure-Sine Wave Inverter

Your YETI has a built-in pure-sine wave inverter, which means it provides the cleanest power for your devices. For more information about pure-sine wave power, see page 11.

Storage and Downtime Maintenance:

Having your YETI connected to a power source, like a solar panel or wall outlet, between adventures or while in storage keeps its battery healthy and topped off. This prolongs battery life and will ensure your YETI is charged and ready to go all day, every day.

If you can't keep your YETI plugged into a power source during storage, fully-charge your YETI every 3 months and store it in a cool, dry place. Failure to maintain your YETI by following these steps can result in battery damage which will void the product warranty.

Chaining your Yeti:

You can chain your YETI to other YETI 400s to extend runtimes. To chain to other YETI 400s:

1. Purchase the Anderson Chaining Cable from www.GOALZERO.com
2. Insert the cable connectors into the Anderson PowerPole ports on the side of each Yeti 400.
3. Make sure both YETIs are completely charged BEFORE chaining.

When additional batteries are chained to the YETI, you will experience increased charge times - this is a result of having to charge up the chained batteries in addition to the YETI.

**The YETI 400 is NOT chainable with the YETI 1250 - the internal batteries are not the same size. You can chain the YETI 400 to the discontinued EXTREME 350 Power Pack.

Technical Specifications

Charge times

Wall charger (72W)	5 hrs
Car charger (30W)	13 hrs
GOAL ZERO Nomad 20	40-80 hrs
2x GOAL ZERO Nomad 20's	20-40 hrs
GOAL ZERO Boulder 30	26-52 hrs
GOAL ZERO Nomad 100	8-16 hrs

Battery

Cell type	AGM Lead Acid
Pack capacity	396Wh (12V, 33Ah)
Lifecycles	hundreds of cycles
Shelf-life	Keep plugged in or charge every 3 months

Fuses

Management system	Charging and low-battery protection built-in
-------------------	--

Ports

USB port (output)	5V, up to 2.1A (10W max), regulated
6mm port (output, 6mm, green, hexagon)	12V, up to 10A (120W max)
12V car port (output)	12V, up to 10A (120W max)
AC inverter US (output, 60Hz, modified sine wave)	110V, 2.6A (300W continuous, 600W surge max)
International AC inverter (output, 50Hz, modified sine wave)	220V, 1.4A (300W continuous, 600W surge max)
Power Pole chaining port	12V, up to 33A (400W max)
Charging port (input, 8mm, blue, circle)	14-29V, up to 10A (120W max)

General

Chainable	yes
Weight	29 lbs (13.2 kg)
Dimensions	10.25 x 8 x 8 in (26 x 20.3 x 20.3 cm)
Operating usage temp.	32-104 F (0-40 C)
Certs	CE, FCC, ROHS
Warranty	6 months

Frequently Asked Questions

What type of battery is in my YETI?

Your YETI uses a 12V, 33Ah sealed lead-acid battery (AGM), and similar to what is found in your car. Here are some basic facts about AGM batteries:

1. AGM batteries should be kept full at all times.

This means you should leave your YETI plugged into a power source at all times, especially during storage.

2. AGM batteries last longer if you do not drain them completely.

This stems from the “battery memory myth” in old rechargeable batteries. You can read more about this in the Battery 101.

How do I know if my YETI is charged?

To check the charge level of your YETI, refer to the LCD Battery Display. When lit up, you'll see a battery outline with 5 segments, indicating the current charge level. You can turn on the Battery Display by pushing the DISPLAY button. It is OK to use your YETI even when it's not fully charged.

My YETI is beeping... what does that mean?

Plug your YETI into a power source, like a solar panel or outlet, as soon as possible. This chirping is to alert you that your YETI's battery is low and needs to be charged.

Can I take my YETI on a plane?

You sure can, although it is a bit heavy. The YETI contains an advanced, sealed lead-acid battery that is completely safe to bring along on your flight. Bring along your user manual to show the type of battery inside.

Is the battery inside my YETI replaceable?

Your YETI depends on an advanced lead-acid battery to power your gear, and like all other batteries, one day it will make the journey to the battery graveyard. Lucky for you, the YETI's battery is replaceable. Follow these steps for replacing your YETI's battery:

1. Remove the four top bolts
2. Remove the lid
3. Remove the battery terminal bolts
4. Lift the old battery out of the body of the YETI

****This battery is HEAVY. Use caution and proper technique when lifting.**

5. Insert replacement battery and reassemble in reverse order of steps above.

Once you have replaced your battery, you will need to find a local battery recycling center to dispose of it properly.

For more help replacing your YETI's battery, contact our Customer Solutions Center at 1-888-794-6250 or at support@goalzero.com

What do the different display options mean?

Your YETI's LCD display is an advanced feature designed to help you better understand power and monitor your consumption. The INPUT side reflects the amount of power your YETI is receiving while it's charging. The OUTPUT side indicates the amount of power the devices you have plugged in are pulling out of the YETI - in the form of AMPS, VOLTS, WATTS, AMP HOURS and WATT HOURS.

You can use the numbers displayed in WATTS to estimate runtimes. For example, if you have a light plugged in that is pulling 100W, you can estimate the YETI 400 will run the light for about 4 hours ($\text{YETI Wh}/\text{Device W} = \text{runtime in hours}$; $400/100 = 4$ hours).

WATT HOURS (Wh) and AMP HOURS (Ah) represent the amount of power being pulled per hour. This number continues to accumulate with each use of your YETI and can be manually reset whenever desired.

Can I power devices from the Anderson PowerPole ports on the side of the YETI?

No. There is no under-voltage protection built into the Anderson PowerPole ports on the side of the YETI 400, meaning if you try to power devices from these ports you could damage the battery. These ports are meant for chaining other YETI 400s or EXTREME 350s for longer runtimes.

What does a pure-sine wave inverter mean?

When it comes to power, you might have heard the letters DC and AC thrown around. DC stands for Direct Current, and is the only type of power that can be stored in a battery. AC stands for Alternating Current, which is the type of power your devices use when they're plugged into the wall. An inverter is required to change DC output to AC output and requires a small amount of power for the change. You can see this by turning on the AC port and looking at the OUTPUT on the LCD display.

A pure-sine wave inverter, like the one found in your YETI 400, produces an output that is exactly the same as supplied by an AC wall plug in your house. Although integrating a pure-sine wave inverter takes more components, it produces power output that makes it compatible with almost all AC electric devices you use in your house.

So in the end, the pure-sine wave inverter allows your YETI to safely power almost everything under 400 watts in your house that you would normally plug into the wall.

How do I know if my device will work with the YETI?

First, you'll need to determine the amount of power your device requires. This may require some research on your end, a good online search or examining the user guide for your device should suffice. To be compatible with the YETI 400, you should use devices that require less than 300W.

Second, you will need to check the capacity for the individual output ports. For example, the AC port is monitored by an inverter that allows for 300W of continuous power. This means if your device is pulling more than 300W for an extended period of time, the YETI's inverter will shut off.

Once you know your device is compatible, you'll want to determine how long you'll be able to power your gear from the YETI.

How long will the YETI run my device?

Here's a quick and dirty lesson in power:

All GOAL ZERO rechargers have a number in their name, ex. GUIDE 10 Plus Recharger, GOAL ZERO YETI 400 Solar Generator. These numbers refer to the Watt Hours (Wh), or the amount of energy that can be stored in each battery, and can help estimate how long your gear will run from each recharger. For example, a 400Wh battery should run a 100W light for 4 hours ($400/100=4$). If your gear falls within the 400Wh capacity of the YETI, you'll want to check the restrictions on each of the output ports.

Here are some common devices and their watt-hour requirements:

Device	Power from Yeti 400
Light-a-Life 12V Lantern (3Wh)	130 Hrs
Smartphone (5-7Wh)	30+ Recharges
Tablet (25-42Wh)	10+ Recharges
DVD Player (20-25W)	14-17 Hrs
Laptop (50W)	2-17 Hrs
Radio/Stereo (40W)	7 Hrs
Desktop Computer (100W)	3-3.5 Hrs
Printer (90W)	1.5 Hrs
32" LCD TV (98-156W)	2-3.5 Hrs

When you're deciding on what to power from your new GOAL ZERO recharger, do some research into your device's wattage consumption. For more quick tips and learning tools, check out www.GOALZERO.com/learn.html

Troubleshooting

If your devices are not recharging from your YETI, follow these steps:

1. Ensure the Output Port has been turned on. The green LED light on the power button should be lit up.
2. Check the Battery Display. If it is at 20% or below, recharge your YETI.
3. Verify your device is suitable for use with the YETI:
 - a. All of the YETI output ports have their own max power capacity. Check the YETI's Tech Specs to ensure your device is compatible.
 - b. Some devices with rechargeable batteries, like laptops and tablets, may pull more watts when in use. In these cases, power down your device and recharge it.

Reset the battery following these steps:

- **Unplug all charging cables, including device charging cables, from the YETI before attempting to reset the battery.
- a. Remove the four bolts holding the YETI top in place.
 - b. Lift top off and set aside.
 - c. Remove the two battery terminal bolts.
 - d. Disconnect the wires on the battery terminals. Wait 10 seconds.
 - e. Reconnect battery wires and reassemble YETI.
 - f. Fully recharge your battery.

If you are still experiencing trouble with your YETI, please call our Customer Solutions Center at 1-888-794-6250 or by email at support@goalzero.com

Education

BATTERIES 101: GOAL ZERO utilizes the latest and greatest in battery technology to accompany you on all life's adventures. From the versatile and lightweight Lithium Ion, to the robust and powerful Lead Acid, we've compiled some helpful tips to keep your GOAL ZERO batteries working their best.

i. Batteries need exercise

The best thing for any battery is to use it. Don't leave a charged battery sitting around, unloved and unused for long periods of time.

ii. The "Battery Memory" myth

Thanks to old Nickel-Cadmium (NiCd) batteries, there's a myth running around that you should completely drain your batteries before plugging them in for a recharge, called "deep cycling". Although true with NiCd batteries, the typical batteries you'll find in most of your gear today, including the advanced lithium and lead-acid batteries used in your GOAL ZERO products, require no such draining. In fact, you should avoid deep cycling your batteries - it does more harm than good in most cases.

iii. The "Stadium Effect"

The stadium effect occurs when recharging your batteries. You'll notice your battery quickly filling up in the beginning, then slowing down noticeably when trying to charge up the last several percentages. Think of how quickly a stadium fills up when the doors first open - there are hundreds of open seats so it's easy to find the one you want. Eventually there are only a few open seats here and there and people have to maneuver around to find the spot they want and filling those seats takes longer. The same theory applies to recharging batteries. It's easy for energy to flow in and take up empty space in the beginning, and as time goes on and there is less space available, it takes longer for the energy to fill in the holes.

iv. Read the manual.

Yeah, it might be a long read, but the manual is the best place to find the dos and don'ts for the battery in your specific device. Reading your manual will ensure you're taking steps to keep your batteries happy and healthy.



SOLAR 101: GOAL ZERO makes it easy to recharge your gear from the sun - we didn't invent solar power, we perfected it. Some things to keep in mind when recharging your gear with solar power:

i. Solar panels don't store power from the sun, they collect it.

We teach you to COLLECT - STORE - USE, which is the best way to utilize solar power to recharge your gear. COLLECT the sun's energy with a solar panel. STORE the power in a recharger. USE the recharger to power your gear, day or night. If you're really a diehard, you can plug your gear directly into the junction box located on the back of our NOMAD Solar Panels to recharge from the sun.

ii. Not all solar charge times are created equal

Most solar panel manufacturers calculate their recharge times with the following equation: $\text{Device Watt Hours} / \text{Solar Panel Watts} = \text{Solar Recharge Times}$. So theoretically, a 13 watt solar panel would recharge a 50 watt-hour recharger in 3.84 hours ($50/13 = 3.84$) - and this is the number you could find in marketing material for a solar panel. However, in order to standardize results across all manufacturers, these tests are completed in laboratory settings. The truth is, on a good, sunny day, you'll receive about 50-75% of your solar panel's rated wattage, and this is how the engineers at GOAL ZERO calculate the solar recharge times you see on our packaging.

iii. Solar works, even in overcast conditions.

 
Solar panels utilize IR, UV, and visible rays from the sun that can penetrate through clouds. Although the efficiency of the solar panel will decrease in cloudy conditions, you'll still be collecting valuable power from the sun.

iv. Keep away from shade and windows.

Although you should seek out the shade on sunny days, your solar panels will collect more power when fully exposed to the sunlight. Windows also have a habit of decreasing efficiency. So keep those panels outside and in the bright sunlight.

v. Proper alignment works wonders.

Keeping your solar panel angled toward the sun can dramatically increase solar efficiency. Set it up and let Mother Nature do the rest.

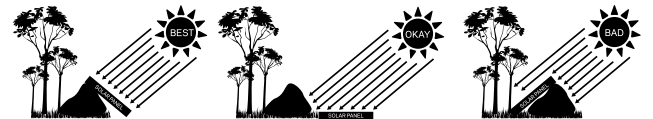

Warranty & Contact

LIMITED WARRANTY

GOAL ZERO LLC warrants to the original consumer purchaser that this GOAL ZERO product will be free from defects in workmanship and material under normal consumer use during the applicable warranty period identified in Paragraph 2, below, subject to the exclusions set forth in Paragraph 5, below. This warranty statement sets forth GOAL ZERO's total and exclusive warranty obligation. We will not assume, nor authorize any person to assume for us, any other liability in connection with the sales of our products.

WARRANTY PERIOD

The warranty period for GOAL ZERO battery cells (whether purchased on a stand-alone basis or as part of another product) is 180 days. The warranty period for all other GOAL ZERO products and components is one (1) year. In each case, the warranty period is measured starting on the date of purchase by the original consumer purchaser. The sales receipt from the first consumer purchase, or other reasonable documentary proof, is required in order to establish the start date of the warranty period. If you completed the online GOAL ZERO Product Registration Form within 30 days after purchasing your product, that registration can also establish the start date of the warranty period (but warranty coverage is not conditioned upon such registration).

REMEDY

GOAL ZERO will repair or replace (at GOAL ZERO's option and expense) any GOAL ZERO product that fails to operate during the applicable warranty period due to a defect in workmanship or material.

LIMITED TO ORIGINAL CONSUMER BUYER

The warranty on GOAL ZERO's products is limited to the original consumer purchaser and is not transferable to any subsequent owner.

EXCLUSIONS

GOAL ZERO's warranty does not apply to (i) any product that is misused, abused, modified, damaged by accident, or used for anything other than normal consumer use as authorized in GOAL ZERO's then-current product literature, or (ii) any product purchased through an online auction house. GOAL ZERO's warranty does not apply to any battery cell or product containing a battery cell unless the battery cell is fully charged by you within seven (7) days after you purchase the product and at least once every 6 months thereafter.

HOW TO RECEIVE SERVICE

To obtain warranty service, you must contact our customer service team via telephone at (888) 794-6250, or via email at support@goalzero.com. If our customer service team determines that further assistance is required, they will give you a Return Material Authorization ("RMA") number and will provide you with prepaid return shipping label that you can use to mail back your non-functioning item(s). You must properly package the product, clearly marking the RMA number on the package and including proof of your purchase date with the product. We will process your return and send your repaired or replacement product to you at our expense for product being shipped to locations in North America. For product purchased or being shipped outside of North America, please contact the local distributor from whom you purchased the product or email support@goalzero.com to obtain further distributor information.

IMPLIED WARRANTIES

THE LIMITED WARRANTY STATED HEREIN IS IN LIEU OF ALL OTHER EXPRESS WARRANTIES. IN NO EVENT SHALL ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO ANY WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT, EXTEND BEYOND THE APPLICABLE WARRANTY PERIOD IDENTIFIED IN PARAGRAPH 2, ABOVE. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

EXCLUSIVE REMEDY; LIMITATION OF LIABILITY

The foregoing provisions state GOAL ZERO's entire liability, and your exclusive remedy, for any breach of warranty, express or implied. IN NO EVENT WILL GOAL ZERO BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES ARISING FROM ANY USE OR MALFUNCTION OF ANY GOAL ZERO PRODUCT, OR FROM ANY BREACH OF WARRANTY, INCLUDING DAMAGE TO OTHER DEVICES. IN NO EVENT WILL GOAL ZERO'S LIABILITY FOR ANY CLAIM, WHETHER IN CONTRACT, WARRANTY, TORT (INCLUDING NEGLIGENCE AND STRICT LIABILITY) OR UNDER ANY OTHER THEORY OF LIABILITY, EXCEED THE AMOUNT PAID BY YOU FOR THE GOAL ZERO PRODUCT. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

GOALZERO.COM

Toll Free: 888.794.6250

675 West 14600 South Bluffdale, UT 84065

We proudly support
TIFIE Humanitarian
www.tifie.org