 


INTRODUCTION

Thank you for choosing the SoundStation Wireless Microphone System. The SoundStation Wireless Microphone System works with both the SoundStation and the SoundStation EX with Extended Microphones. It is designed for presenters or participants who walk around the conference room. This system operates on a long-range, interference-free VHF high band frequency.

CHECKLIST OF PARTS

Your SoundStation Wireless Microphone System includes the following items:

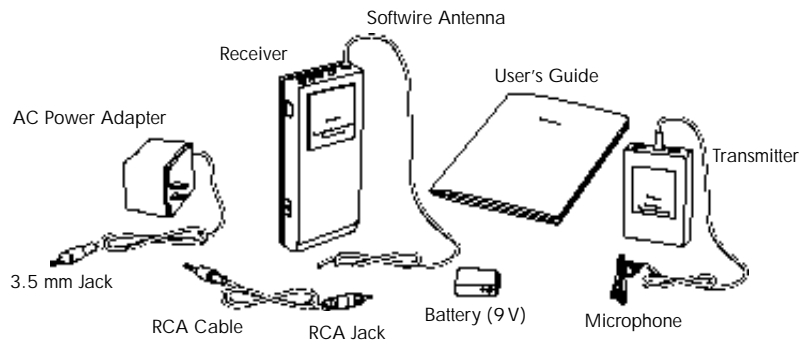


If any of the above parts are missing, please contact your Lucent Technologies representative or Lucent Technologies authorized dealer.

TO SET UP THE SYSTEM



Receiver

1. Power the Receiver by plugging the AC power adapter jack into the POWER Jack (6) on top of the Receiver, then plug the AC power adapter into a 110 V AC socket.
2. Use the RCA cable to connect one end of the 3.5 mm jack to the OUTPUT Jack (5) on the Receiver and the other end to the AUX connector on the SoundStation Wall Module.
3. When the system is in use, the SOFT WIRE ANTENNA (2) on the Receiver should be fully extended to obtain maximum range.
4. Turn the Receiver's ON/OFF Switch (7) to the ON position.

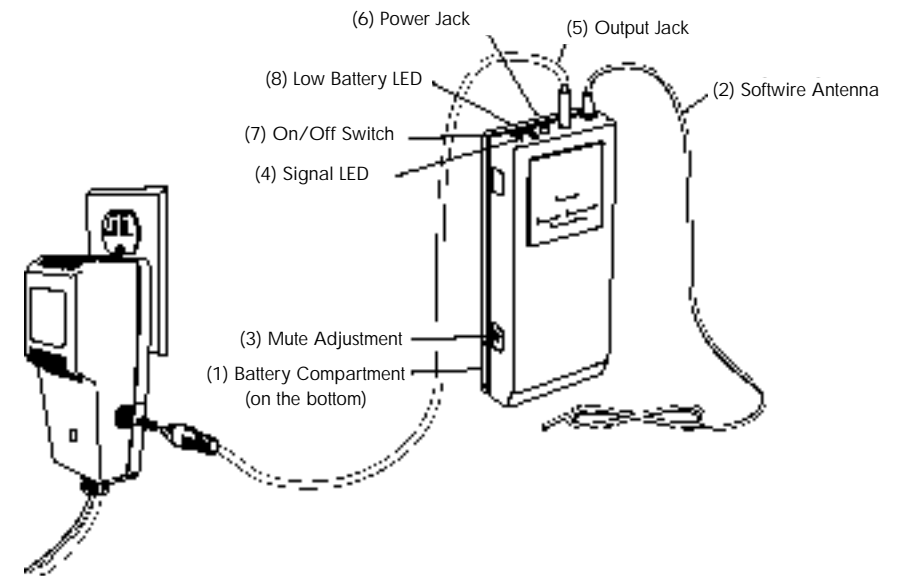

Transmitter

5. Open the Transmitter's battery cover and place the included 9 V battery into the BATTERY COMPARTMENT (4).
6. Turn on the Transmitter by pushing the TRANSMITTER ON/OFF Switch (2) to the ON position. The Low Battery LED (3) will give a quick flash. In the case of a low or dead battery, the LED will stay on continuously or will not go on at all indicating a battery voltage below 7 V. If this occurs, replace the battery.
7. Clip the Transmitter to a belt or place in a pocket.
8. Attach the MICROPHONE (5) at chest level. (Do not place too close to mouth - a distance of six inches is recommended).
9. When ready to speak, turn on the microphone by pushing the Transmitter's AUDIO ON/OFF Switch (1) to the ON position.
10. To mute the microphone, push the Transmitter's AUDIO ON/OFF Switch (1) to the OFF position.

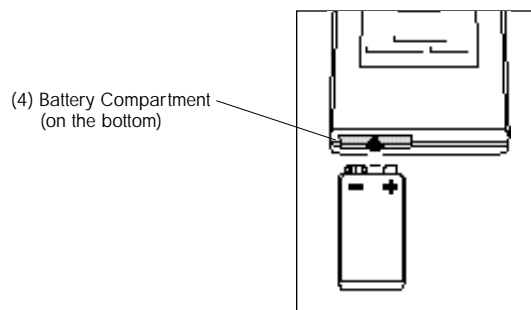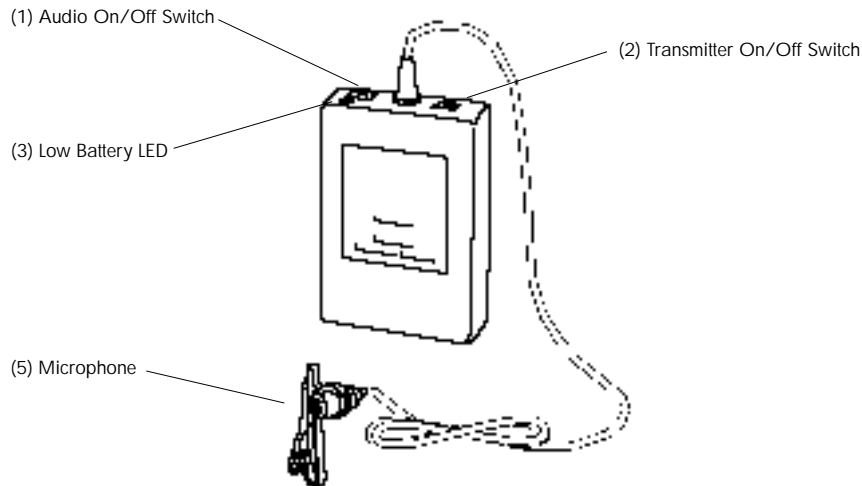

TO ENSURE BETTER PERFORMANCE

- ▼ Position microphone six inches from mouth.
- ▼ Check battery condition indicator before using.
- ▼ Fully extend software antenna.
- ▼ Turn Transmitter off when not in use.
- ▼ Keep the wireless Transmitter and Receiver within line of site if possible.

ADDITIONAL COMMENTS

- ▼ Depressing any mute button on the SoundStation or the SoundStation EX (keypad or extended microphone) will mute the wireless microphone as well.
- ▼ Talking into the wireless microphone will be heard by the far end party but will not be heard through SoundStation's speaker.

TROUBLE SHOOTING

If the Wireless Microphone is not working, check the following:

- ▼ Ensure that the Receiver is ON.
- ▼ Ensure that the Transmitter is ON.
- ▼ Check to see if the Low Battery LED (3) is illuminated on the Transmitter. If so, replace the 9 V battery.
- ▼ Ensure that the Signal LED (4) on the Receiver is illuminated. If the Signal LED is OFF, move the Transmitter closer to the Receiver. If the Signal LED still does not turn ON, the Mute Adjustment must be modified. To adjust the Mute, simply insert a small flathead screwdriver into the Mute Adjustment socket and turn until the signal light turns ON.