


The QSX™ System Quick Start Guide



Unit Overview

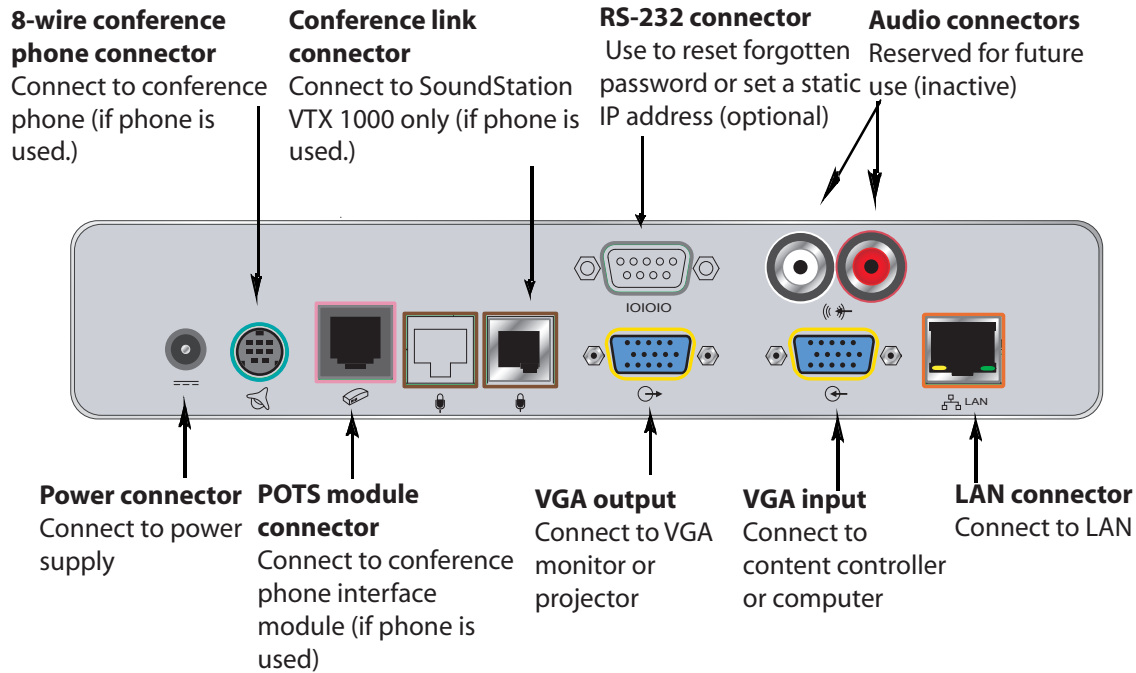

Included in the Box

Cable Bag

* LAN Cable



* Power Cord



 
* Power Supply



* 8-Wire Cable for phone console




* Mounting Brackets

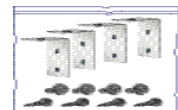

QSX 400

* Content Controller with VGA Cable

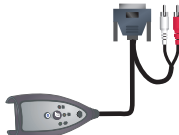

* 3 foot VGA Extension



* Straight-through Serial Cable



QSX 300

(for use with SoundStation VTX 1000)

* VGA Cable



* Straight-through Serial Cable



* Conference Link Cable




For information about configuring the QSX system, see the QSX Administration Guide.

For the latest product information, see the Release Notes available at www.polycom.com/resource_center.


For product support, visit the Polycom Support Center at www.polycom.com/support.

1 Connect the QSX™ System

Connect Power Supply and LAN Cable

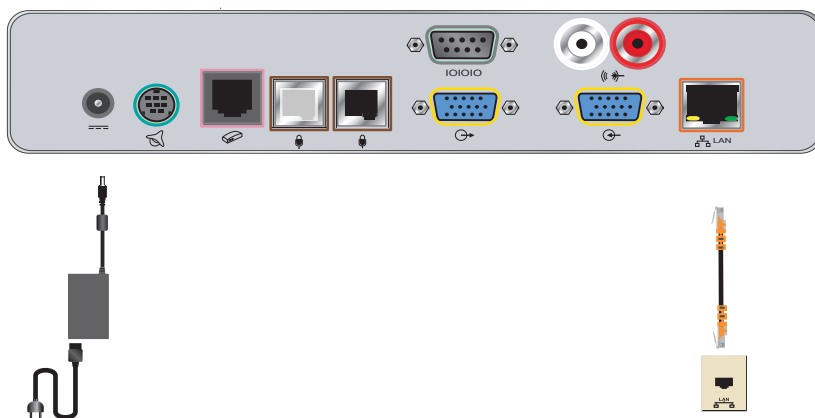


Connect VGA Cables

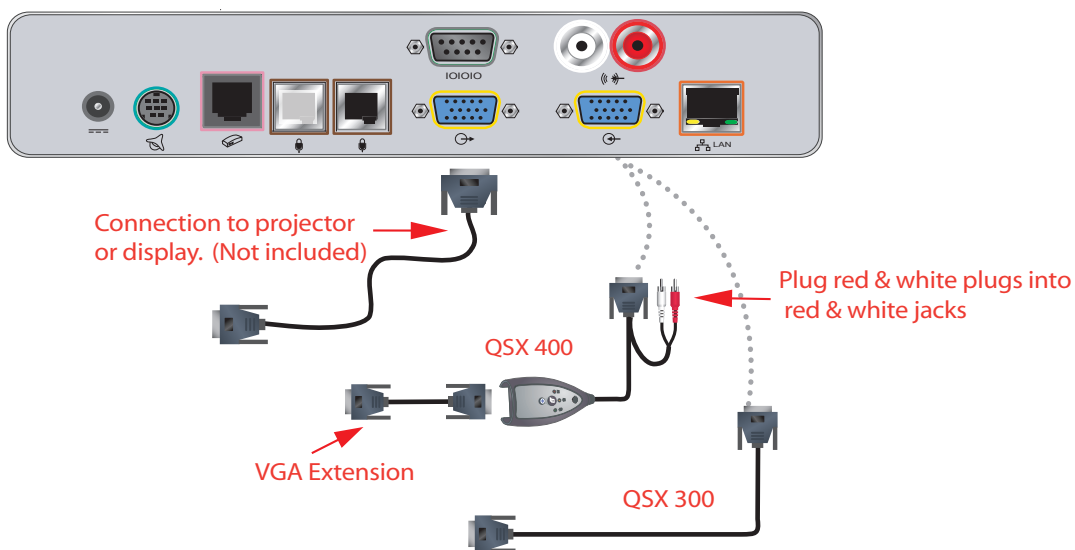


2 Connect Conference Phone (optional)

Connect SoundStation™, SoundStation Premier™, SoundStation2™ or VoiceStation™ conference phones

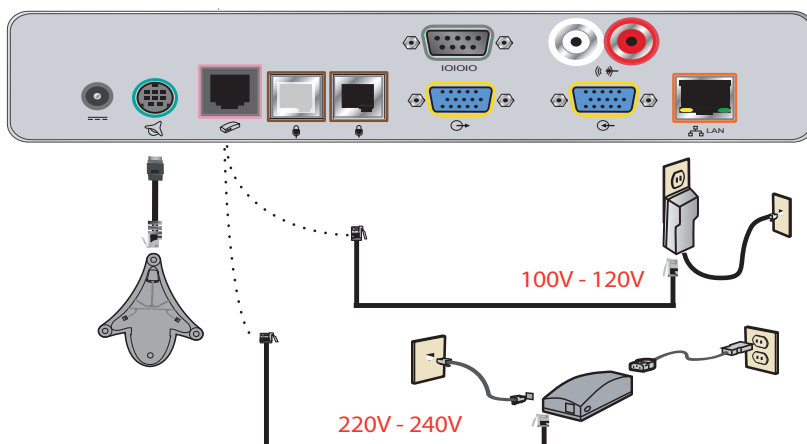

2 Connect a SoundStation VTX 1000™ conference phone (optional)

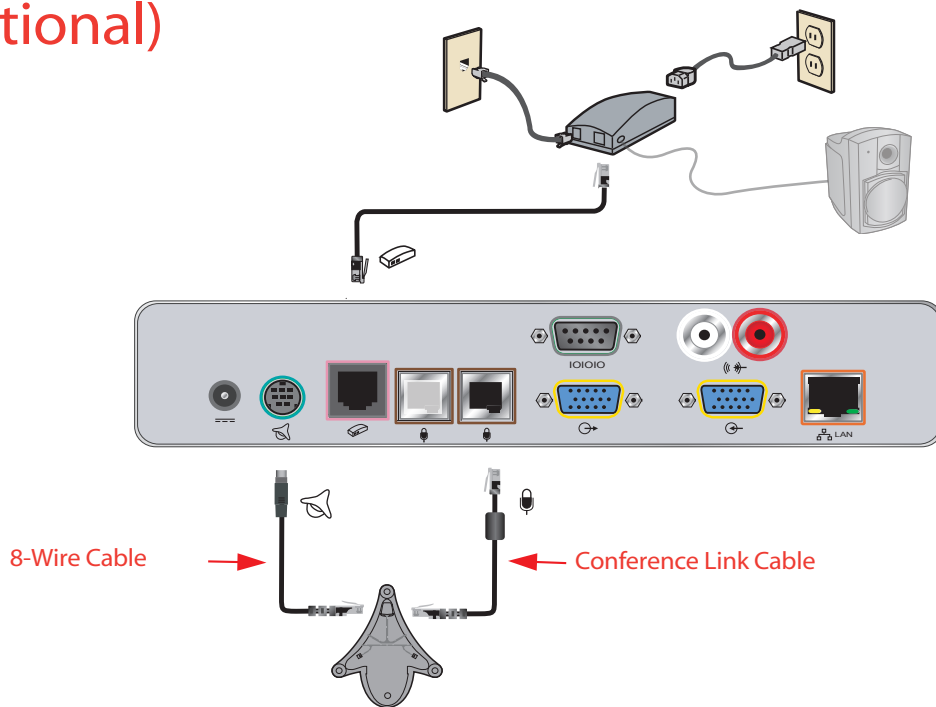


3 Set a Static IP Address* (optional)

A. Via QSX Web Admin Page

To Get to QSX Web Admin Page


1. Once QSX is connected, hit the Info button on Content Controller.
2. If screen shows an IP address in the "My IP" field, go to Step 3. Otherwise, proceed to next page.
3. Open your internet browser and type in the IP address, followed by "/admin.htm" (e.g. <http://140.242.16.45/admin.htm>).
4. Click on LAN properties. Select "Enter IP Address Manually." After typing IP Address, Subnet Mask Gateway and DNS information, click the update button.

* By default QSX is DHCP enabled. If your network has a DHCP server, an IP address will automatically be assigned to the QSX.

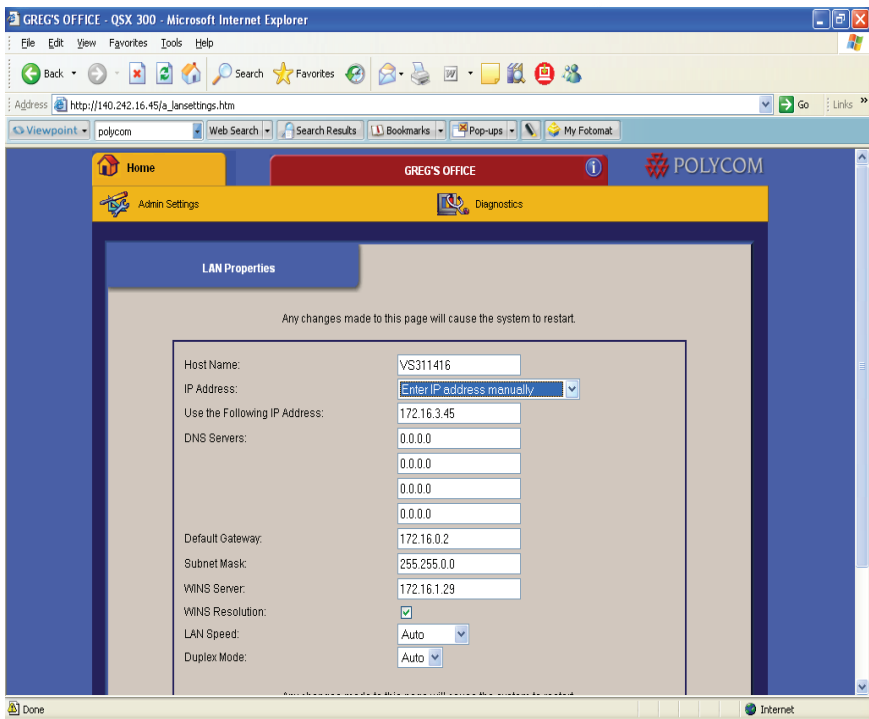


3B. Via Hyperterminal

1. Plug a straight-through serial cable from your PC to the QSX

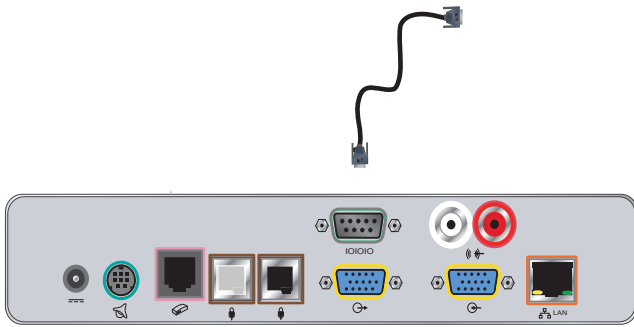


2. Start Hyperterminal

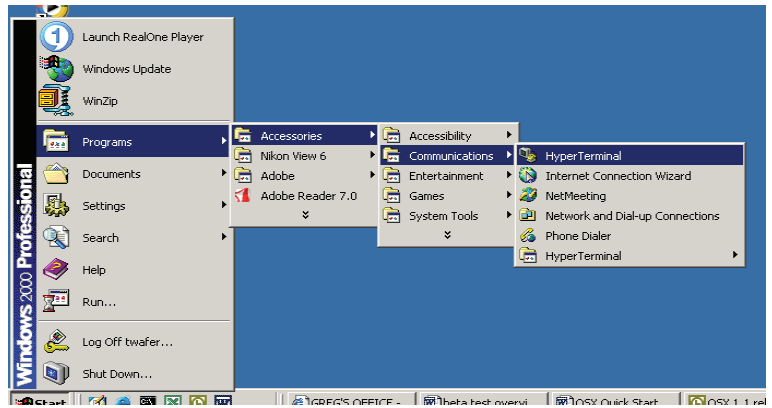

3. Connect to QSX

- a. Open Hyperterminal, enter a name (e.g.-QSX) and click OK.
- b. Select COM1 (or the actual port) and click OK.
- c. Select bitrate of 115200 and click OK.
- d. The status bar at the bottom of the screen should say "Connected".
- e. Enter "ip" and hit return to see the IP configuration page.

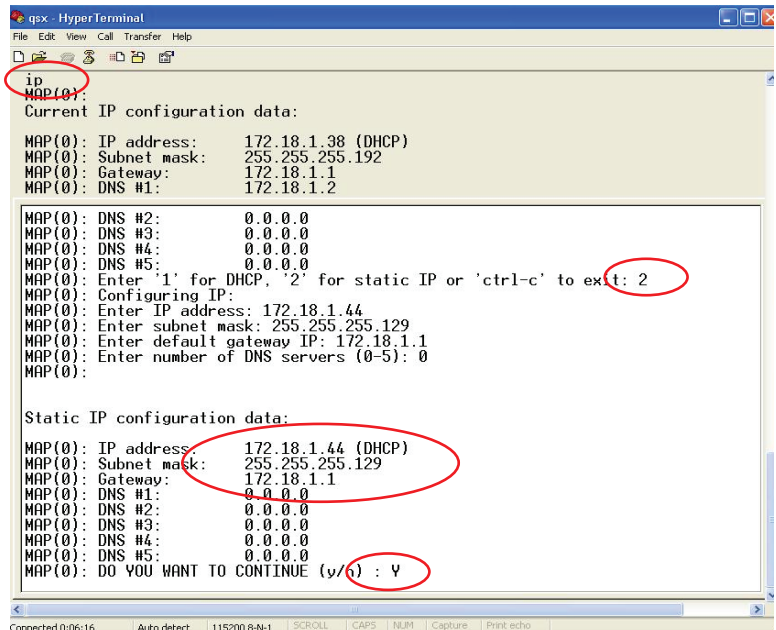

4. Configure Static IP Address

- a. Enter "2", IP Address, Subnet Mask, Gateway and DNS
- b. Enter "Y" and the system will reboot.

5. Restart QSX by unplugging and re-plugging the QSX power cord

4 Access QSX Web Admin Page (optional)

Open Web Browser and Type IP Address in Browser Window followed by "admin.htm" (e.g.-http://140.242.16.45/admin.htm)

