



IsatDock **PRO**



User Manual

Inmarsat IsatDock PRO

Installation and User Manual

Product name: IsatDock PRO

Manual revision: 01

Part Number: USRMAN006101

Release date: November 2010

BEAM Communications Pty Ltd
8 Anzed Court, Mulgrave,
Victoria, 3170, AUSTRALIA

Information furnished by BEAM Communications Pty Ltd (BEAM) is believed to be accurate and reliable. However, no responsibility is assumed by BEAM for its use, or for any infringement of patents or other rights of third parties, which may result from its use. No license is granted by implication or otherwise under any patent or patent rights of BEAM. BEAM reserves the right to change specifications at any time without notice.

Copyright © 2010 BEAM Communications Pty Ltd. All rights reserved

About Beam Communications

Beam Communications, a wholly owned subsidiary of World Reach Limited (WRR), listed on the Australian Stock Exchange, is a world leader in design, manufacture and distribution of specialised communications equipment for the Inmarsat Satellite Network.

Beam's commitment to be at the forefront has continued to increase its share of the global satellite communications market. Its premium distribution network spans the world.

Recognized as a leading provider of satellite communication solutions, **Beam** specializes in Voice, Data, Tracking and customized solutions. **Beam** develops innovative products and services to meet market demands and niche applications.

Beam's leading edge products are deployed in a wide range of vertical markets including Maritime, Transport, Government, Defence, Mining, Construction, Forestry, Emergency Services, Relief Aid, Telemetry and Rural Telephony.

Supported by a dedicated team of professionals, **Beam** has developed solid relationships with its peers and network of distributors worldwide.



BEAM Communications Pty Ltd

8 Anzed Court, Mulgrave,
Victoria, 3170, AUSTRALIA

Web:	www.beamcommunications.com
Information:	info@beamcommunications.com
Support:	support@beamcommunications.com

Tel:	+61 3 8588 4500
Fax:	+61 3 9560 9055

Conventions in this Manual

These notes will appear throughout this manual and should be taken into consideration.



Warning or Caution

This symbol and associated text indicate a warning note providing information to prevent damage to equipment or personal injury.



Note/Important/Tip Header

This symbol and associated text indicate a note providing general operating information.



Interference Header

All wireless phones may get interference, which could affect performance.



Record Header

Write details of your unit for easy reference when required. Ideal when troubleshooting.

Terminology

TERM	DESCRIPTION
IDMS	IsatDock Management System - MS Windows Install
SMS	Short Message Service
Mobile Originating	Describes a call initiated by the IsatDock
Mobile Terminating	Describes an incoming call being answered by the IsatDock
IsatPhone Pro	The Inmarsat IsatPhone Pro handset
®	The ® symbol, mark and logos are owned by the respective companies of which the symbol follows. Any use of such marks by Beam Communications is under license. Other trademarks and trade names are those of their respective owners.
RF	Radio Frequencies
SMA	Sub Miniature version A co-axial RF connection
RJ11	Connector type and reference for the POTS telephone port
RJ9	4P4C connector for the privacy handset
POTS	Plain Old Telephone Service
GPS	Global Positioning System
GSPS	Inmarsat's Global Satellite Phone Service
PABX	Private Analogue Branch Exchange

Package Contents

Check that your IsatDock PRO package contains all of the following items:

- ☐ 1 x IsatDock PRO Docking station
- ☐ 1 x 110-240V AC Plug Pack
- ☐ 1 x Privacy Handset
- ☐ 1 x 10-32V DC Power Cable
- ☐ 2 x Handset Locking Keys
- ☐ 1 x Wall Mounting plate
- ☐ User Manual & Quick Start Guide

IsatDock Management System (IDMS)

is available for download from:

[http://www.beamcommunications.com/
support/isatdock/IDMS](http://www.beamcommunications.com/support/isatdock/IDMS)

Optional Accessories

The following optional accessories are available for your IsatDock LITE

Active Antennas

- ISD710 Maritime Antenna (Active)
- ISD715 Transport Magnetic Antenna (Active)
- ISD720 Transport Bolt Antenna (Active)

Antenna Cable Kits for Active Antennas

- ISD932 6m cable kit (Active)
- ISD933 13m cable kit (Active)
- ISD934 18m cable kit (Active)
- ISD935 31m cable kit (Active)

Passive Antennas

- ISD700 Directional/Fixed Antenna (Passive)

Antenna Cable Kits for Passive Antennas

- ISD936 10m cable kit (Passive)
- ISD937 20m cable kit (Passive)

Additional Accessories

- ISD955 Privacy Handset
- ISD950 110-240v AC plug pack
- RST055 UPS Battery Pack

See your service provider for pricing and availability of these quality BEAM accessories.

Additional Information

For the latest in supporting software and documentation for IsatDock please contact **www.beamcommunications.com/support**

Other Resources Available Online

- Advanced Configuration – inbuilt to IDMS
- Quick Start Guide & Manual
- Antenna Installation Guide
- IsatPhone Pro firmware upgrade if required

CONTENTS

Inmarsat IsatDock PRO Part Number	2	Aircraft Vehicles Equipped with an Air Bag		Privacy Handset Use (Optional Accessory)	
About Beam Communications	3	IsatDock PRO Key Features	11	Mute Mode	
Conventions in this Manual	4	Tracking/Alert Monitoring		USB Driver Installation	
Terminology		LeoTRAK-Oline Global Tracking Portal		Tracking and Alert Operations	
Package Contents	5	Equipment Overview	13	IsatDock PRO Front Panel	
Optional Accessories		Installation Guidelines	14	IsatDock PRO Buttons/LED lights	
Additional Information		Routing Cables (for vehicle installations)		Assuring Quality of Inmarsat Service	
Alert/Tracking		Guidelines for Electrical Connections		Specification Summary	28
Other Resources Available Online		Installation Procedure	15	Electrical & Environmental Specifications - IsatDock PRO	
Safety Information	7	Installing the IsatDock PRO Cradle		(1) Physical Dimensions - PRO Dock	
Safety Inmarsat Transceiver IsatPhone Pro		IsatDock PRO Usage	21	(2) Physical Dimensions - Privacy Handset	
IsatDock FCC Information		Docking & undocking the IsatPhone Pro handset		Trouble Shooting	30
Electronic Devices		Tracking & Alert Configuration (optional)		Beam Warranty Conditions	31
Pacemakers		Operation of the IsatPhone Pro			
Other Medical Devices		Placing Voice Calls			
Vehicles					
Posted Facilities					

Safety Information



IMPORTANT!

Please read the following information carefully before installing and using the IsatDock PRO.

Failing to follow instructions may compromise the safety of the product and may result in personal injury and/or equipment damage. Please consult your supplier if you have any further questions.

The IsatDock PRO is a low power docking station for the IsatPhone Pro handset. When ON, it will charge the IsatPhone Pro handset whilst docked in the IsatDock PRO.

Refer to the appropriate section of this IsatDock PRO Installation & User Manual for additional safety information.

- *Store the system in a cool and dry area.*
- *Do not submerge the system in water.*
- *Do not place foreign metal objects or debris in the system. If debris enters into the system, please return to factory for service.*



WARNING

DO NOT open equipment. There are no user-serviceable parts inside.

If a DC power supply is to be used, its output must comply with the Safety Extra Low Voltage (SELV) requirements of IEC60950.

All connectors must only be connected to equipment ports which comply with the Safety Extra Low Voltage (SELV) requirements of IEC60950.

POTENTIALLY EXPLOSIVE ATMOSPHERES

- *Turn your phone OFF and DO NOT remove your battery or remove the IsatPhone Pro handset from the cradle when you are in any area with a potentially explosive atmosphere.*
- *Obey all signs and instructions.*
- *Sparks from your battery in such areas could cause an explosion or fire resulting in bodily injury or even death.*

- *Areas with a potentially explosive atmosphere are often but not always clearly marked. They include, but are not limited to:*
 - » *fuelling areas such as gasoline stations*
 - » *below deck on boats;*
 - » *fuel or chemical transfer or storage facilities;*
 - » *areas where fuel odors are present (for example, if a gas/propane leak occurs in a car or home);*
 - » *areas where the air contains chemicals or particles, such as grain, dust, or metal powders;*
 - » *any other area where you normally would be advised to turn off your vehicle engine.*

Safety Inmarsat Transceiver IsatPhone Pro

Your handset is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals. (NOTE: Refer to Inmarsat IsatPhone Pro Manual for additional Information)

- The Inmarsat IsatPhone Pro handset has an in-built transceiver which is designed to be used with an external antenna. This antenna transmits RF energy. The Inmarsat antenna (fitted via an extension coaxial cable to the cradle) must be located more than > 0.55 meters from the human body (person) when in operation.
 - International agencies have set standards and recommendations for the protection of public exposure to RF electromagnetic energy. These standards are based on extensive scientific review by scientists, engineers, and physicians from universities, government health agencies, and industry groups. They review the available body of research to develop ANSI standard. These ANSI standards are reviewed regularly for research development.
- » International Commission on Non-Ionizing Radiation Protection (ICNIRP) 1996
 - » Verband Deutscher Elektrotechniker (VDE) DIN-0848
 - » United States Federal Commission, Radio Frequency Exposure Guidelines (1996)
 - » National Radiological Protection Board of the United Kingdom, GS 11, 1988
 - » American National Standards Institute (ANSI) IEEE. C95. 1-1992
- Do not operate your satellite telephone when a person is within 0.55 meters of the antenna. A person or object within 0.55 meters of the antenna could impair call quality and may cause the phone to operate at a higher power level than necessary and expose that person to RF energy in excess of that established by the FCC RF Exposure Guidelines.
- As a precaution, please maintain the maximum body distance possible from the antenna during call transmission.



WARNING

ROAD SAFETY COMES FIRST!

Do not use a hand-held cellular terminal, satellite phone or mobile when driving a vehicle, unless it is securely mounted in a holder for speaker phone operation. Before making a call with a handheld terminal, satellite phone or mobile, park the vehicle stationary. Please obey local road laws for hands-free speakerphone operation. Speakerphones (hands-free) must be installed by qualified personnel. Faulty installation or operation can constitute a safety hazard.



IMPORTANT

Cellular & Satellite terminals or mobiles operate using radio signals and communication networks. Because of this, the connection cannot be guaranteed at all times or under all conditions. Therefore, you should never rely solely upon any wireless device for essential communications, for example emergency calls.

IsatDock FCC Information

This equipment has been tested and found to comply with the limits for a Class B digital devices, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device has been designed to operate with antennas ISD710 AT1595-82, ISD715/ISD720 AT1595-83 and having a maximum gain of 6dBi dB. Antennas having a gain greater than 6dBi dB are strictly prohibited for use with this device.

To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (EIRP) is not more than that required for successful communication



WARNING

Changes or modifications not expressly approved by Beam Communications could void the user's authority to operate the equipment.

Electronic Devices

Most modern electronic equipment is shielded from RF signals. However, certain equipment may not be shielded against the RF signals from your wireless phone.

Pacemakers

The Health Industry Manufacturers Association recommends that a minimum separation of six inches (6") be maintained between a wireless phone's antenna and a pacemaker to avoid potential interference with the pacemaker.

These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

Persons with pacemakers:

- *Should ALWAYS keep the phone more than six inches from their pacemaker when phone is turned ON.*
- *Should turn the phone OFF immediately if you have any reason to suspect interference is taking place.*

Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Turn your phone OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle. Performance of electronically controlled brake and/or guidance systems can, under certain unique conditions, be subject to interference by mobile radio operation. Although the transceiver meets all requirements regarding RF emissions, you should mount the transceiver as far as possible from the guidance system and/or braking modulator box (usually located in the trunk) to minimize any interference.

Posted Facilities

Turn your phone OFF in any facility where posted notices require such as hospitals and on-board aircraft.

Aircraft

Airline regulations prohibit using your phone while in the air. Consult the local Aviation Authority for guidelines on use of the equipment on board an aircraft.

Vehicles Equipped with an Air Bag

An air bag inflates with great force. Do NOT place objects, including both installed and portable wireless equipment, in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

IsatDock PRO Key Features

IsatDock PRO is an intelligent docking station specifically designed for the Inmarsat IsatPhone Pro satellite handset.

IsatDock PRO allows the IsatPhone Pro handset to be used in a wide variety of applications. It enables you to use an intelligent RJ11/POTS connection with a standard corded, cordless or DECT handset. Alternatively, it can also be interfaced with a PBX system.

IsatDock PRO has an in-built speakerphone for convenient handsfree operation.

Equipped with internal GPS, the IsatDock PRO provides an intelligent tracking and alert reporting system that can be easily configured to support periodic polling or emergency alert reporting.

IsatDock Design

- All in one design
- High quality ABS Plastic
- Single action insertion mechanism
- Key lockable & securable to wall/desk
- Wall or desk mounting options
- Accessible control buttons
- Slimline privacy handset
- Integrated antenna connections
- In-built speaker/microphone
- Cable routing LHS/TOP/BOTTOM

In-Built Speakerphone

- In-built speaker and microphone

Power

- 10-32V DC Input
- 110-240V AC plug pack, included

Buttons on Dock

- Ringer volume up/down
- In-call volume up/down
- Last number redial
- In-call mute
- Speaker/hands free button

Intelligent POTS/RJ11 Interface

- Supports 10 - 32V DC power input
- Flexible installation via wall or desk mounting option
- Supplied with 110 - 240V AC/DC Plug pack



Other Key Features

- Active privacy handset
- Status LED with adjustable brightness
- USB data (when available)



Equipment Overview

1. IsatDock PRO unit
2. Mounting Cup (spring or springless cup options)
3. Privacy Handset
4. Speaker (under handset)
5. Speakerphone Microphone
6. Speakerphone Button
7. Key lock
8. IsatPhone Eject Button
9. IsatPhone Pro (not included)
10. Function Buttons
11. STATUS Indication Light
12. Back Panel Connectors
 - a. USB Data Interface
 - b. Alert loop connection - not in use
 - c. RJ11/POTS interface
 - d. DC power and accessory input
 - e. RJ9 Privacy handset

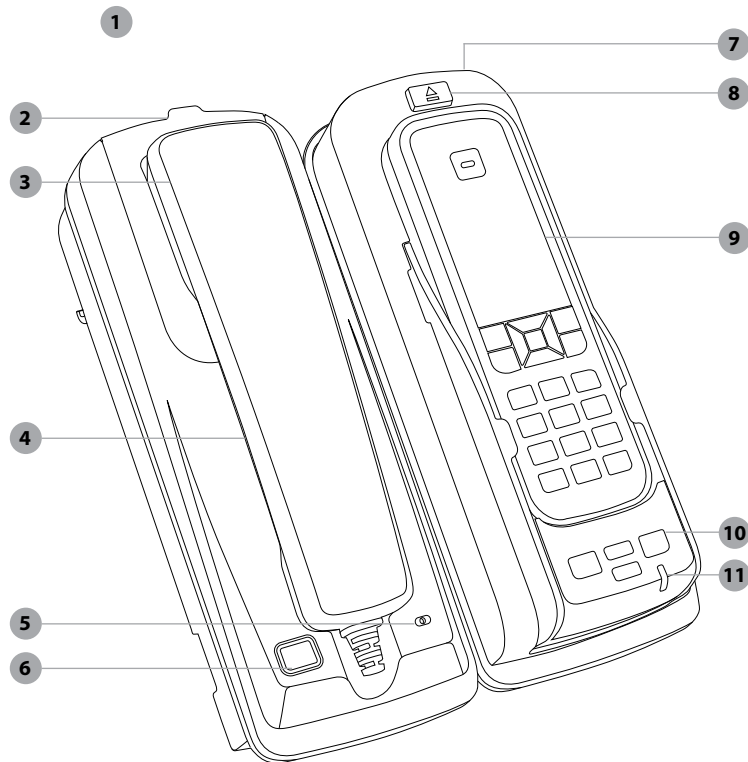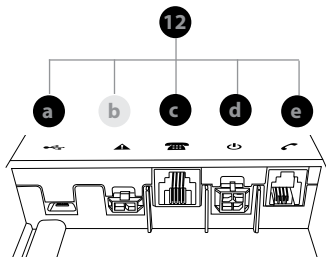

Installation Guidelines

This guide outlines the process for installing the IsatDock PRO in conjunction with an Inmarsat IsatPhone Pro handset.

This kit must not be used with any other device other than the Inmarsat IsatPhone Pro handset.

- Only qualified personnel should install communication equipment.
- Ensure that the units are protected from dirt and moisture.
- Select an area to mount components where there is no interference with space.
- Ensure that each mounting surface is strong enough to support the component being mounted to prevent the component from loosening over time.
- Mount all components securely to prevent shifting that could cause injury or could interfere with safe vehicle operation. Always use the supplied mounting hardware.
- Leave space around the units to allow cooling and ensure there are adequate clearance for cables.
- Ensure the units can be easily removed.

Routing Cables

- Route cables so they are protected from pinching, sharp edges, and crushing.
- Use grommets wherever a cable must pass through a hole in a metal panel
- Keep all in-line connectors accessible.
- For an extra clean installation, a hole may be driven through the surface directly behind the docking station.

Guidelines for Electrical Connections

The system is designed to operate in negative ground 10 to 32 Volt DC electrical systems only.

If using the DC cable lead:

- The best power connection point for the positive primary power lead is the positive terminal of the vehicle battery. Often, direct connection to the battery is inconvenient, and you may find it easier to connect the positive leads to the starter solenoid. Always select a point as close as possible to the battery.
- Connect the negative primary power leads to a good ground point on the vehicle chassis or at the battery. If you must attach the negative primary power lead directly to the negative pole of the battery, you may optionally insert a 10-amp fuse (not included) into the ground

(0V) line. Failure to insert a fuse can cause equipment to overheat if a wiring fault exists.

- Many parts of a vehicle can produce electrical noise that interferes with the electrical radio system operation. The ignition system is the most common source of electrical noise interference. Before you begin installation, ensure that the ignition wiring and connections to the vehicle battery are in good working condition.
- Verify that low resistance connections are present between the battery negative terminal, the vehicle chassis, and the engine block. All wire connections should be clean and tight.
- For vehicle installation, install provided fuses into the +BATT and ignition sense (accessory) wires.



WARNING

Do not connect the IsatDock interface power cable to power the unit until the full installation is completed.

Installation Procedure

Installing the IsatDock PRO Cradle

Install the components in the following order.
More detailed instructions can be found in the sections following.

1. Install the external Inmarsat antenna
2. A) Wall Mounting Orientation
B) Desk Mounting Orientation
3. Connect the privacy handset & cup
4. Access to rear connector bay
5. Connect POTS/RJ11 Interface
6. USB Port Connection
7. Connect power cable
8. Cable routing





1) Inmarsat Antenna Connection

The two external antenna connectors can be found in the cavity at the top of the IsatDock PRO cradle. There are two RF connections required, the Satellite TNC – Female Connector and GPS SMA-Female connector.

1. Refer to the antennas installation guide for antenna mounting and location requirements.
2. Connect the antenna cable labelled “GPS” to the antenna connector labelled “GPS” via the SMA connector
3. Connect the antenna cable labelled “Inmarsat” to the antenna connector labelled “ISAT” via the SMA connector.
4. Connect the GPS-SMA (F) cable end to the IsatDock’s SMA connector
5. Connect the GPS - TNC (F) antenna cable end to the IsatDock’s satellite connector

Antenna Connection Diagram

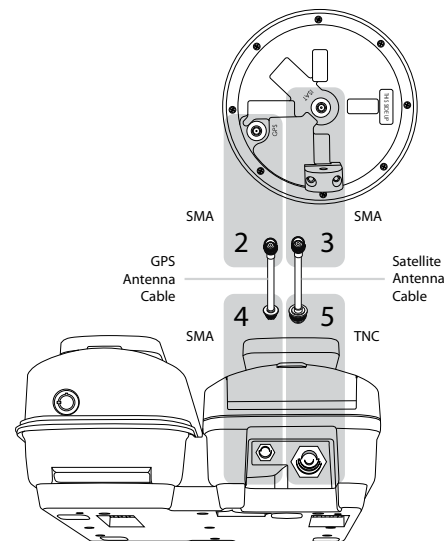

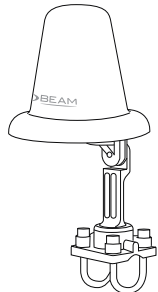

ISD700
Directional/Fixed Antenna
(Passive) with Bracket



Transport Antenna
(Active)



ISD715
Magnetic
Mounting



ISD720
Bolt
Mounting



NOTE

Refer to the section "Antenna Installation" for more information on antenna placement and installation.

Only Beam approved antenna cables should be used with all docking stations and antennas.



WARNING

DO NOT pull with force on the cables from the rear of the IsatDock PRO. Please install strain relief clamping for the antenna cables where required. Correct installation of the antenna system is a vital part of the IsatDock PRO system, to ensure reliable functionality, and drop-free calls.

WARNING


Changes or modifications not expressly approved by Beam Communications could void the user's authority to operate the equipment.

WARNING


To satisfy FCC RF exposure requirements for mobile transmitting devices, a separation distance of 55cm or more should be maintained between the antenna of this device and persons during device operation. To ensure compliance, operations at closer than this distance is not recommended.

2a) Wall Mounting Orientation


There are nine screw holes available for mounting the bracket to a wall. It is recommended that a minimum of 2 screws are used to ensure the docking station is mounted securely.

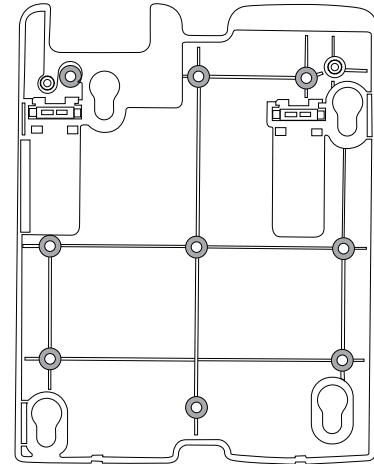

There are four keyhole shaped slots in the mounting bracket that mate with feet on the rear of the docking station. To attach the bracket, the larger end of the keyhole will pass over the feet. The bracket is then slid up to lock the feet into the narrow section of the keyhole.

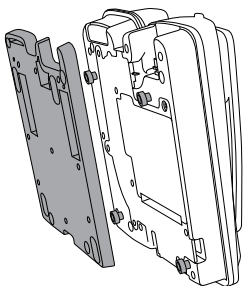

a Fit the docks feet in the large holes of the bracket

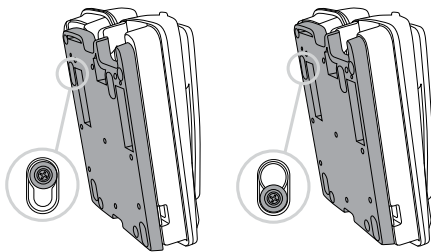

b Slide the dock down


c Final lock position

Once the dock has been locked onto the mounting bracket on the wall, two security bolts are then slid into place locking the dock to the wall.

Security Bolts

Two security bolts ensure the PRO docking unit is firmly fixed to the wall and only removed by an 'authorized' (the security key holder) personnel. Once the IsatDock PRO is fitted to the wall, these two security bolts prevent the docking station from sliding back up freeing the dock. The security bolts are 4mm in diameter and have a slot for a flat blade screwdriver.

The bolt under the privacy handset mounting cup must be fitted prior to the cup being screwed into place. The second bolt is placed under the IsatPhone Pro in the recess for the handset antenna cover. Both bolts are then covered with plugs. As the second bolt is under the IsatPhone Pro, access to the bolt is denied when the handset is locked into the cradle.

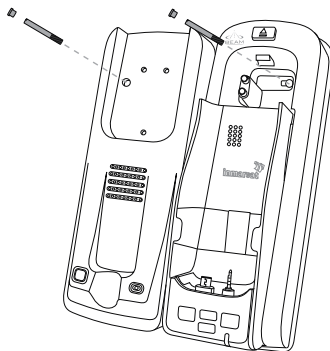


2b) Desk Mounting Orientation

The IsatDock PRO supports a desk mount configuration. Depending on the user's requirements the docking station supports both a flat and raised orientation on the desk.

To configure the IsatDock for a desk installation:

1. Fit the mounting bracket to the back of the IsatDock as shown in section (2a) wall mounting directions.
2. Flip the feet out if required and locate the IsatDock on the desk.

When desk mounting, the security bolts are not required to be fitted.

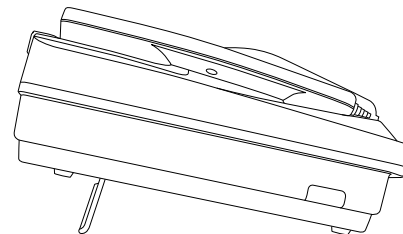


3) Privacy Handset & Mounting Cup

The Privacy Handset is conveniently mounted on to the IsatDock PRO enclosure, providing a local handset function.

The Privacy Handset connects to the docking station via a RJ9 connector. The privacy handset is connected beneath the rear panel of the IsatDock. Once connected, the cable is run back through the foam and placed in the 'S' channel through the base of the phone.


RJ9 connection

See section 4 on page 19

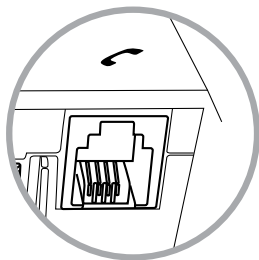

Changing Cups


1. Unhook the privacy handset from cup.
2. Remove cup cover to expose screws.
3. Unscrew 3 screws with a phillips screwdriver.
4. Detach the cup and replace with the spring or springless cup.

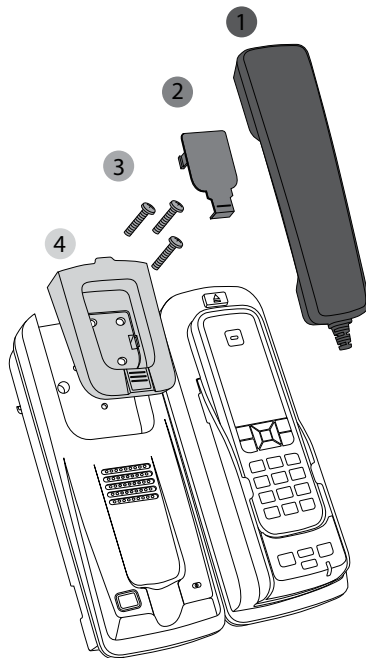

There are two options for the privacy handset mounting cup depending upon the environment or condition where the docking unit is mounted. (1) springless cup for stationary use vertical or horizontal position. (2) spring cup for rough conditions.


(1) Springless Cup for Normal light-use Desk mounted cradle position.

The 'springless' cup is fitted to the docking station with the mounting clip in a 'flush' position.

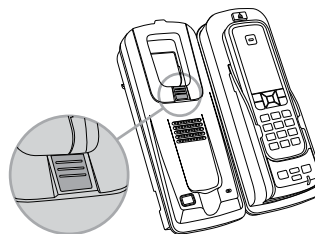

Wall mounted cradle position.

The mounting clip can be slid out and reversed, producing a protruding point that the Privacy handset rests upon. For a wall mounted docking station this retains the privacy handset and the springless cup has enough height to allow the handset to rise up off the clip and out of the mounting cup

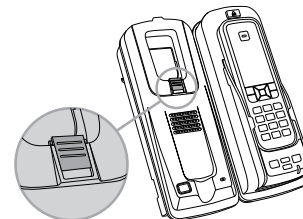



(2) Spring Cup - Heavy duty use cup

In harsh environments, the Privacy handset is actively retained in the mounting cup. This is achieved by using the 'spring' mounting cup. To remove the handset from the cup, the phone is lifted up against the pressure of the spring until it clears the lower mounting pip and can be removed from the docking station.



4) Access to Rear Connector Bay

For the IsatDock PRO, the external cable interfaces are at the rear of the docking station. The cover panel creates the IP rating for the electrical interface and retains the cables in their respective channels. The cover panel is fixed in place by 7 screws.

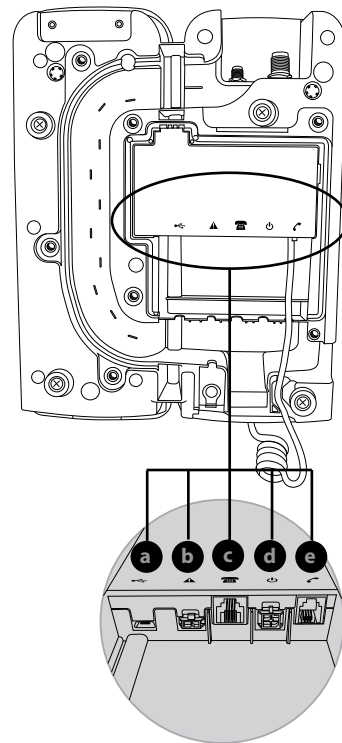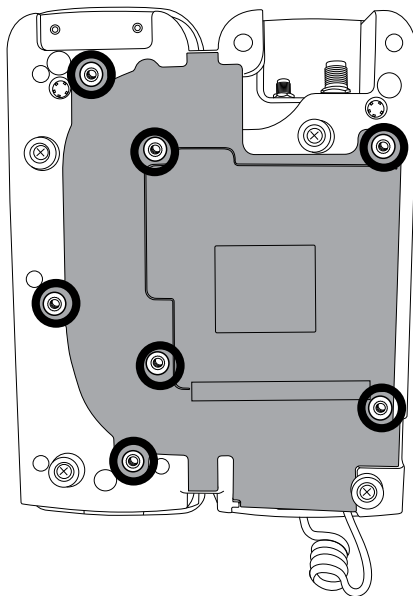

- a. USB Data Interface
- b. Alert loop connection - NOT IN USE
- c. RJ11/POTS interface
- d. DC power and accessory input
- e. RJ9 Privacy handset

5) Connect RJ11/POTS Interface


Any standard analogue POTS Telephone (POTS = **P**lain **O**ld **T**elephone **S**ervice) is supported by the IsatDock PRO. It supplies power to the analogue phone as well as ring, dial and busy tones.

Route the telephone cabling (up to 600m) from the analogue phone.

Mount the analogue phone if required, and plug the RJ11 cable into the IsatDock PRO RJ11 port.

RJ11 port

See section 4 on page 19

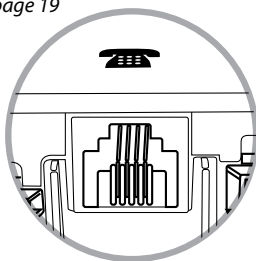


6) USB Port Connection

IsatDock PRO has a micro USB Data Port for programming interface to enable upgrading of the Docking station firmware.

USB Data Port

See section 4 on page 19

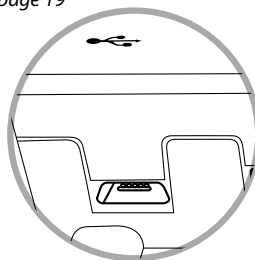

NOTE

Data services scheduled to be available Q1 2011.


7) Connecting Power to the Dock

The Dock can be powered from the supplied AC Plug pack, or connect to an external 10-32V DC power supply.

ISD950 AC Plug Pack Installation

For installation using ISD950 110-240 AC plug pack, connect the 4-way Microfit connector from the plug pack to the 4-way power connector on the rear of the IsatDock PRO. In this configuration the ignition/accessory status is always ON.

DC Power Source Installation

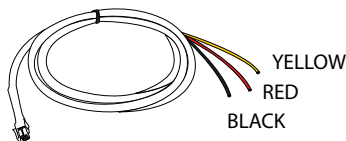


The DC power cable has three wires, RED, BLACK and YELLOW. The RED and BLACK wires are used for the power connection while the YELLOW wire can be connected to a vessels

accessories, ignition or other similar circuits to control the ON/OFF status of the IsatDock PRO in synchronization with a vessels operation. By default, the IsatDock PRO will stay on for 20 minutes after this input (YELLOW wire) is switched off. If a call is in progress while this occurs, the IsatDock PRO will stay on for 20 minutes after the call is terminated. Please follow the steps below to connect the DC power cable to the vehicle battery power and the IsatDock PRO.

1. Route the wire end of the DC power cable to the connection point.
2. Connect the BLACK wire to the negative terminal of the battery (10A fuse recommended) or the vehicle chassis (if negatively grounded chassis).
3. Connect the RED wire to the positive terminal of the battery. It is recommended to add the 5A fuse between them. (supplied)

4. Connect the YELLOW wire to the vehicle accessory power. If the accessory power is unavailable, this may be connected to a vehicle ignition voltage. It is recommended to add a 1A fuse between them. The accessory wire enables the IsatDock PRO to turn on and off as the vehicle key is enabled or disabled. If this function is not required, the YELLOW wire **MUST** be connected to the RED wire.
5. Connect the 4-way Microfit connector on the DC power cable to the 4-way power connector on the rear cable loom of the IsatDock PRO.

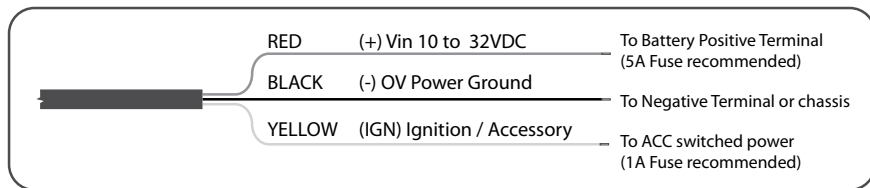


8) Cable Routing

The IsatDock provides three different cable routing options when installing the docking station.



Cables may exit via path 'A' that travels around to the top of the dock allowing for the interface cables to be run with the external antenna connections.

Path 'B' directs cables out the base of the dock while path 'C' results in cables exiting to the side.

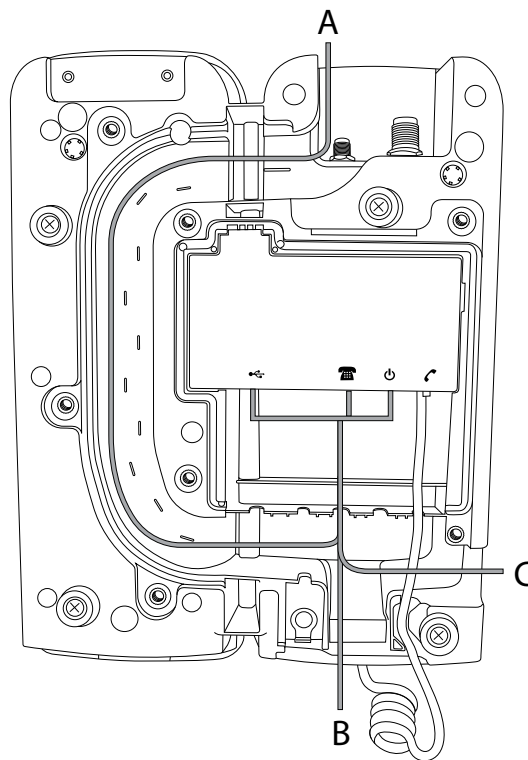

Optional through-wall

Right angled adapters are optionally fitted to the external antenna connectors to allow routing of cables through a wall. A "clean" installation free of any visible cabling can be achieved with the use of right angled connectors and by running the interface cables along path A.

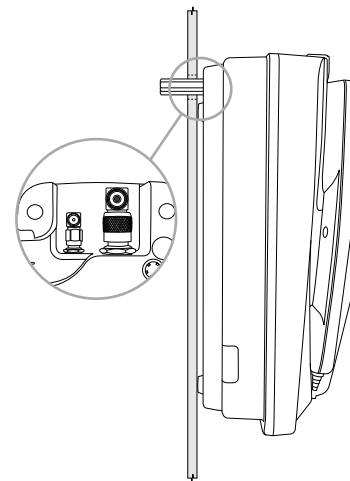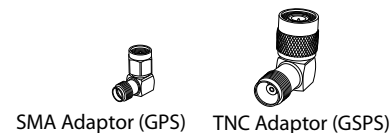


IsatDock PRO Usage


Docking & undocking the IsatPhone Pro handset

To place the IsatPhone Pro into the docking unit, both the 'covers' on the external antenna connectors and the USB/Audio connectors need to be opened.


1. The antenna 'cover' must be placed at 90 degrees to the antenna connector cavity and run parallel to the top edge of the phone.
2. The 'cover' in the base of the phone should be in the a 90 degree opened position.

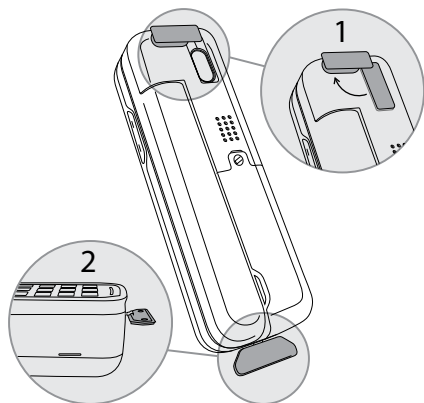

1. To dock the handset, align the IsatPhone Pro with the phone tray and slide the handset down until it seats flush to the bottom of the tray. Swing the phone down into the cradle by applying pressure to the top of the handset. An audible 'click' is heard when the phone is in the docked position.

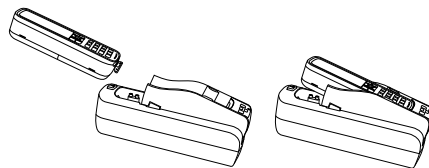

2. To remove the handset from the cradle, press the EJECT button at the top of the docking station. The dock will swing out and the handset can be removed.

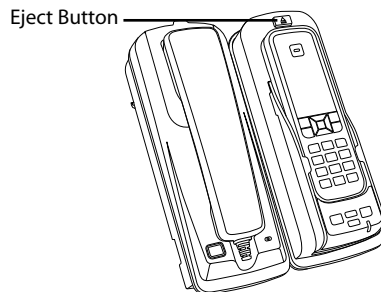

Operation of the IsatPhone Pro

Prepare the Inmarsat IsatPhone Pro

Ensure that the IsatPhone Pro Handset has the latest compatible firmware installed. For more information visit:

www.beamcommunications.com/support/isatdock

Starting Up

1. Retract the antenna on the IsatPhone Pro handset.
2. Place the IsatPhone Pro as per instructions "Docking & Undocking" on page 21.
3. Turn vehicle ignition on. The IsatPhone Pro will automatically power and the handset will then start to initialise followed by a 3 tone rising beep when a successful connection has been made between the docking station and the IsatPhone Pro.
4. Wait for the IsatPhone Pro handset to register on the Inmarsat network. The STATUS LED on the docking station will turn green when a successful registration has taken place.
5. You are now ready to make and receive calls.



NOTE:

If the IsatPhone Pro is removed from the dock during a call, the call will drop out during this transition



NOTE:

One common cause for connection failure is a flat IsatPhone Pro battery which prevents the IsatPhone Pro from turning ON. In these instances the docking station will attempt to charge the IsatPhone Pro handset while it is switched OFF, until enough charge is present for the IsatPhone Pro to turn ON. This charging period can take up to 20 minutes depending on how flat the battery.

Pro handset

The IsatDock PRO provides charging power to the IsatPhone Pro handset via its USB connector.

The IsatPhone Pro battery is a lithium-ion cell which has a safety temperature range whilst charging. This range is from 0 to 45 degrees Celsius (32 to 113 degrees Fahrenheit).

Due to the increased heating effects on the IsatPhone Pro handset whilst it is docked and being charged, it is ideal for the ambient temperature to be at least 18 degrees below the 45°C upper limit for the handset to charge the battery whilst docked. If the battery temperature exceeds this limit, then the IsatPhone Pro may cease charging until the temperature is reduced.

Placing Voice Calls

Speakerphone Phone Call Use

Mobile Originating

1. By default the IsatDock PRO will start all calls in speakerphone mode when dialing on the keypad without RJ11 or privacy handset off hook.
2. Dial using the full Inmarsat dialing sequence eg. 00 country code and telephone number on the IsatPhone Pro keypad whilst docked. Press the GREEN button to start the connection.
3. A message will display on the IsatPhone Pro handset to indicate the call is progressing.
4. Once the call is connected, the STATUS LED will flash to indicate a call is in progress.
5. Press the RED key on the IsatPhone Pro handset or press the speakerphone button to terminate the call.

Options:

- A. During a call, you may use the optional privacy handset by taking the privacy handset out of its cup. This automatically directs the call audio to the privacy handset.
- B. To return the call back to "speakerphone" mode, press the speakerphone button and return the privacy handset to its cup.

Mobile Terminating

1. Answer the incoming call by pressing the Speakerphone button or the GREEN key on the IsatPhone Pro handset.
2. Once the call is in progress, the same options are available as described in "Speakerphone Phone Call – Mobile Originating"
3. Press the RED key on the IsatPhone Pro handset or press the speakerphone button to terminate the call.

RJ11 POTS Phone Use

Mobile Originating

1. Lift the RJ11/POTS phone handset "OFFHOOK" and listen for the dial tone. The mute LED will flash yellow to indicate the RJ11/POTS is in use.
2. Dial (using the full country codes) on the RJ11 telephone keypad.
3. A message will display on the IsatPhone Pro handset to indicate the call is progressing.
4. Once the call is connected, the STATUS LED will flash to indicate a call is in progress.
5. Place the RJ11/POTS phone handset "ON HOOK" to terminate the call.

Mobile Terminating

1. The RJ11/POTS phone will sound its ringer.
2. Lift the RJ11/POTS phone handset "OFFHOOK" to answer the call.

Privacy Handset Use

Mobile Originating

1. Remove the privacy handset from its cup
2. Dial the phone number (using the full country code) on the IsatPhone Pro keypad whilst docked. Press the GREEN button to start the connection.
3. A message is displayed on the IsatPhone Pro to indicate a call is in progress.
4. Once the call is connected, the STATUS LED will flash to indicate a call is in progress.
5. Press the RED key on the IsatPhone Pro handset or return the privacy handset to its cup to terminate the call.

Options:

- A. During a call, you may switch to "speakerphone" mode by pressing the speakerphone button on the IsatDock. Return the privacy handset to its cup.
- B. To return the call back to the privacy handset, remove the privacy handset from its cup.

Mobile Terminating

1. Answer the incoming call by un-cupping the privacy handset from its cup.
2. Press the RED key on the IsatPhone Pro handset or return the privacy handset to its cup to terminate the call.

Mute Mode

Mute functionality

The mute function of the IsatDock PRO allows the user to mute the uplink microphone audio on the privacy handset and/or internal speakerphone microphone.

1. During a call, Press the Mute button on the face of the IsatDock PRO, a RED LED will illuminate the Mute button to confirm that the IsatDock PRO is muted.
2. To exit the mute mode, press the mute button once.

USB Driver Installation

The IsatDock PRO USB data port requires an interface driver to be installed on the user's computer prior to undertaking data communication. This driver supports the following operating systems:


Windows XP (SP3 or above) & Windows Vista

You can download the Windows Driver for the IsatDock from

<http://www.beamcommunications.com/support/isatdock>

IsatPhone Key lock

A barrel type lock is situated in the top of the dock. When locked, the eject button cannot be depressed and the latch holding the top of the handset cannot be disengaged from the IsatPhone Pro. Once locked, the access to the security bolt beneath the handset is also denied thus ensuring the PRO/PRO docking station cannot be removed from the mounting bracket.

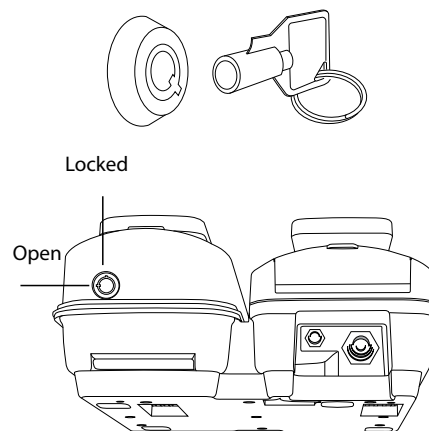


IsatDock PRO Front Panel

Location	Button Mode	Action	LED/Sound
	Redial (1 second)	Out of Call: Redial previous number dialed.	N/A
 OR 	Up/Down	In a Call: Increase/decrease volume on the internal hardware or privacy handset.	Audio will sound louder/quieter in privacy handset with each press.
		Out of Call: Increase/decrease volume of incoming ring tone on the internal hardware speaker.	A beep will sound indicating the increased/decreased ring tone volume .
	Mute (1 second)	In a Call: Mute the microphone (uplink) on the privacy handset	LED turns RED - Muted LED turns OFF - Not muted LED flashing Yellow - RJ11/POTS in use
 + 	Brightness dual button simultaneous press (1 second)	Out of Call: Enter LED brightness change mode. Press UP and DOWN arrows to vary intensity. Mode will automatically exit after 5 seconds after the last button press.	All LED's will change to WHITE and a single beep will sound when entering brightness change mode. A short double beep will sound when exiting change mode.
	Speakerphone press ON/OFF	In a Call: Terminate call if speakerphone mode is active Activate speakerphone mode if Privacy Handset mode is active.	LED turns GREEN - Speakerphone mode active LED turns OFF - Speakerphone mode not active
		Out of Call: Answer inbound call in speakerphone mode	

IsatDock PRO Buttons/LED lights

REDIAL	GREEN	RED	YELLOW
N/A	N/A	N/A	N/A
MUTE	GREEN	RED	YELLOW
ON	N/A	Outgoing audio is muted	N/A
FLASHING	N/A	N/A	POTS/RJ11 in use
LED STATUS	GREEN	RED	YELLOW
ON	Handset registered and able to make a call	Handset not registered/ no signal and cannot make or receive calls	N/A
FLASHING	Call in Progress	N/A	N/A
ALTERNATING	Error detected in communicating with IsatPhone Pro handset	N/A	N/A
SPEAKER	GREEN	RED	YELLOW
ON	Speakerphone Mode	N/A	N/A

1. Mute
2. Redial
3. Up & Down
4. STATUS LED
5. Speaker Phone Button

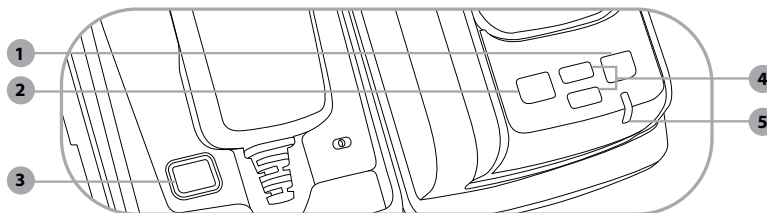

Assuring Quality of Inmarsat Service


Inmarsat is committed to providing subscribers around the world with consistent, reliable, quality voice and data access all day, every day. The Inmarsat satellite system is monitored for call performance from numerous locations 24 hours a day, 7 days a week in order to achieve this. There are conditions that can compromise the quality of the service you may receive. These include:

- Obstructions
- Cabling
- RF Interference

Obstructions

Nearby tall buildings or similar structures, heavily leafed trees and mountains can all degrade performance as they block the signal between the antenna and the satellites.

Inmarsat performance is immune from natural environments such as clouds, fog, rain, snow, wind and smoke.

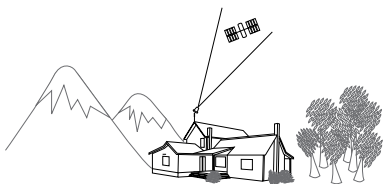

Cabling

Using an externally mounted antenna provides an ideal solution for many applications. It is very important that both the antenna cabling and antenna are Beam approved products. Always ensure all RF connectors are screwed together firmly and ensure there are no sharp bends in the cabling between the docking station and the antenna.

RF Interference

All wireless devices, including satellite telephones, are susceptible to RF (radio frequency) interference from other electronic devices. This problem is more evident when numerous antennas and broadcasting devices are located within close proximity to each other.

Symptoms of RF Interference

Symptoms of RF interference often resemble those that arise when an antenna is being operated with an obstructed view of the sky. Some of these symptoms include; erratic or no signal strength indication dropped calls or warbled or otherwise distorted voice. These symptoms may be intermittent or persistent, depending largely on the interference source, its distance, strength and frequency relative to the Inmarsat unit.

Mitigation of RF Interference

Inmarsat Service degradation due to RF interference can be significantly improved by:

- Increasing the distance and moving the Inmarsat antenna off axis from the source of the interference, and
- Using an external band pass filter and an external antenna.



WARNING

Failure to use Beam approved antenna cables will result in degraded performance and may damage the IsatPhone Pro.

Specification Summary

Electrical & Environmental Specifications - IsatDock PRO

Average Power Consumption Current @ 12v	Average	Watts
Power w/o IsatPhone Pro	130mA	1.6W
Standby + Charging	360mA	4.3W
Transmit + Charging	875mA	10.5W
Sleep Mode	5mA	60mW
Peak Current	3.5A	42W
Physical Specifications		
Dimensions	270 x 189 x 101 (mm)	10.6 x 7.4 x 4 (inches)
Weight - dock	1445g	3.19lbs
Total Kit Weight	2445g	5.39lbs
Environment Specifications		
Operating Range	-30°C to +70°C	-22°F to +158°F
Storage	-35°C to +85°C	-31°F to +185°F
Battery Charging Temp*	0°C to +45°C	+32°F to 113°F
Humidity	<= 75% RH	
Connectors / Interfaces		
POTS/RJ11	RJ11/2-wire, 5REN @ 600m, Adjustable dial, ring, busy tone configured frequency and adaptive impedance.	
Inmarsat Antenna	TNC-Female	

GPS Antenna	SMA-Female
10-32 V DC	4-way microFit (AC/DC adator, or DC lead)
Privacy Handset Port	RJ9 connector
Configuration/Data*	USB Micro
Speakerphone	In-built speaker/microphone
Certifications	
Inmarsat	
FCC	
CE Compliance	
Electrical Safety	
RoHS	
Industry Canada	
C-Tick	
EMC compliance	
Accessories	
ISD700	IsatDock Directional/Fixed Antenna (Passive)
ISD710	IsatDock Transport Bolt Antenna (Active)
ISD715	IsatDock Transport Magnetic Antenna (Active)
ISD932	IsatDock 6m SMA/TNC cable kit (Active)
ISD933	IsatDock 13m SMA/TNC cable kit (Active)
ISD934	IsatDock 18m SMA/TNC cable kit (Active)
ISD935	IsatDock 31m SMA/TNC cable kit (Active)
ISD936	IsatDock 10m SMA/TNC cable kit (Passive)
ISD937	IsatDock 20m SMA/TNC cable kit (Passive)

RST055	UPS Battery Pack
Kit Contents	
IsatDock PRO	
110-240V AC Plug Pack	
Privacy Handset	
10-32V DC Power Cable	
Wall Mounting Plate	
Handset lock key	
User Manual & Quick Start Guide	




NOTE:


Specifications are subject to change without notice.

** It is ideal for the ambient temperature to be approximately 18 degrees below the 45°C upper limit for the handset to charge the battery whilst docked.*


(1) Physical Dimensions - PRO Dock

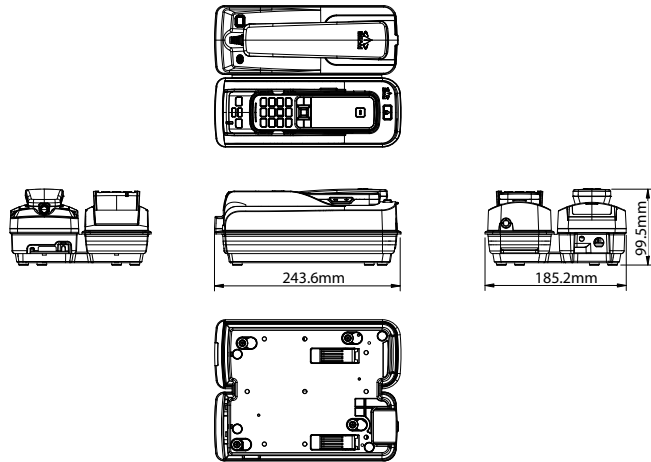

(2) Physical Dimensions - Privacy Handset

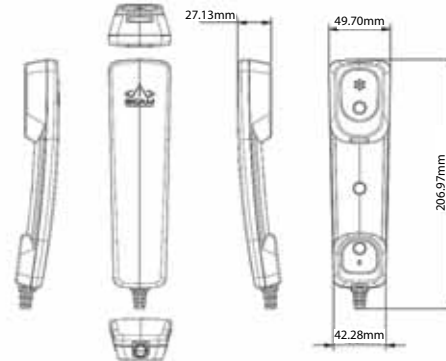

(3) Physical Dimensions - Wall Bracket

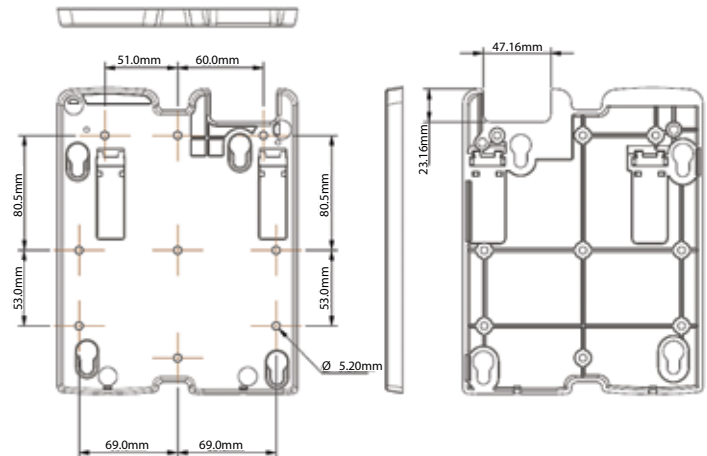

Trouble Shooting

This chapter provides information to help you troubleshoot problems you may encounter while running the IsatDock.

Q1	How do I know if my IsatPhone Pro is registered on the Inmarsat network?
A	The STATUS LED of the docking station will change to GREEN when the handset is registered and able to make calls on the network. The IsatPhone Pro will also indicate "Inmarsat" in the top left corner of the screen display.
Q2	The handset and docking station turn's OFF every 20minutes?
A	Ensure the Ignition/Accessories wire is connected to power. If this is not connected, or connected to ground the docking station will go into sleep mode after 20 minutes by default.
Q3	No power on IsatDock.
A	Check power is connected to the interface unit. Ensure the Connector cable to the IsatDock is firmly fitted. Check all the connection cables to and from the IsatDock.

Q4	The signal bars are low or fluctuating and call quality is poor.
A	Ensure all antenna connectors are tight. The antenna is operating in a location that it can see the satellite and there are no obstructions. Beam certified antenna cabling is being used and there are no sharp bends or cuts in the cable. If using a fixed passive antenna, ensure it is orientated correctly and pointing at the satellite.
Q5	I am looking for the latest manuals and support information on the docking station ?
A	Visit: http://www.beamcommunications.com/isatdock
Q6	Dropped calls
A	Due to a satellite network when you are in motion the satellite signal may become obstructed (such as buildings, bridges, tunnels, larger vehicles). Check the antenna connection. Ensure the antenna cable has not been damaged. Ensure that only approved antenna cable has been used. Refer to Antenna Install Guide on Beam website support.

Q7	Party B cannot hear your voice.
A	Privacy Handset must be docked in its cup when not in use. Check that MUTE is not ON (indicated by turning RED) Check the signal strength on the handset. Ensure the Headset connector at the base of the IsatPhone is not obstructed and there is no dust or foreign objects in the connector socket.
Q8	The docking station appears to be turning ON/OFF and the handset is not registering.
A	Ensure the power supply can provide at least 3.5A at 12volts. If power is being supplied from a battery, ensure the connections are tight and the contacts are clean.

Beam Warranty Conditions

BEAM Communications gives this express warranty (along with extended warranty endorsements, where applicable) in lieu of all other warranties, express or implied, including (without limitation), warranties of merchantability and fitness for a particular purpose. This constitutes our sole warranty and obligation with regard to our products as well as the Customer's sole remedy.

BEAM Communications expressly disclaims all liability and responsibility for any special, indirect or consequential damages or any further loss of any kind whatsoever resulting from the use of our product(s). The Customer's sole and exclusive remedy and the limit of BEAM liability for any loss whatsoever, shall not exceed the purchase price paid by the Customer for the product to which a claim is made.

All products manufactured by BEAM Communications are warranted to be free from defects in material and workmanship in accordance with and subject to the following terms and conditions:

1. This warranty is limited to the original Customer only. It cannot be transferred or assigned to third parties unless the intent to transfer to a third party is expressly indicated in a purchase order and/or warranty-processing arrangements have been agreed upon in writing by BEAM.
2. BEAM Communications does not warrant any installation, maintenance or service of the Products not performed by BEAM, nor does it warrant the use of Products with unapproved ancillary products.
3. BEAM Communications will correct any defects in material or workmanship of products manufactured by BEAM which appear within (12) months and (24) months replacement warranty for IsatDock cradles ONLY, from the date of shipment by BEAM Communications to the Customer. BEAM Communications will repair or replace, at our option, any defective product, provided that our analysis and/or inspection discloses that such defects developed under normal and proper use.
4. This warranty does not extend to goods subjected to liquid or particulate ingress, extreme humidity, misuse, neglect, accident or improper installation, or to maintenance or repair of products that have been altered or repaired by anyone except BEAM Communications unless otherwise stated in writing.
5. The warranty is a return-to-base warranty and freight is paid by the sender.
6. A charge of USD \$150 including return freight will be made for testing returned product which is not defective or is found to be defective as the result of improper use, maintenance or neglect.
7. BEAM Communications will not accept responsibility for any invoiced goods or services that are not covered by a BEAM Communications written purchase order. Under no circumstances does BEAM Communications agree to pay for labour or other related expenses associated with the troubleshooting and/or repair of our product without prior specific written authorization.
8. Information in our descriptive literature is based on product specifications that are current at the time of publication. Product specifications, designs and descriptive literature are subject to change as improvements are introduced. Although we announce changes as they occur, we cannot guarantee notification to every Customer. BEAM Communications warrants delivered product to conform to the most current specifications, designs and descriptive literature.
9. This warranty policy may be expanded or limited, for particular categories of products or Customers, by information sheets published as deemed appropriate by BEAM Communications. The warranty for third party Products is that of the third party and not BEAM warranty.

BEAM Communications
8 Anzed Court, Mulgrave
Victoria, 3170, AUSTRALIA

Tel: +61 3 8588 4500 Fax: +61 3 9560 9055

Web: www.beamcommunications.com

Info: info@beamcommunications.com

Support: support@beamcommunications.com

