

IBR600

PRODUCT MANUAL

CradlePoint COR Integrated Broadband Router
Hardened for Machine to Machine

with VPN Support



for additional information, visit:

knowledgebase.cradlepoint.com

Preface

CradlePoint reserves the right to revise this publication and to make changes in the content thereof without obligation to notify any person or organization of any revisions or changes.

Manual Revisions

Revision	Date	Description	Author
1.0	Sept. 13, 2011	Initial release for Firmware version 3.3.0	Jeremy Cramer
1.1	May 4, 2012	Updated for Firmware version 3.5.1	Jeremy Cramer
1.2	June 6, 2012	Updated for Firmware version 3.6.1	Jeremy Cramer

Trademarks

CradlePoint and the CradlePoint logo are registered trademarks of CradlePoint, Inc. in the United States and other countries. All other company or product names mentioned herein are trademarks or registered trademarks of their respective companies.

Copyright © 2012 by CradlePoint, Inc.

All rights reserved. This publication may not be reproduced, in whole or in part, without prior expressed written consent by CradlePoint, Inc.



Table of Contents

1 INTRODUCTION	3	5.5 HOTSPOT CLIENTS.....	40
1.1 PACKAGE CONTENTS	3	5.6 INTERNET CONNECTIONS.....	41
1.2 SYSTEM REQUIREMENTS.....	3	5.7 STATISTICS.....	47
1.3 IBR600 OVERVIEW	3	5.8 SYSTEM LOGS.....	50
2 HARDWARE OVERVIEW	6	5.9 VPN TUNNELS	51
2.1 PORTS, LEDs, AND SWITCHES	7	5.10 WIPIPE QoS	52
2.2 MOUNTING BRACKET	11	6 NETWORK SETTINGS	53
3 QUICK START	14	6.1 CONTENT FILTERING	54
3.1 BASIC SETUP	14	6.2 DHCP SERVER	57
3.2 CONNECT TO A COMPUTER OR OTHER DEVICE	15	6.3 DNS	58
3.3 COMMON PROBLEMS	18	6.4 FIREWALL.....	61
4 WEB INTERFACE -- ESSENTIALS.....	19	6.1 MAC FILTER / LOGGING	67
4.1 ADMINISTRATOR LOGIN	20	6.2 ROUTING	69
4.2 GETTING STARTED – FIRST TIME SETUP.....	22	6.3 WiFi / LOCAL NETWORKS	70
4.3 QUICK LINKS.....	28	6.4 WIPIPE QoS	88
4.4 CONFIGURATION PAGES.....	29	7 INTERNET.....	94
4.5 IP PASSTHROUGH SETUP.....	31	7.1 CONNECTION MANAGER	95
5 STATUS.....	32	7.2 DATA USAGE	111
5.1 CLIENT LIST.....	33	7.3 GRE TUNNELS	116
5.2 DASHBOARD	35	7.4 VPN TUNNELS	121
5.3 GPS.....	38	7.5 WiFi AS WAN / BRIDGE.....	132
5.4 GRE TUNNELS	39	7.6 WAN AFFINITY	137
		8 SYSTEM SETTINGS	140
		8.1 ADMINISTRATION	141

8.2	DEVICE ALERTS.....	151
8.3	GPIO CONNECTOR	153
8.4	HOTSPOT SERVICES	155
8.5	MANAGED SERVICES ASK YOUR CRADLEPOINT SALES REPRESENTATIVE FOR DETAILS.....	160
8.6	SERIAL REDIRECTOR.....	163
8.7	SYSTEM CONTROL.....	165
8.8	SYSTEM SOFTWARE	166
9	GLOSSARY.....	167
10	APPENDIX	181
10.1	PRODUCT INFORMATION AND SAFETY GUIDE	181
10.2	SPECIFICATIONS.....	184

1 INTRODUCTION

1.1 Package Contents

- CradlePoint COR: Integrated Broadband Router (IBR600) with embedded high-speed modem (4G LTE / 3G EV-DO rev A, EVDO rev A)
- Two external modem antennas
- AC power adapter (12V, 1.5A)
- Two 2.4 GHz High Performance 802.11n WiFi Antennas (IBR600 versions only)
- Mounting Hardware
- Quick Start Guide

1.2 System Requirements

- At least one Internet source: an active subscription for the embedded modem; an Ethernet-based modem; or WiFi as WAN
- Windows 2000/XP/7, Mac OS X, or Linux computer (with WiFi adapter for WiFi functionality)
- Internet Explorer v6.0 or higher, Firefox v2.0 or higher, Safari v1.0 or higher

1.3 IBR600 Overview

COR: THE HEART OF YOUR M2M NETWORK

- For use in business critical high-availability installations such as ATMs, Kiosks, Surveillance, Vehicles, etc. that require 24x7 connectivity
- Increase your network availability with WiPipe™-powered automatic failover/failback internal functionality
- Supports both wireless and wired Internet connections (two Ethernet ports for either LAN/LAN or WAN/LAN)
- Secure IPSec VPN (5 concurrent sessions maximum)
- Wireless 2x2 MIMO “N” WiFi (802.11 b/g/n)
- Create a customized Hotspot with our captive portal feature (include Terms of Service, advertisements, etc.)
- Centralize the administration and monitoring of distributed routers using WiPipe Central.

ENHANCED WIFI

- 500+ feet of WiFi Range
- Wireless “N” WiFi (802.11n, legacy 802.11b/g, 2x2 MIMO antenna system)
- Enhanced performance around walls and other obstructions
- 2.4 GHz WiFi broadcast
- Maximum security with both Public and Private networks

ADDITIONAL FEATURES

- 2x2 MIMO antenna system, removable external antennas, dual SSIDs
- Standardized platform and centralized remote management
- Built-in GPS
- IP Passthrough
- Up to 5 concurrent VPN endpoint sessions
- Compatible with Cisco, Juniper, SonicWall, and other VPN termination systems
- Establish continuous uptime with optimum total cost of ownership for broad deployment
- Simple to install, configure and maintain with minimal impact on IT
- Virtual LAN capabilities
- Data Usage section that allows users to track and manage modem use relative to data plans
- NAT-less routing
- VPN NAT traversal

The CradlePoint IBR600 is a highly-featured, compact and robust router designed for deployment in critical business and enterprise applications that require 24x7 connectivity via Ethernet and/or WiFi. The router features a built-in high-speed 4G LTE or 3G EV-DO modem as well as support for wired networks such as DSL or Cable. With its compact size, sleek metal case and mounting bracket, and external Cellular and WiFi antennas the IBR600 is ideal for use in high-availability portable or fixed applications (ATM, kiosk, surveillance, vehicle). With failover/failback capability, the IBR600 supports both wired and wireless Internet.

The router increases Internet availability and business continuity by detecting network failures and seamlessly switching over to the other network(s). It is also ideal for deployment as a primary connection solution where wired Internet is not

available. The IBR600 provides secure and reliable VPN functionality, allowing users to create, manage and terminate up to 5 concurrent IPSec VPN sessions. It allows for secure access to company networks for enterprise applications and provides a secure way to transmit sensitive data to and from a remote site.

1.3.1 Captive Portal

The Captive Portal solution provided by CradlePoint routers enables businesses to provide their customers with a public WiFi hotspot with access controls. The controls can be as simple as requiring acceptance of a Terms of Service agreement, while Advanced features allow administrators to control and monitor usage, require login, direct users to specific web pages, provide revenue through services fees or paid advertising, and more.


1.3.2 WiPipe Central

CradlePoint's cloud-based router management service allows for remote monitoring, configuration, and firmware updates of deployed routers like the IBR600. WiPipe Central drastically simplifies router administration for businesses using multiple routers. WiPipe Central can be purchased separately at <http://cradlepoint.com/support/wipipe-central>.

2 HARDWARE OVERVIEW



2.1 Ports, LEDs, and Switches

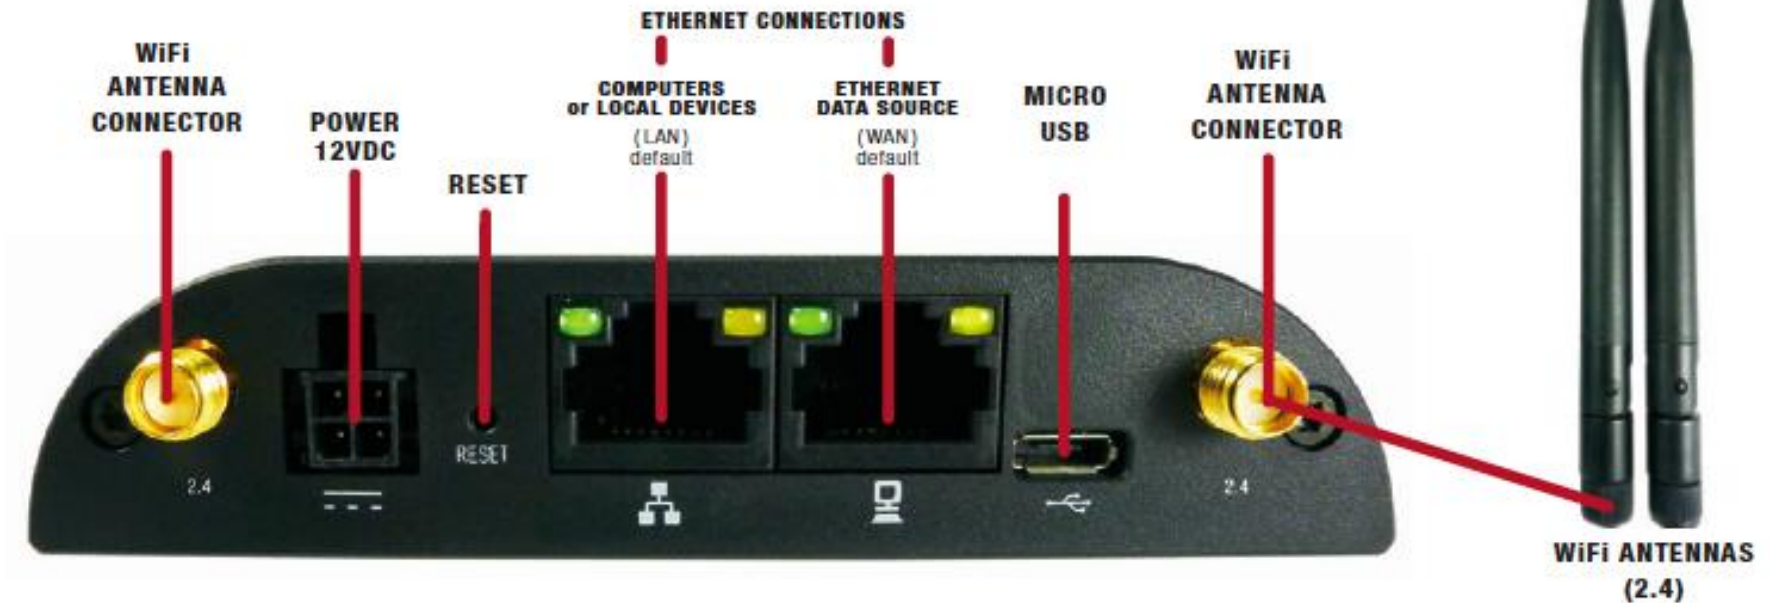

WiFi Antennas: The IBR600 comes with two 2.4 GHz WiFi antennas (Reverse SMA). These antennas are simple to attach and adjust for maximum WiFi broadcast.

Power 12VDC: The power connector includes two pins for power and two pins for GPIO (General Purpose Input/Output) functionality. The included power adapter, however, only connects to the power pins. You will need a separate adapter for GPIO functionality.




Reset: You can return your router to factory default settings by pressing and holding the **Reset** button. This button is recessed, so it requires a pointed object such as a paper clip to press. Press and hold for 10 seconds to initiate reset.

Ethernet Ports: By default, the IBR600 has one WAN (Wide Area Network—your Internet source) port and one LAN (Local Area Network) port. Each of these ports can be reconfigured, however, if you need two LAN or two WAN Ethernet ports.

Ethernet LED:

- Solid Green – connected
- Blinking Green – data transfer activity

Micro USB: This port can be used to attach a direct firmware upgrade to enable manual firmware upgrades if necessary.

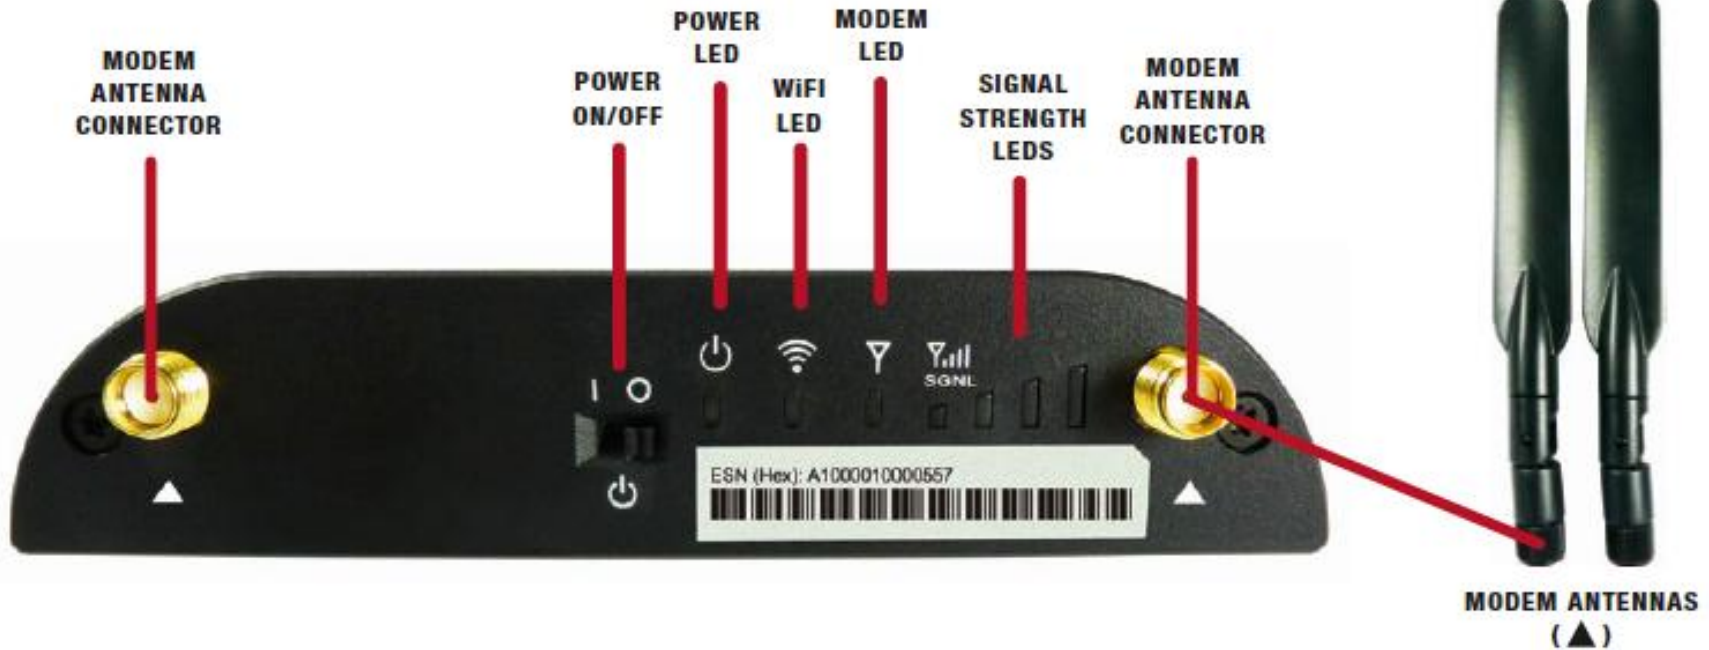

Modem Antennas: The IBR600 comes with two modem antennas to enhance reception for the embedded modem. These antennas are simple to attach and adjust.

Power On/Off:

- I = On
- O = Off

Power LED:

- Blue = On
- No light = Off

WiFi LED:

- Green = On and operating normally
- No light = Off

Modem LED:

- Green = On and operating normally
- Blinking Green = Connecting
- Amber = Not available (idle, for example)
- Blinking Amber = Cellular data connection error
- No light = Off


Additional LED Indications:

Factory reset button detected	WiFi and modem LEDs blink amber twice
Error during USB firmware upgrade	WiFi and modem LEDs blink red

2.2 Mounting Bracket



2.2.1 Attaching the IBR600 to the Mounting Bracket

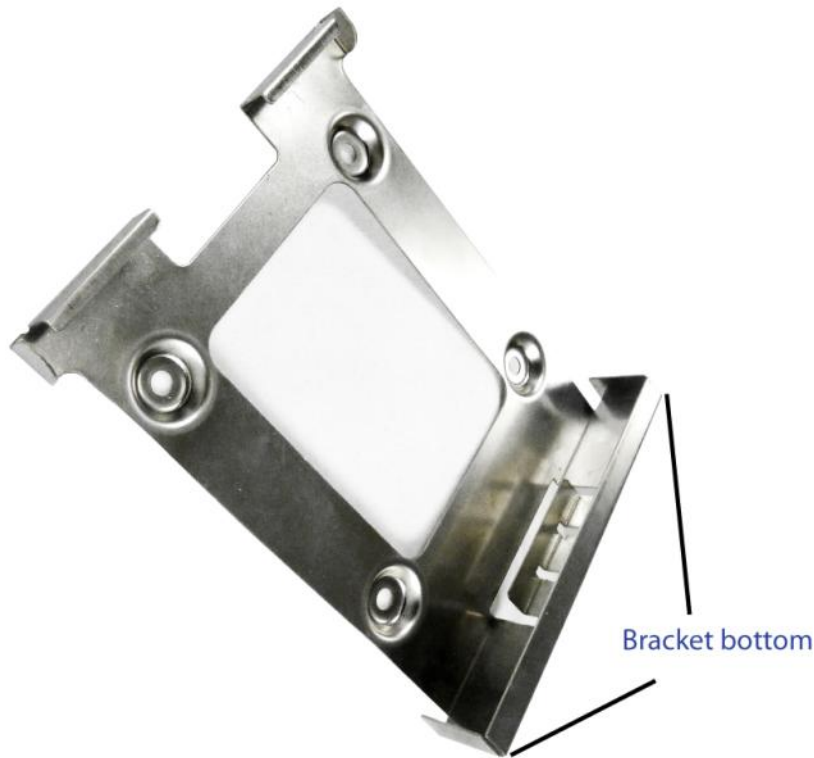

1) Attach the bracket to the wall or other surface with screws.

NOTE: Screws are not provided because the type of screw required depends on the mounting surface.

2) Place the router's edge against the bottom of the bracket.

3) Press the router down firmly, then push it inside the bracket. It should latch.



2.2.2 Removing the IBR600 from the Mounting Bracket

From the top of the bracket, press down firmly on the router using your thumb(s) and pull the device out.



3 QUICK START

3.1 Basic Setup


1. Attach the WiFi (right) and modem antennas.



2. Plug the power supply into an electrical outlet and connect it to the IBR600.



3. Make sure the power is switched on.

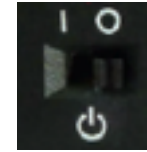

O = OFF I = ON

3.1.1 Activate Your Modem

A wireless broadband data plan must be added to your IBR600. Wireless broadband data plans are available from wireless carriers such as Sprint and Verizon. A new line of service can be added or a data plan can be transferred from an existing account. You will need the ESN/IMEI (or similar number) from your product label on your router to add or transfer a line of service.

After adding a data plan to the modem, the modem may need to be activated. To activate the modem:



1. Log in to the IBR600 administration pages (see [Accessing the Administration Pages](#)).
2. Select **Internet** from the top navigation bar and **Modem Settings** from the dropdown menu (**Internet** → **Modem Settings**).
3. Find and select the CradlePoint modem.
4. Click Update/Activate.
5. Click Activate in the popup.

3.2 Connect to a Computer or other Device

3.2.1 Wireless Network Connection

1) Find the network. On a WiFi-enabled computer or device, open the window or dropdown menu that allows you to access wireless networks. The IBR600 network will appear on the list: select this network.

2) Log in. You will need to input the **Default Password** when prompted. The Default Password is provided on the product label found on the bottom of your router (this password is the last eight digits of the router’s MAC address, which can be found on the product box or on the product label).

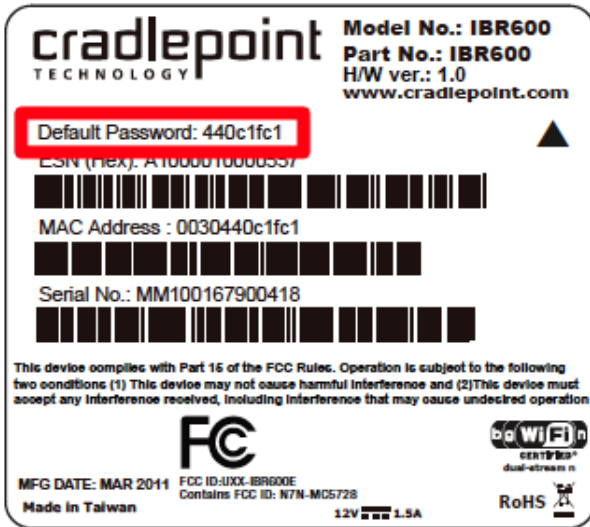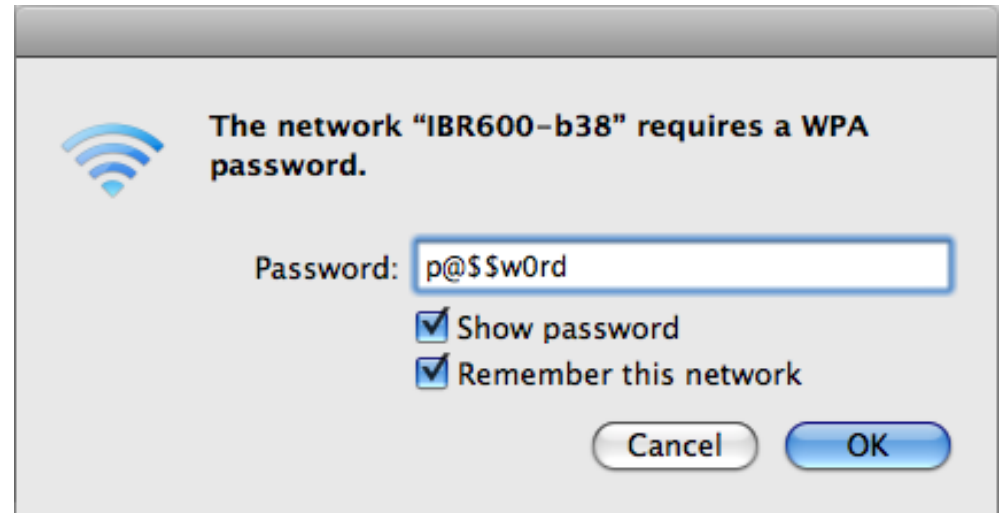


NOTE: If more than one IBR600 wireless router is visible, you can find the correct unit by checking for its **SSID** (service set identifier; the unique name of the local network). The default SSID of the primary network has the form IBR600-xxx, where “xxx” is the last 3 digits of the router’s MAC address.

3.2.2 Accessing the Administration Pages

For most users the IBR600 Router can be used immediately without any special configuration changes. If you would like to change your network name or password or configure any of the advanced features of the IBR600, you will need to log in to the administration pages:

- Access your router's **Administrator Login** screen by opening a web browser window and typing "[cp/](#)" (your router's default hostname) or the IP address "[192.168.0.1](#)" into the address bar.
- Enter your **Default Password**. This password can be found on the bottom of the IBR600. Then click the **LOGIN** button.
- When you log in for the first time, you will be automatically directed to the **First Time Setup Wizard**. Follow the instructions given with the Wizard or see [Getting Started – First Time Setup](#) for more information about using the **First Time Setup Wizard**.

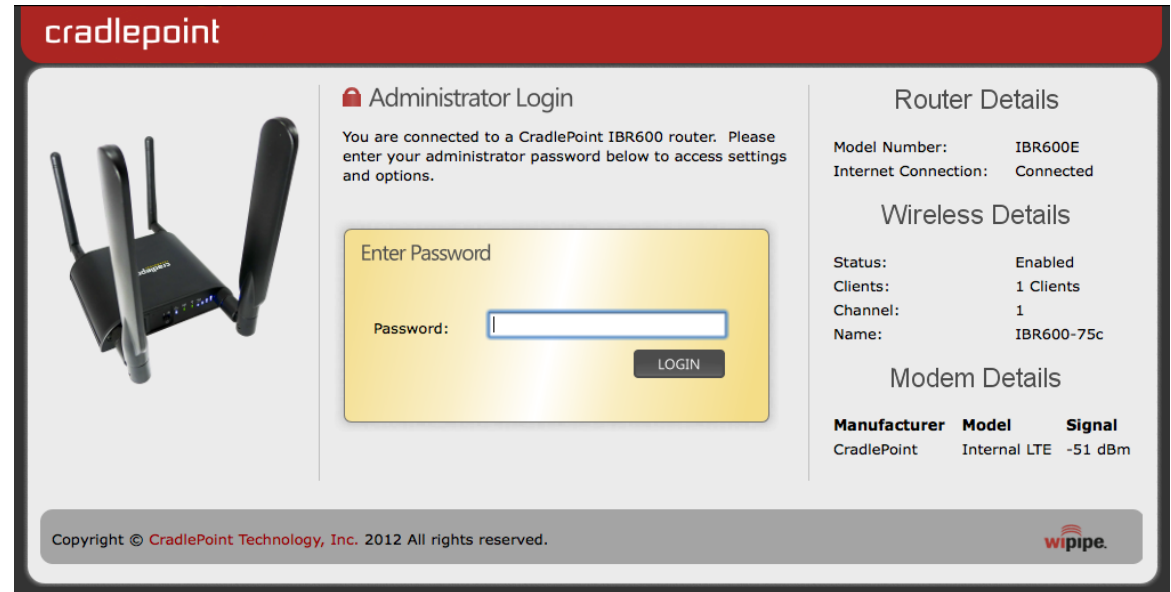

3.2.3 Connect to the Internet

If you used the **First Time Setup Wizard**, you might have changed the “WiFi Network Name” or the “Security Mode” password. If so, you will need to reconnect your device(s) to the IBR600 network.

- **Find the network.** Look for your new personalized network name (or the default SSID of the form “IBR600-xxx”).
- **Log in** using your new personalized WiFi security password (or the Default Password found the bottom of the router).
-

Your network should now be up and running, and users who have the security password can access the network on WiFi-enabled devices.



3.3 Common Problems

Please visit CradlePoint Knowledgebase at <http://knowledgebase.cradlepoint.com/> for more help and answers to your other questions.

3.3.1 You are Connected to the Router but Cannot Connect to the Internet

Make sure that you have an active data plan and that your modem has been activated. A wireless broadband data plan must be added to your IBR600. Wireless broadband data plans are available from wireless carriers such as Sprint and Verizon. A new line of service can be added or a data plan can be transferred from an existing account. You will need the ESN number from your product label on your router to add or transfer a line of service.

After adding a data plan to the modem, you must activate the modem:

1. Log in to the IBR600 administration pages (see [Accessing the Administration Pages](#)).
2. Select **Internet** from the top navigation bar and **Modem Settings** from the dropdown menu (**Internet** → **Modem Settings**).
3. Find and select the CradlePoint modem.
4. Click Update/Activate.
5. Click Activate in the popup.


Finally, if you have an active data plan and you have already activated your modem, you may be out of range of your service provider. Check your signal strength in the Internet section of the **Dashboard** (**Status** → **Dashboard**). If you have a weak signal in your location, contact your service provider.

If you are still not online after activating the modem, call CradlePoint Technical Support for further assistance.

4 WEB INTERFACE – ESSENTIALS

The IBR600 has a Web interface for configuration and administration of all features. The interface is organized with 5 tabs at the top of the screen:

- Getting Started
- Status
- Network Settings
- Internet
- System Settings

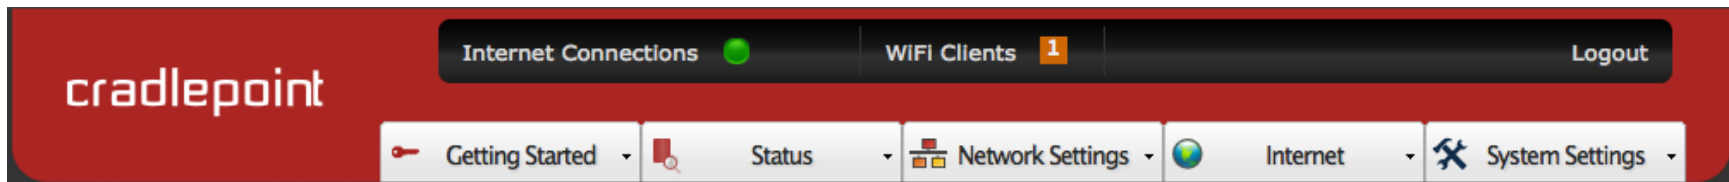

Web Interface – Essentials contains the following sections to help you more quickly and easy navigate these administration pages:


- 4.1 Administrator Login
- 4.2 Getting Started – First Time Setup
- 4.3 Quick Links
- 4.4 Configuration Pages
- 4.5 IP Passthrough Setup



4.1 Administrator Login

To access the administration pages, open a Web browser and type the hostname “[cp/](#)” or IP address “<http://192.168.0.1>” into the address bar. The Administrator Login page will appear.

Manufacturer	Model	Signal
CradlePoint	Internal LTE	-51 dBm

Copyright © CradlePoint Technology, Inc. 2012 All rights reserved. 

Log in using your administrator password. Initially, this password can be found on the bottom of the IBR600 unit as the **Default Password**. This password is also the last eight digits of the unit’s MAC address.

You may have changed the administrator password during initial setup using the First Time Setup Wizard. Log in using your personalized administrator password.

If you have forgotten your personalized password, you can reset the IBR600 to factory defaults. When you reset the router, the administrator password will revert back to the **Default Password**. Press and hold the **reset button** on the router unit until the lights flash (Approximately 10-15 seconds). You can then log in using the **Default Password** (found on the bottom of your router).

4.1.1 Router Details

The Administrator Login page includes a quick-reference section that shows the following information:

Router Details

- **Model Number:** IBR600
- **Internet Connection:** Connected/Disconnected

Wireless Details

- **Status:** Enabled/Disabled
- **Clients:** The number of attached users.
- **Channel:** The channel number.
- **Name:** The name of the primary network. If you have more than one wireless network enabled, the additional network names will also be listed here.


Modem Details

- **Manufacturer:** The name of the modem manufacturer (CradlePoint).
- **Model:** The name of the modem model (Internal LTE, for example).
- **Signal:** The strength of the signal (dBm).

4.2 Getting Started – First Time Setup

The **First Time Setup Wizard** will help you customize the name of your wireless network, change passwords to something you choose, and establish an optimal WiFi security mode. The IBR600 comes out of the box with a unique password at WPA1/WPA2 WiFi security level.

- 1) Open a browser window and type “[cp/](#)” or “[192.168.0.1](#)” into the address bar. Press enter/return.
- 2) When prompted for your password, type the eight character **Default Password** found on the product label on the bottom of the IBR600 (this is also the last 8 digits of the router’s MAC address).
- 3) When you log in for the first time, you will be automatically directed to the **FIRST TIME SETUP WIZARD**. (Otherwise, go to **Getting Started → First Time Setup**).
- 4) CradlePoint recommends that you change the router’s **ADMINISTRATOR PASSWORD**, which is used to log in to the administration pages. The administrator password is separate from the WiFi security password, although initially the **Default Password** is used for both.
- 5) You can select your **TIME ZONE** from a dropdown list. (This may be necessary to properly show time in your router log, but typically your router will automatically determine your time zone through your browser.) Click **NEXT**.

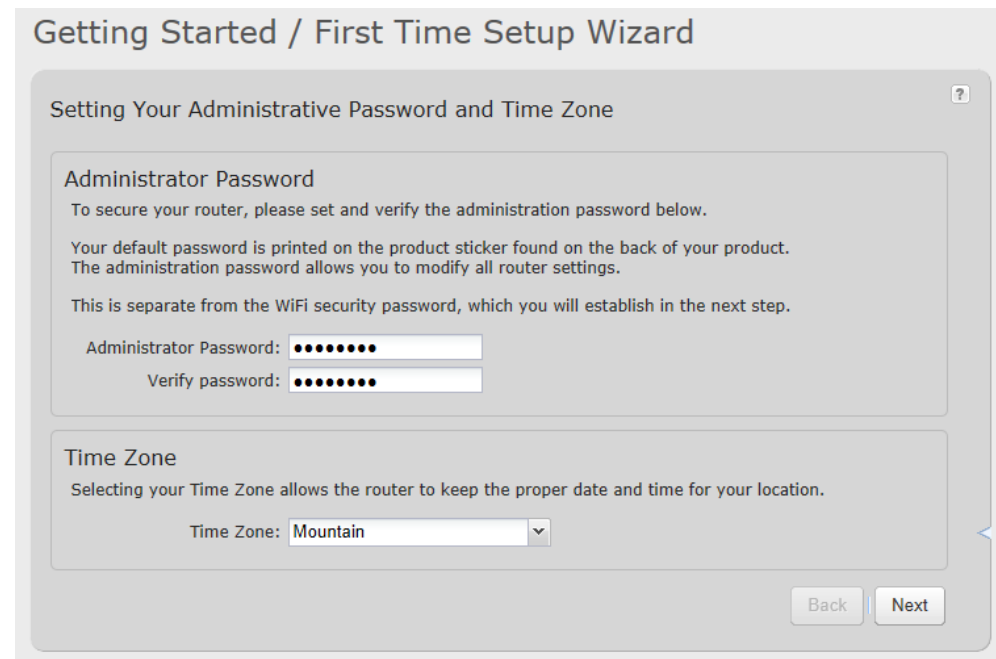

Getting Started / First Time Setup Wizard

Setting Your Administrative Password and Time Zone

Administrator Password
To secure your router, please set and verify the administration password below.
Your default password is printed on the product sticker found on the back of your product.
The administration password allows you to modify all router settings.
This is separate from the WiFi security password, which you will establish in the next step.

Administrator Password:

Verify password:

Time Zone
Selecting your Time Zone allows the router to keep the proper date and time for your location.

Time Zone:


Back Next

- 6) CradlePoint recommends that you customize your WiFi Network Name. Type in your personalized Network name here. You can also enable the Guest Network feature (for more configuration options, see **Network Settings** → **WiFi / Local Networks** and the [Wireless \(WiFi\) Network Settings](#) section of this manual).

Choose the **WIFI SECURITY MODE** that best fits your needs:

- **BEST (WPA2):** Select this option if your wireless adapters support WPA2-only mode. This will connect to most new devices and is the most secure, but may not connect to older devices or some handheld devices such as a PSP.
- **GOOD (WPA1 & WPA2):** Select this option if your wireless adapters support WPA or WPA2. This is the most compatible with modern devices and PCs.
- **POOR (WEP):** Select this option if your wireless adapters only support WEP. This should only be used if a legacy device that only supports WEP will be connected to the router. WEP is insecure and obsolete and is only supported in the router for legacy reasons. The router cannot use 802.11n modes if WEP is enabled; WiFi performance and range will be limited.
- **NONE (OPEN):** Select this option if you do not want to activate any security features.

CradlePoint recommends BEST (WPA2) WiFi security. Try this option first and switch only if you have a device that is incompatible with WPA2.

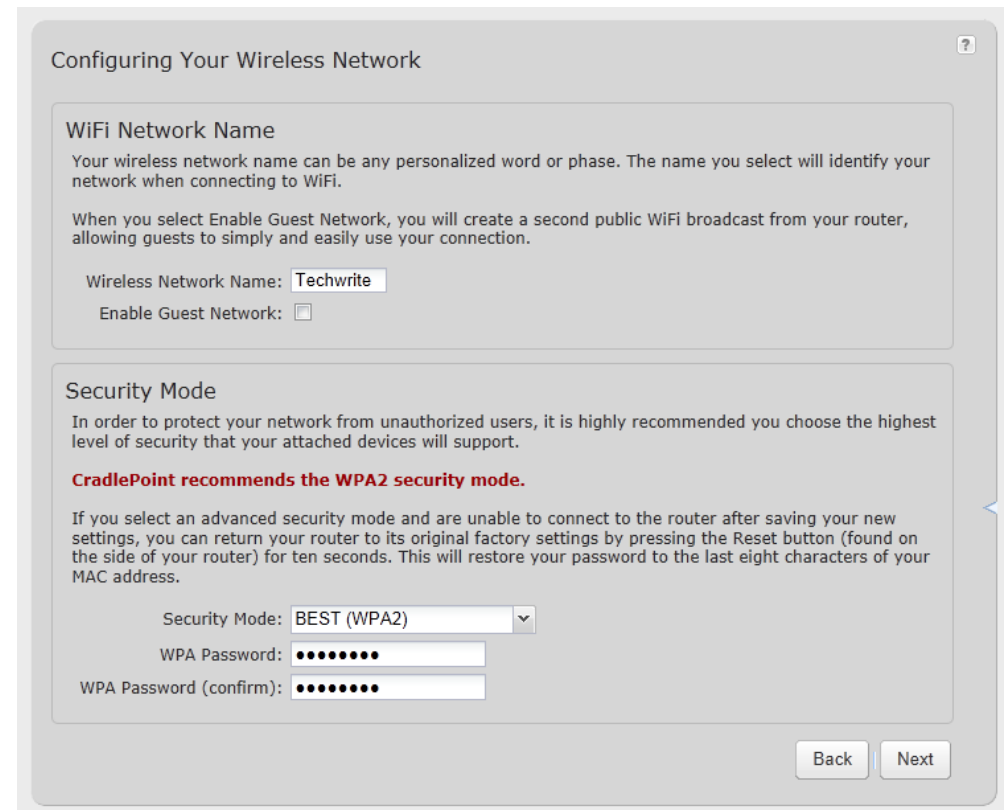

Configuring Your Wireless Network

WiFi Network Name
Your wireless network name can be any personalized word or phase. The name you select will identify your network when connecting to WiFi.
When you select Enable Guest Network, you will create a second public WiFi broadcast from your router, allowing guests to simply and easily use your connection.

Wireless Network Name:

Enable Guest Network:

Security Mode
In order to protect your network from unauthorized users, it is highly recommended you choose the highest level of security that your attached devices will support.
CradlePoint recommends the WPA2 security mode.
If you select an advanced security mode and are unable to connect to the router after saving your new settings, you can return your router to its original factory settings by pressing the Reset button (found on the side of your router) for ten seconds. This will restore your password to the last eight characters of your MAC address.

Security Mode:

WPA Password:

WPA Password (confirm):

Choose a personalized **WPA PASSWORD** or **WEP KEY**. This password will be used to connect devices to the router's WiFi broadcast once the security settings have been saved.

- **WPA Password:** The WPA Password must be between 8 and 64 characters long. A combination of upper and lower case letters along with numbers and special characters is recommended to prevent hackers from gaining access to your network.
- **WEP Key:** A WEP Key must be either a hexadecimal value of 5 or 13 characters or a text value of 10 or 26 characters.


Click **NEXT**.

7) If you are using a 4G WiMAX modem, you will want to establish the Realm for your carrier. This setting ensures that the modem, when attached to the router, will properly connect to your carrier's wireless broadband service. The router will default to the Sprint Realm. Select your carrier from the dropdown menu (options shown below).

- Clear - clearwire-wmx.net
- Rover - rover-wmx.net
- Sprint 3G/4G - sprintpcs.com
- Xohm - xohm.com
- BridgeMAXX - bridgeMAXX.com
- Time Warner Cable - mobile.rr.com
- Comcast - mob.comcast.net

NOTE: If you use a 3G or LTE modem you can safely skip this step.

Click **NEXT**.

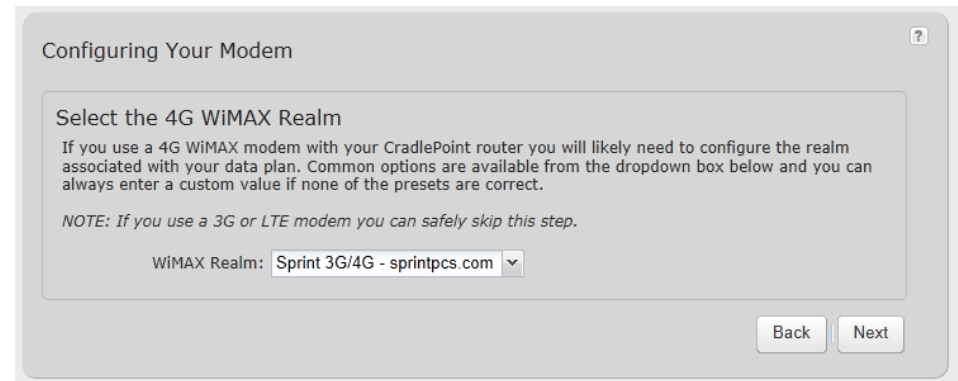

Configuring Your Modem

Select the 4G WiMAX Realm

If you use a 4G WiMAX modem with your CradlePoint router you will likely need to configure the realm associated with your data plan. Common options are available from the dropdown box below and you can always enter a custom value if none of the presets are correct.


NOTE: If you use a 3G or LTE modem you can safely skip this step.

WiMAX Realm: Sprint 3G/4G - sprintpcs.com

Back Next

8) **Configuring Failure Check:**

It is possible for a WAN interface to go down without the router recognizing the failure. (For example: the carrier for a cellular modem goes dormant, or your Ethernet connection is properly attached to a modem but the modem becomes disconnected from its Internet source.) Enable Failure Check to ensure that you can get out to the Internet via your primary WAN connection. This option is disabled by default because it may use data unnecessarily. Use this in combination with failover, or for cellular modems, use this in combination with Aggressive Reset (**Internet** → **Connection Manager** under Modem Settings in the interface/rule editor).

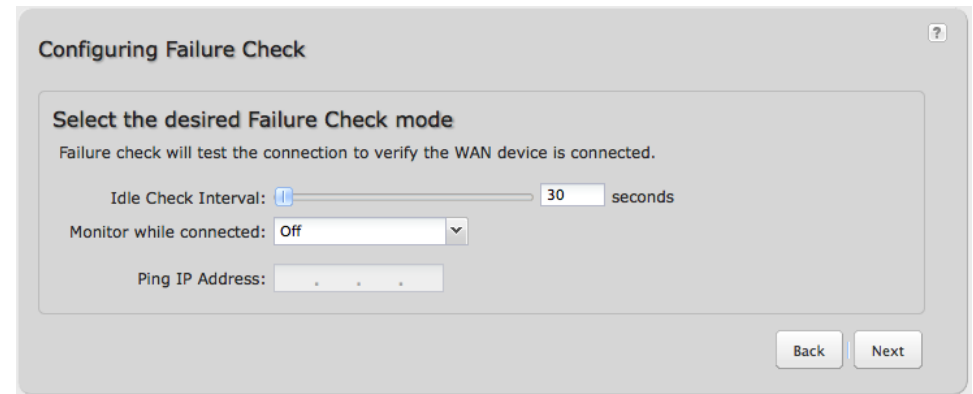

Idle Check Interval: Set the number of seconds the router will wait between checks to see if the WAN is still available. (Default: 30 seconds. Range: 10-3600 seconds.)

Monitor while connected: Select from the dropdown menu. (Default: Off)

- **Active Ping:** A ping request will be sent to the Ping Target. If no data is received, the ping request will be retried 4 times at 5-second intervals. If still no data is received, the device will be disconnected and failover will occur. When “Active Ping” is selected, the next line gives an estimate of data usage in this form: “Active Ping could use as much as **9.3 MB** of data per month.” This amount depends on the Idle Check Interval.
- **Off:** Once the link is established the router takes no action to verify that it is still up.

Ping IP Address: If you selected “Active Ping”, you will need to input an IP address that will respond to a ping request. This IP address must be an address that can be reached through your WAN connection (modem/Ethernet). Some ISPs/Carriers block certain addresses, so choose an address that all of your WAN connections can use. For best results, select an established public IP address. *For example, you might ping Google Public DNS at 8.8.8.8 or Level 3 Communications at 4.2.2.2.*

Click **NEXT**.



Applying Your New Settings ?

Summary

Below is a detailed summary of your system settings. Please record these newly established router settings for future access. You may also need this information to configure your other wireless devices.

If a WiFi password is set, passing your mouse over the asterisks will show the password.

When you are satisfied with the configuration, select the 'Apply' button below.

Administrator Password: *****
Time Zone: (UTC -7) Mountain
Wireless Network Name: Hawaii Vacation
Enable Guest Network: Yes
Security Mode: GOOD (WPA1/WPA2)
WPA Password: *****
WiMAX Realm: Sprint 3G/4G - sprintpcs.com
Idle Check Interval: 30
Monitor while connected: Active Ping
Ping IP Address: 4.2.2.2

- 9) Review the details and record your wireless network name, administrative password, and WPA password (or WEP key). Move your mouse over the passwords to selectively reveal each password.

Please record these settings for future access. You may need this information to configure other wireless devices.

NOTE: If you are currently using this network, reconnect your devices to the network using the new wireless network name and security password.


Click **APPLY** to save the settings and update them to your router.

4.3 Quick Links



The CradlePoint logo in the upper left-hand corner of all the administration pages is a link to the Dashboard (**Status** → **Dashboard**), which displays fundamental information about the router.


The black bar across the top provides quick access to important information and controls.




Internet Connection This links to the Connection Manager (**Internet** → **Connection Manager**) where you can manage your Internet sources.



Click on the image of four signal bars to open a “Modem Connection Quality” popup window that shows the strength of your Internet signal.

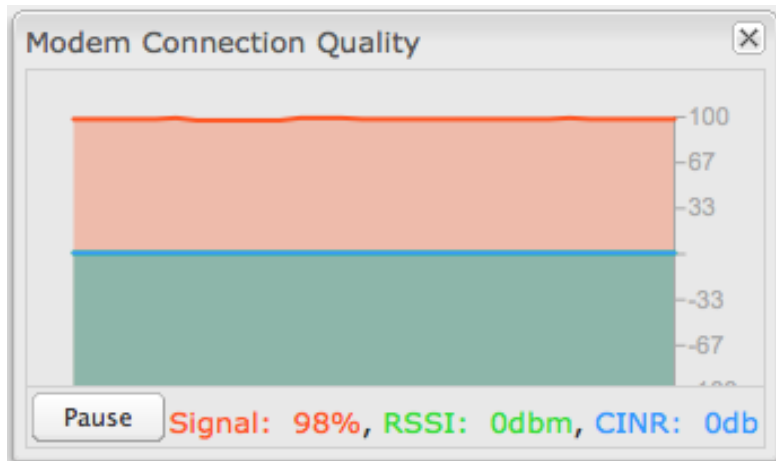

WiFi Clients Click to view a signal strength indicator for your network, “WiFi Connection Strength”.

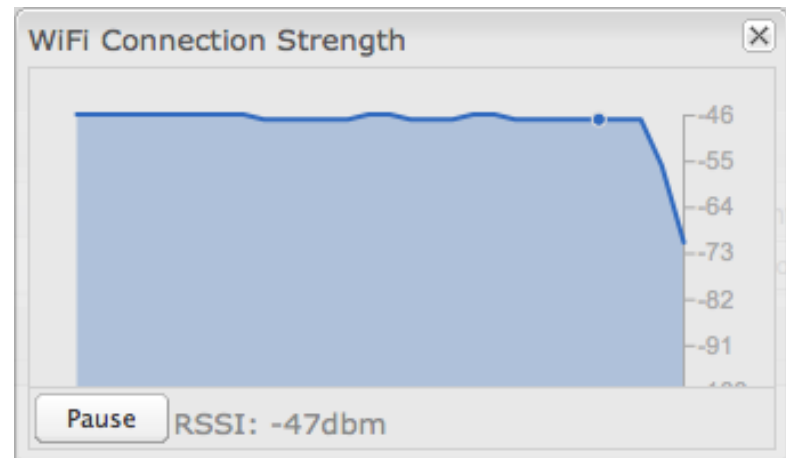

Logout Click to log out of the administration pages.



4.4 Configuration Pages

The following table shows the navigation layout of the administration pages. Click on the tabs along the top bar to reveal the following dropdown menus.

Getting Started	Status	Network Settings	Internet	System Settings
First Time Setup	Client List	Content Filtering	Connection Manager	Administration
IP Passthrough Setup	Dashboard	DHCP Server	Data Usage	Device Alerts
WiFi Protected Setup	GPS	DNS	GRE Tunnels	GPIO Connector
	GRE Tunnels	Firewall	VPN Tunnels	Hotspot Services
	Hotspot Clients	MAC Filter	WiFi as WAN / Bridge	Managed Services
	Internet Connections	Routing	WAN Affinity	Serial Redirector
	Statistics	WiFi / Local Networks		System Control
	System Logs	WiPipe QoS		System Software
	VPN Tunnels			
	WiPipe QoS			

Status – Displays various types of information about your router such as a list of clients that are attached to your networks (**Client List**), the details of each Internet source your router is using (**Internet Connections**), and a map of your router’s location (**GPS**). Very few changes can be made from this tab because the primary purpose is to display information.

Network Settings – Provides configuration options for the networks, or LAN, created by your router. For example, you can enable a guest WiFi network (**WiFi / Local Networks**), set up rules to filter websites (**Content Filtering**), or create a traffic-shaping rule to set bandwidth priorities (**WiPipe QoS**).

Internet – Provides configuration options for the Internet sources, or WAN, used by the router. For example, you can set up a rule to track how much data you are using per month on a modem (**Data Usage**), set WiFi to be an Internet source (**WiFi as WAN / Bridge**), or set the fallback order for your Internet sources (**Connection Manager**).



System Settings – Provides broad administrative controls. For example, you can set up a Terms of Use page for your guest network (**Hotspot Services**), enable remote management of the router (**Administration**), or upgrade firmware (**System Software**).

4.4.1 Network Settings vs. Internet

When using the Web interface, it will be important to pay attention to the difference between the **Internet source** for your IBR600 and the **network** created by the IBR600. The “**Internet**” tab broadly refers to the router’s source of Internet, while the “**Network Settings**” tab broadly refers to the network created by the router.

The following chart highlights this difference:

<p>Internet tab</p> <p>Internet “input”</p> <p>Source for IBR600</p> <p>WAN (Wide Area Network)</p>	<p>Network Settings tab</p> <p>Internet “output”</p> <p>Network created by IBR600</p> <p>LAN (Local Area Network)</p>
--	--

Examples:

- If you want to change the content filtering settings for the network created by the IBR600, go to the **Network Settings** tab.
- If you have multiple Internet sources (such as the embedded modem and an Ethernet connection) for which you would like to set priority levels, go to the **Internet** tab.

4.5 IP Passthrough Setup

You can quickly enable IP Passthrough with the IP Passthrough Setup Wizard available under **Getting Started** → **IP Passthrough Setup**. IP Passthrough takes a 3G/4G WAN data source (USB, ExpressCard) and passes the IP address through to Ethernet LAN.

Using this function requires many changes to your router configuration. The IP Passthrough Setup Wizard will automatically make these changes for you: simply read through the wizard and select **Enable IP Passthrough** on the second page. For further configuration options, see **Network Settings** → **WiFi / Local Networks**.

Review the list of changes to ensure they are compatible with your router needs:

- All Ethernet ports will be set to LAN (i.e. you cannot use Ethernet as an Internet source for your router).
- All WAN devices will have Load Balance disabled and the highest priority device will be used.
- All network groups except the primary network group will be removed.
- All wireless interfaces will be removed from the primary network group. (It is possible to have a wireless interface associated with another network.)
- All router-based VPN and GRE services will be disabled.
- The Routing Mode will be set to IP Passthrough.
- The Subnet Selection Mode will be set to "Automatically Create Subnet"

5 STATUS

The Status tab displays information about many different aspects of the router. It provides access to 10 submenu options:

- Client List
- Dashboard
- GPS
- GRE Tunnels
- Hotspot Clients
- Internet Connections
- Statistics
- System Logs
- VPN Tunnels
- WiPipe QoS

Status / Dashboard

Router Information :: [\(Detailed Info\)](#)

Product: IBR600E
 Serial: MM120093000991
 Firmware: v3.5.1 (2012-03-23)
 Build Date: 2012-03-23-11-10-13
 CPU Usage: 10%
 Up Time: 0 days, 1 hours, 3 mins
 Clock: Wed May 02 2012 12:34:04 GMT-0600 (MDT)

Local Networks :: [\(Detailed Info\)](#)

Clients: 1
 Primary LAN: 192.168.0.1/255.255.255.0
 Route Mode: NAT (Network Address Translation)
 Access: Admin Access, UPnP, DHCP
 Guest LAN: 192.168.10.1/255.255.255.0
 Route Mode: NAT (Network Address Translation)
 Access: LAN Isolation, UPnP, DHCP

WiFi Networks :: [\(Detailed Info\)](#)

WiFi Radio: Channel: 1, 100% Transmit Power
 SSID: IBR600-75c
 Security: WPA1/WPA2 Personal
 Network: Primary LAN

Router Alerts
 The router is running properly
[Product Support Help](#)


Copyright © CradlePoint Technology, Inc. 2012 All rights reserved. Licenses

5.1 Client List

The Client List displays the specifications of each device connected to your router, including **Wireless** and **Wired** clients.

Wireless Clients. For each device using a wireless connection to your IBR600, the following information is displayed: **Hostname**, **IP**, **MAC**, **Connection**, and **Time Online**.

Wired Clients. For each device using a wired connection to your IBR600, the following information is displayed: **Hostname**, **IP**, and **MAC**.

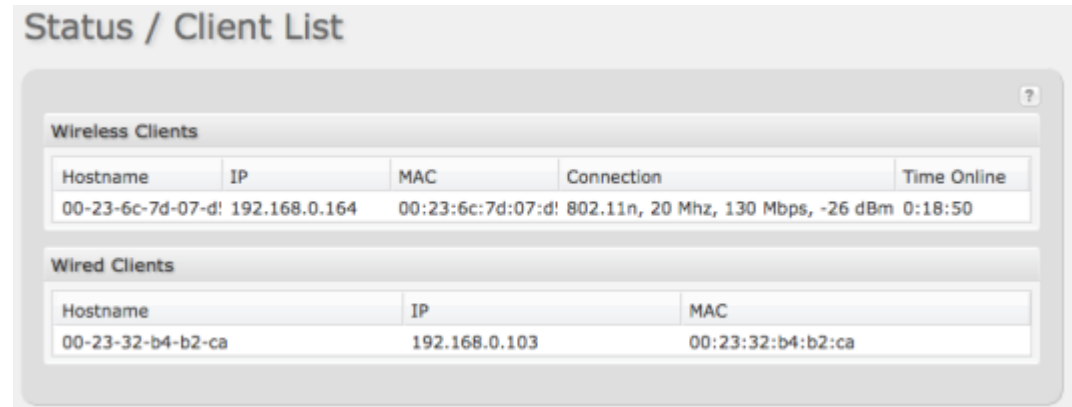

The screenshot shows the 'Status / Client List' interface. It is divided into two sections: 'Wireless Clients' and 'Wired Clients'. The 'Wireless Clients' section contains a table with five columns: Hostname, IP, MAC, Connection, and Time Online. The 'Wired Clients' section contains a table with three columns: Hostname, IP, and MAC.

Wireless Clients				
Hostname	IP	MAC	Connection	Time Online
00-23-6c-7d-07-d!	192.168.0.164	00:23:6c:7d:07:d!	802.11n, 20 Mhz, 130 Mbps, -26 dBm	0:18:50

Wired Clients		
Hostname	IP	MAC
00-23-32-b4-b2-ca	192.168.0.103	00:23:32:b4:b2:ca

Hostname: The name by which each computer or device in a network is known.

IP: The "IP address," or "Internet Protocol address," specifies a location for each device.

MAC: This is the "MAC address", a factory-assigned identifier used to identify a specific attached computer or device.

Connection: Summary of the wireless connection. For example: **802.11n, 20 MHz, 130 Mbps, -26 dBm**

- **802.11n:** The transmission standard being used by the client. Possible values include 802.11a, 802.11b, 802.11g, and 802.11n. 802.11n is the newest and best standard, but some older devices may not support it.
- **20 MHz:** This is the channel width that defines the theoretical data rate (in megahertz) that the attached computer or device can send to or receive from the router. The channel width is set in **Network Settings** → **WiFi / Local Networks**. Typically this will be 20 MHz, but 40 MHz is possible if the router is set to use two adjacent 20 MHz channels. A wider channel can mean better performance, but not if there is too much interference. Even if you set the channel width to 40 MHz, the router may still fall back to 20 MHz if it encounters too much interference.
- **130 Mbps:** The transmit rate (in megabits per second) currently used to transmit packets from the router to the client. This rate changes automatically to match environmental conditions. Distance from the router, interference, etc can impact this value. Higher values indicate better performance. Devices can still function in the network with as little as 1 Mbps.

- **-26 dBm:** A relative measure of wireless signal quality (decibels relative to one milliwatt). This expresses theoretical best quality. The value is given as a negative exponent: -20 is a very good value while -80 is relatively poor. Signal quality can be reduced by distance, by interference from other radio-frequency sources (such as cordless telephones or neighboring wireless networks), and by obstacles between the router and the wireless device.

Time Online: Simply the amount of time the device has been connected to the router.

Kick: Click on this button to disconnect a client.

Wireless Clients					
Hostname	IP	MAC	Connection	Time Online	
00-23-6c-7d-07-	192.168.11.134	00:23:6c:7d:07:	802.11n, 20 MHz, 130 Mbps, -31 d	1:22:03	<input type="button" value="Kick"/>


5.2 Dashboard

The **Dashboard** shows fundamental information about your router, divided into the following basic categories:

- Router Information
- Internet
- Local Networks
- WiFi Networks

For more in-depth information and/or configuration options, click on the [Detailed Info](#) link beside the category title. For each category, this links to:

- Router Information: [System Settings](#) → [Administration](#)
- Internet: [Internet](#) → [Connection Manager](#)
- Local Networks: [Network Settings](#) → [WiFi / Local Networks](#)
- WiFi Networks: [Network Settings](#) → [WiFi / Local Networks](#)

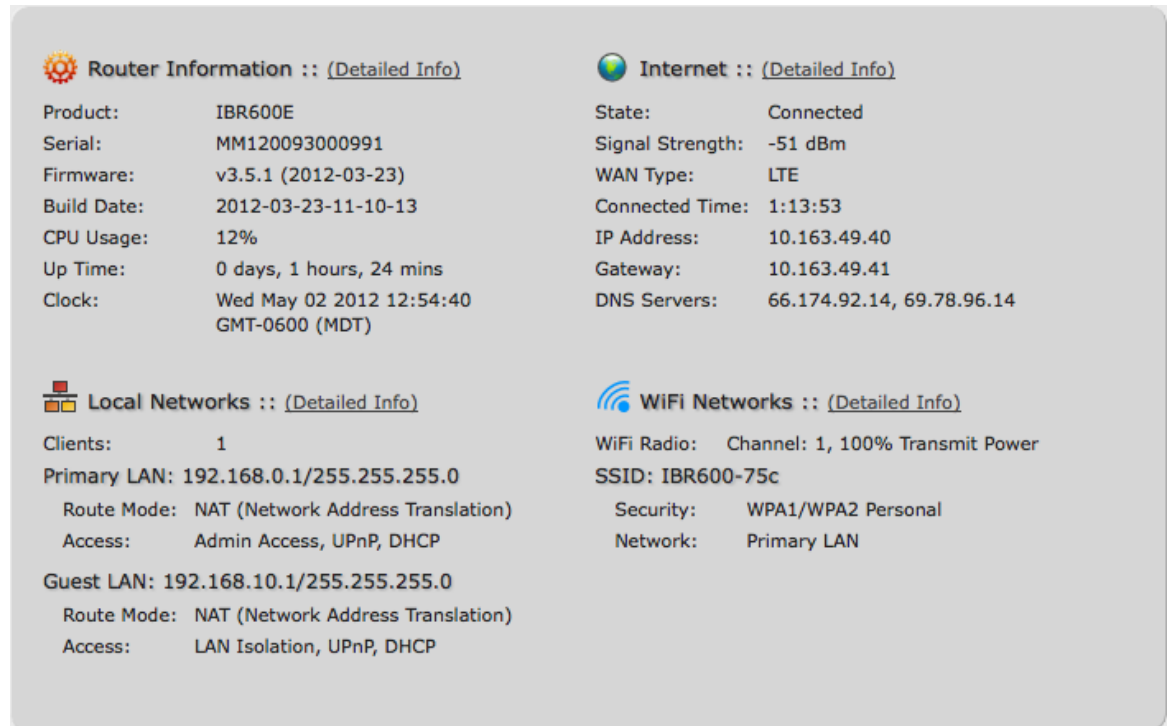

The screenshot displays the router's dashboard with four main sections:

- Router Information :: (Detailed Info)**
 - Product: IBR600E
 - Serial: MM120093000991
 - Firmware: v3.5.1 (2012-03-23)
 - Build Date: 2012-03-23-11-10-13
 - CPU Usage: 12%
 - Up Time: 0 days, 1 hours, 24 mins
 - Clock: Wed May 02 2012 12:54:40 GMT-0600 (MDT)
- Internet :: (Detailed Info)**
 - State: Connected
 - Signal Strength: -51 dBm
 - WAN Type: LTE
 - Connected Time: 1:13:53
 - IP Address: 10.163.49.40
 - Gateway: 10.163.49.41
 - DNS Servers: 66.174.92.14, 69.78.96.14
- Local Networks :: (Detailed Info)**
 - Clients: 1
 - Primary LAN: 192.168.0.1/255.255.255.0
 - Route Mode: NAT (Network Address Translation)
 - Access: Admin Access, UPnP, DHCP
 - Guest LAN: 192.168.10.1/255.255.255.0
 - Route Mode: NAT (Network Address Translation)
 - Access: LAN Isolation, UPnP, DHCP
- WiFi Networks :: (Detailed Info)**
 - WiFi Radio: Channel: 1, 100% Transmit Power
 - SSID: IBR600-75c
 - Security: WPA1/WPA2 Personal
 - Network: Primary LAN

After the initial setup of the router, every time you log in you will automatically be directed to this **Dashboard**. Also, you can click on the CradlePoint logo in the upper left-hand corner to return to the **Dashboard** from any page.

Router Information: “Detailed Info” links to **System Settings → Administration.**

- **Product:** IBR600
- **Serial:** The product serial number.
- **Firmware:** Gives the number of the current firmware version.
- **Build Date:** Year-month-day-hours-minutes-seconds for the most recent firmware upgrade.
- **CPU Usage:** Expressed as a percentage.
- **Up Time:** Total time for current session.
- **Clock:** Current local date and time.

To check for Firmware upgrades, see **System Settings → System Software.**

Internet: “Detailed Info” links to **Internet → Connection Manager.**

- **State:** Connected/Disconnected
- **Signal Strength:** Expressed as a percentage. (Signal Strength is not included if Ethernet is the WAN type.)
- **WAN Type:** Ethernet, Modem, or WiFi as WAN.
- **Connected Time:** The time the current Internet source (WAN) has been connected.
- **IP Address**
- **Gateway**
- **DNS Servers**

For general configuration options, see **Internet → Connection Manager.** For more in-depth Internet source configuration options see the appropriate settings page for your WAN type.

- **Internet → Ethernet Settings**
- **Internet → Modem Settings**
- **Internet → WiFi as WAN Settings**

The IP address and gateway describe your active WAN source.

For DNS server configuration options, see **Network Settings → DNS.**

Local Networks: “Detailed Info” links to **Network Settings → WiFi / Local Networks.**

- **Clients:** The number of current clients.

For each network, the following information is displayed:

- **Network Name: IP Address/Netmask**
 - **Route Mode:** NAT (Network Address Translation), Standard (NAT-less), Hotspot, or Disabled.
 - **Access:** Admin Access, LAN Isolation, UPnP (Universal Plug and Play), and/or DHCP.

To configure a network, see [Network Settings → WiFi / Local Networks](#).

WiFi Networks: “Detailed Info” links to [Network Settings → WiFi / Local Networks](#).

- **WiFi Radio: Channel:** 1-11. **Transmit Power** (Expressed as a percentage).

For each WiFi network, the following information is displayed:

- **SSID:** Service Set Identifier—an identifier or name for a wireless network.
 - **Security:** WPA2/WPA1/WEP Personal/Enterprise or Open; Isolated Clients
 - **Network:** The name of the local network.

To configure WiFi network settings see [Network Settings → WiFi / Local Networks](#).

5.2.1 Router Alerts

On the right side of the **Dashboard** page is a brief set of “**Router Alerts**” that state basic information such as whether the router is running properly. This will inform you about the availability of new firmware, for example.

Router Alerts includes links to the **System Software** page (for new firmware) and the **Connection Manager**.

Router Alerts

The router is running properly

Router firmware is updated from the [System Software](#) page.

Load balancing and Failover can be configured in the [Connection Manager](#).


Product Support Help

5.3 GPS

If GPS support is enabled and a modem capable of providing GPS coordinates is connected, this page will show a graphical view of your router's location. See the GPS section in **System Settings** → **Administration** to enable GPS support.

GPS information is only displayed if 1) the modem supports GPS, 2) your carrier allows the GPS functionality, and 3) the modem has sufficient GPS signal strength. If no information is displayed, check that both the modem and your carrier support GPS. If GPS is supported make sure the modem is in an area where it can receive a signal from the GPS satellites.

Status / GPS Status

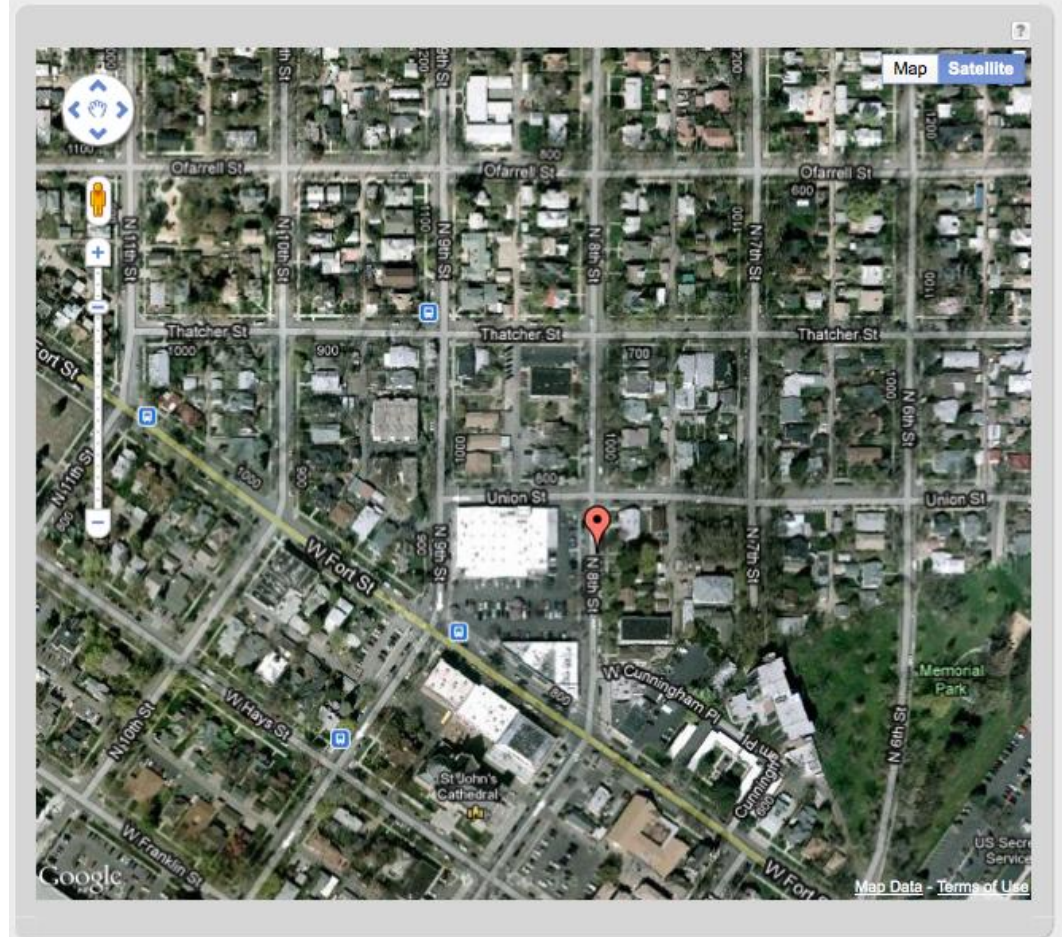


5.4 GRE Tunnels

View the status of configured GRE Tunnels. To set up or edit a GRE tunnel, go to **Internet** → **GRE Tunnels**.

Included information:

- Name
- Status
- Transmit (packets/bytes)
- Receive (packets/bytes)

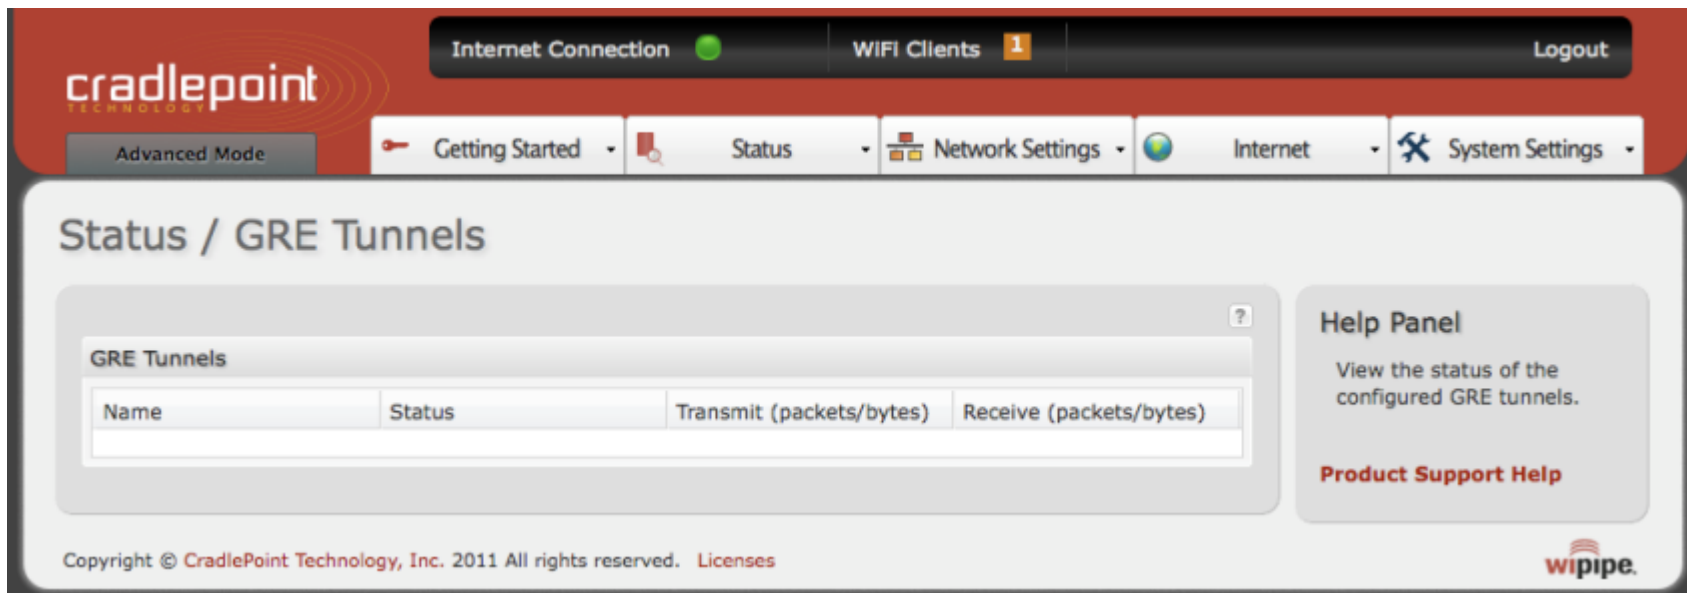

The screenshot shows the Cradlepoint management interface. At the top, there is a navigation bar with the Cradlepoint logo, "Internet Connection" (with a green dot), "WIFI Clients" (with a notification icon), and "Logout". Below this is a secondary navigation bar with "Advanced Mode" and several menu items: "Getting Started", "Status", "Network Settings", "Internet", and "System Settings". The main content area is titled "Status / GRE Tunnels". It features a table with the following columns: "Name", "Status", "Transmit (packets/bytes)", and "Receive (packets/bytes)". The table is currently empty. To the right of the table is a "Help Panel" with the text "View the status of the configured GRE tunnels." and a link for "Product Support Help". At the bottom of the page, there is a copyright notice: "Copyright © CradlePoint Technology, Inc. 2011 All rights reserved. Licenses" and the "wipipe." logo.

5.5 Hotspot Clients

View the status of the clients that have logged in through the Hotspot/Captive Portal. View:


- Hostname
- IP address
- MAC address
- Data Usage (both IN and OUT)
- Time Online
-

Authenticated Hotspot Clients					
Hostname	IP	MAC	Data Usage	Time Online	
00-23-6c-7d-07-d5	192.168.10.134	00-23-6c-7d-07-d5	2.7 MB IN 237.4 KB OUT	0:01:57	Revoke

You may revoke a client's access to the Internet by clicking the 'Revoke' button.

5.6 Internet Connections

The Internet Connections submenu option provides a list of attached WAN devices used as the Internet source for the IBR600. Select one of these devices to see detailed information about that particular device.

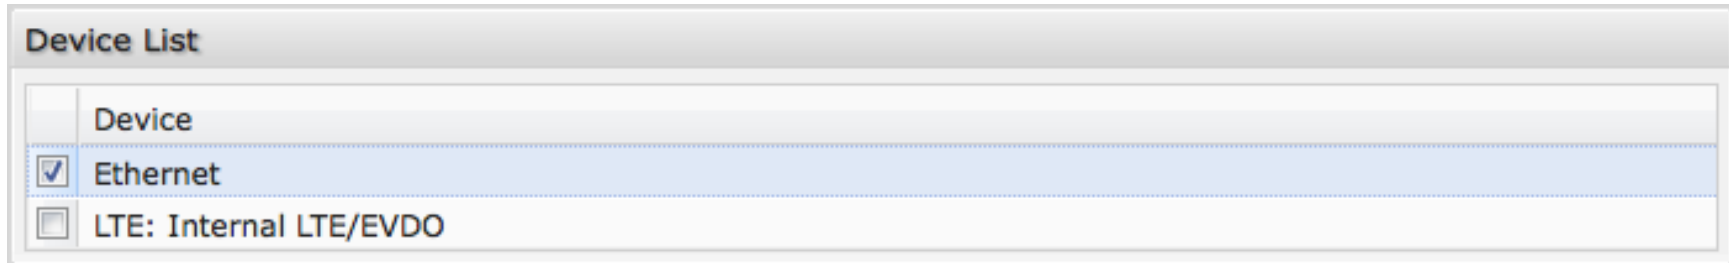

For each type of device, different information will be included in the **Device Information** section. Possible devices include:

- [Ethernet](#)
- [WiFi](#)
- [EVDO Modem](#) (embedded modem)
- [LTE Modem](#) (embedded modem)

Depending on the device, possible information will be in the following sections: Diagnostics, General Information, IP Information, and Statistics. For modems, the Diagnostics section provides specific information about how the modem is communicating with its carrier.

5.6.1 Ethernet

General Information

- **Unique Identifier** *wan*
- **Model**
- **Type** *ethernet*
- **Port**

IP Information

- **DNS Servers**
- **IP Address**
- **Gateway**

Statistics

- **Incoming Bytes**
- **Outgoing Bytes**
- **Connection Uptime (secs)**

Device Information: Gigabit Ethernet Switch	
Property	Value
General Information	
Unique Identifier	wan
Model	8316
Type	ethernet
Port	0
IP Information	
DNS Servers	172.22.22.23,172.21.21.31
IP Address	172.22.24.133
Gateway	172.22.22.1
Statistics	
Incoming Bytes	8627806
Outgoing Bytes	636892
Connection Uptime (secs)	906

5.6.2 WiFi as WAN

Diagnostics

- **Connection State** (connected, idle, etc.)

General Information

- **Product** *Wireless As WAN*
- **Unique Identifier**
- **Type** *wwan*

IP Information

- **Netmask**
- **IP Address**
- **Gateway**

Device Information: Wireless As WAN	
Property	Value
[-] Diagnostics	
Connection State	connected
[-] General Information	
Product	Wireless As WAN
Unique Identifier	1819995126
Type	wwan
[-] IP Information	
Netmask	255.255.255.0
IP Address	192.168.0.197
Gateway	192.168.0.1

5.6.3 EVDO Modem (embedded modem)

Diagnostics

- **Signal Strength (dBm)**
- **PRL Version**
- **Service Display** *1xEV-DO, 1X*
- **Carrier Status** *UP or DOWN*
- **Connection Type** *CDMA*
- **Connection State** (connected, idle, etc.)
- **Connection Uptime**

General Information

- **Product** *EVDO Modem*
- **Protocol** *PPP*
- **Unique Identifier**
- **ESN/IMEI**
- **Model** *MC100E-VZ*
- **Type** *modem*
- **Port** *1*
- **Manufacturer** *CradlePoint Inc.*

IP Information

- **Netmask**
- **IP Address**
- **Gateway**

Statistics

- **Outgoing Bits/Second**
- **Incoming Bits/Second**
- **Incoming Bytes**
- **Outgoing Bytes**

Device List

Device
<input checked="" type="checkbox"/> Modem: EVDO Modem, port: 1
<input type="checkbox"/> Ethernet: port 1

Device Information: EVDO Modem

Property	Value
Diagnostics	
Signal Strength(dBm)	-66 dBm
PRL Version	52337
Service Display	1xEV-DO,1X
Carrier Status	UP
Connection Type	CDMA
Connection State	connected
Connection Uptime	0:03:16
General Information	
Product	EVDO Modem
Protocol	PPP
Unique Identifier	1438832383
Carrier ID	5
ESN/IMEI	██████████
Model	MC100E-VZ
Type	modem
Port	1
Manufacturer	CradlePoint Inc.
IP Information	
Netmask	255.255.255.0
IP Address	75.220.77.172
Gateway	66.174.192.64
Statistics	
Outgoing Bits/Second	890
Incoming Bits/Second	25001
Incoming Bytes	952305
Outgoing Bytes	277278

5.6.4 LTE: Internal LTE/EVDO

Diagnostics

- **Signal Error Rate**
- **MN-HA SPI**
- **Modem Firmware Version**
- **Battery Status**
- **CGSN**
- **MN-HA SS**
- **Network Address Identifier (NAI)**
- **SINR**
- **Service Display *LTE***
- **MN-AAA SS**
- **Carrier Status**
- **MN-AAA SPI**
- **PIN Status**
- **GSN**
- **Home Address**
- **Product *Internal LTE/EVDO***
- **Signal Strength (dBm)**
- **DEFPDP**
- **Model *Internal LTE/EVDO***
- **Manufacturer *CradlePoint Inc.***
- **Rev Tun**
- **Profile**
- **Battery level**
- **Secondary Home Agent**
- **Primary Home Agent**

Property	Value
Diagnosics	
Signal Error Rate	N/A
MN-HA SPI	300
Modem Firmware Version	33, SWI9600M_01.00.09.03AP R2492 CARMD-EN-10526 2011/07/01 19:31:09
Battery status	0
CGSN	[REDACTED]
MN-HA SS	Set
Network Address Identifier (NAI)	[REDACTED]@vzims.com
SINR	18.4
Service Display	LTE
MN-AAA SS	Set
Carrier Status	UP
MN-AAA SPI	2
PIN Status	READY
GSN	[REDACTED]
Home Address	0.0.0.0
Product	Internal LTE/EVDO
Signal Strength(dBm)	-49
DEFPDP	3
Model	Internal LTE/EVDO
Manufacturer	CradlePoint Inc.
Rev Tun	1
Profile	0 Enabled
Battery level	100
Secondary Home Agent	255.255.255.255
Primary Home Agent	255.255.255.255

General Information

- **Unique Identifier**
- **Port** *int1*
- **Profile 3** *VZWINTERNET*
- **Model** *Internal LTE/EVDO*
- **Type** *lte*

IP Information

- **DNS Servers**
- **IP Address**
- **Gateway**


Statistics

- **Incoming Bytes**
- **Outgoing Bytes**
- **Load Balance score**
- **Connection Uptime (secs)**


General Information	
Unique Identifier	
Port	int1
Profile 3:	VZWINTERNET
Model	Internal LTE/EVDO
Type	lte
IP Information	
DNS Servers	66.174.92.14,69.78.96.14
IP Address	10.175.241.78
Gateway	10.175.241.77
Statistics	
Incoming Bytes	10484779
Outgoing Bytes	1510171
Load Balance score	0
Connection Uptime (secs)	3:27:52

5.7 Statistics


The Statistics submenu option displays basic traffic statistics.

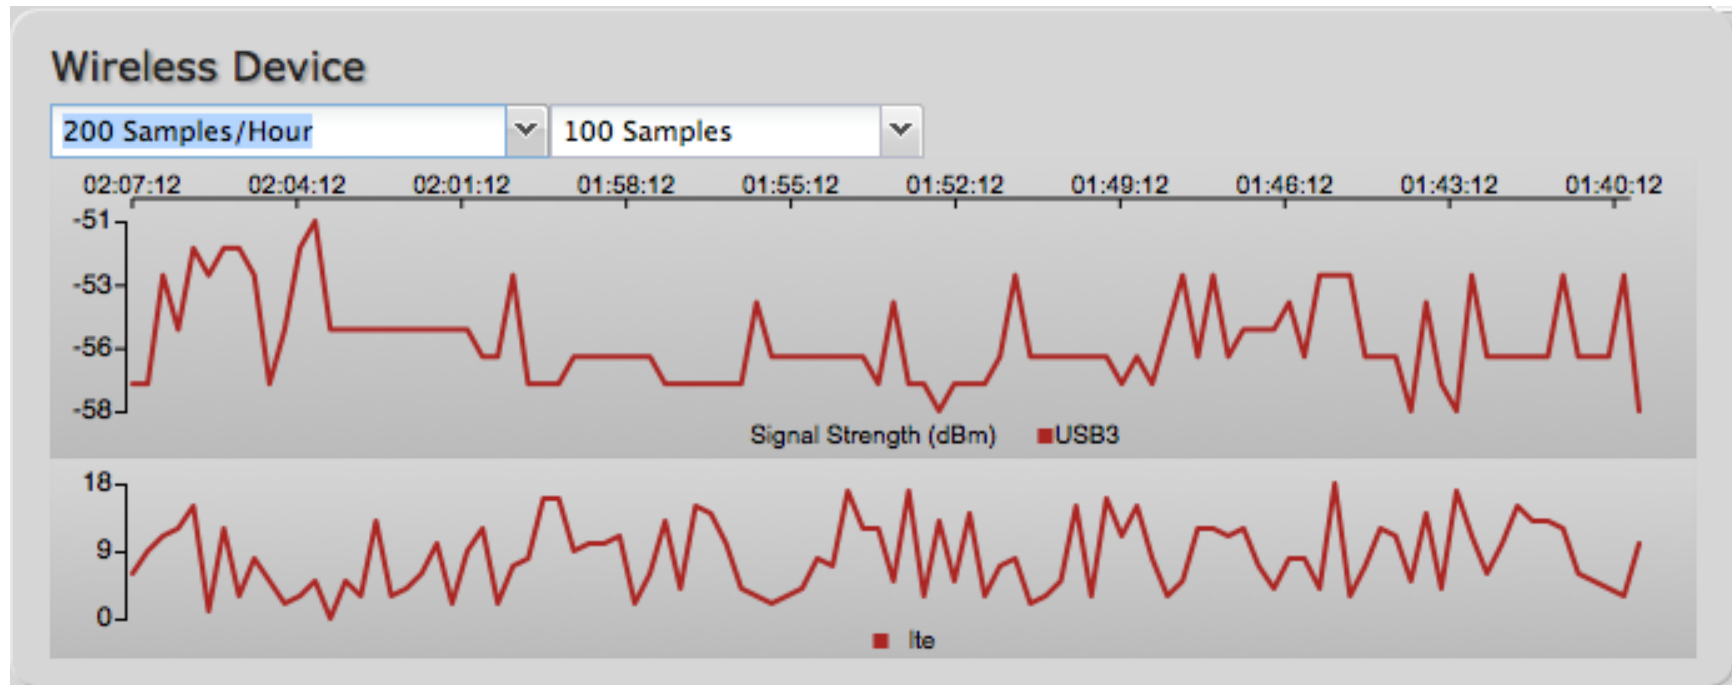

Wireless Statistics: View the signal strength and other wireless modem information. The wireless device's signal strength will only be displayed as long as it supports "Live Diagnostics." Sample rate and size can be adjusted from the dropdown boxes.

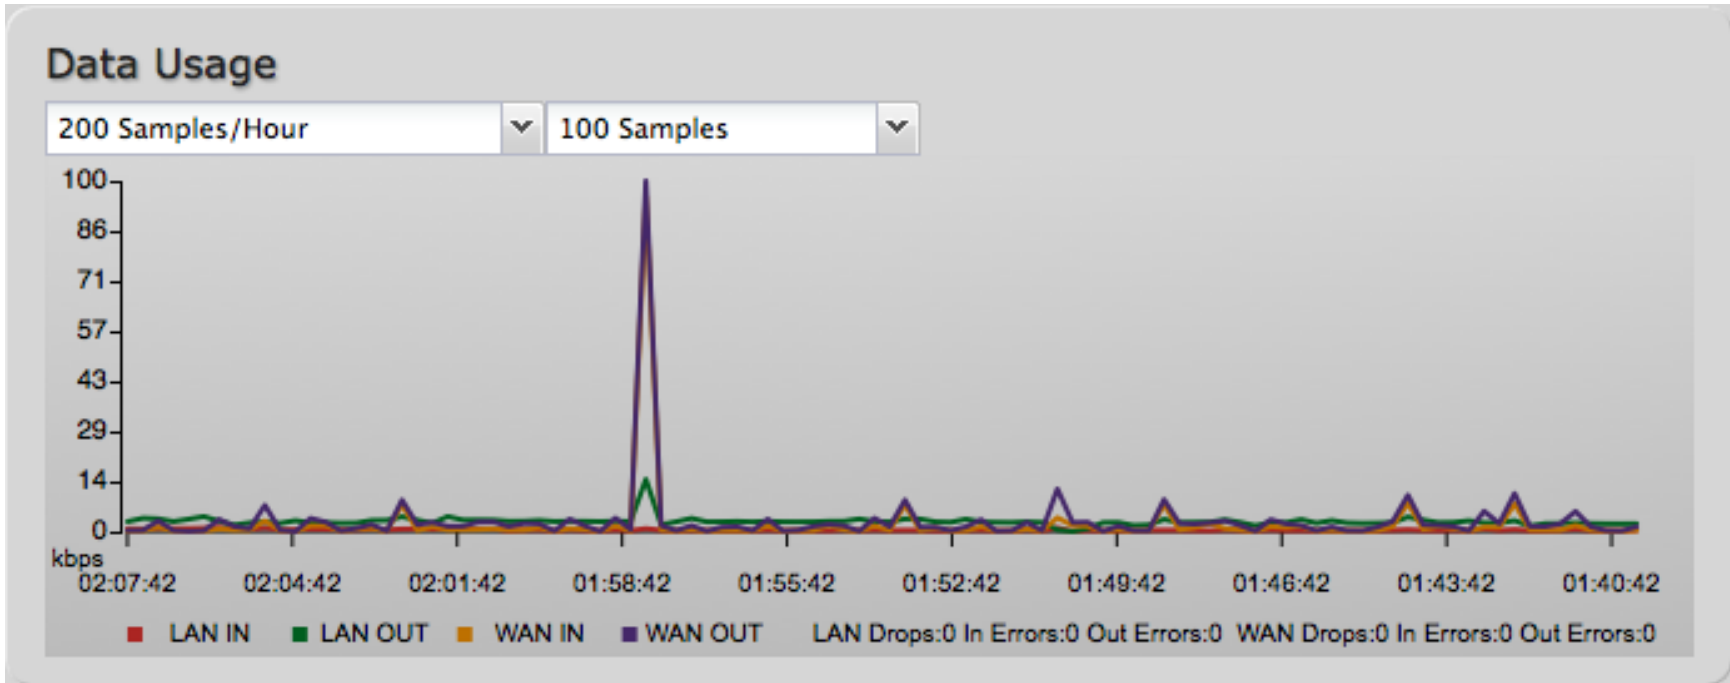

Data Usage: A measure of amount of information that is currently being sent or received through the network. Sample rate and size can be adjusted from the dropdown boxes.

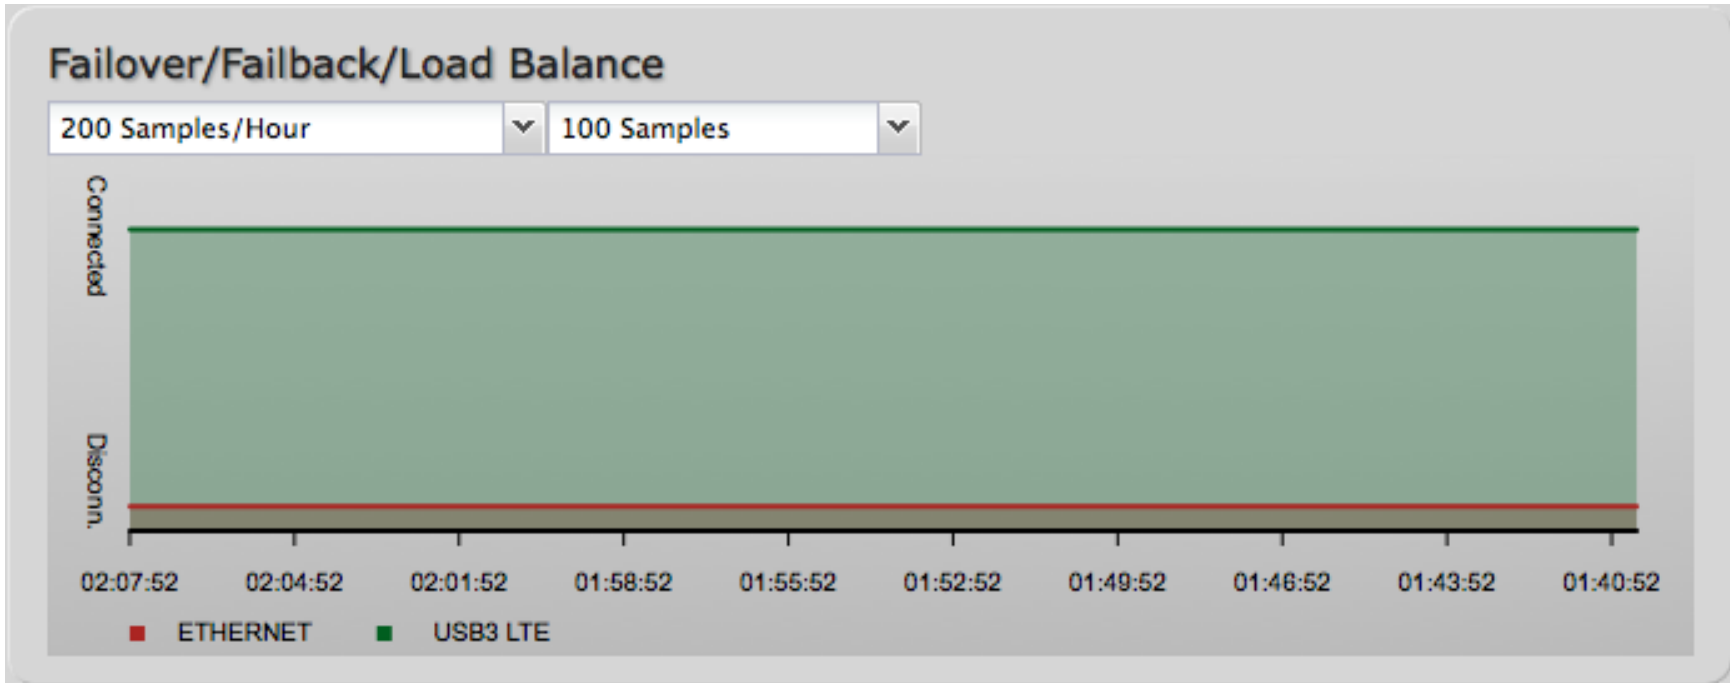

Failover/Failback/Load Balance: An easy way to view current connective states of the devices plugged into the router as compared to the past. Sample rate and size can be adjusted from the dropdown boxes.

5.8 System Logs

The router automatically logs (records) events of possible interest in its internal memory. If there is not enough internal memory for all events, logs of older events are deleted, but logs of the latest events are retained. The log options allow you to filter the router logs so you can easily find relevant messages. This router also has external Syslog Server support so you can send the log files to a computer on your network that is running a Syslog utility.

Auto Update: The logs automatically refresh whenever the router creates a new message.

Update: Click to check for new router messages.

Clear log: Clear the log file.


Save log to a file: This will open a dialog in your browser that will allow you to save the router's log to your computer.

Search: Enter keywords to find specific events.

Level: Select/Deselect from the following levels to filter messages by priority.

- Critical
- Error
- Warning
- Info

NOTE: The logs are erased whenever the router is rebooted or loses power..

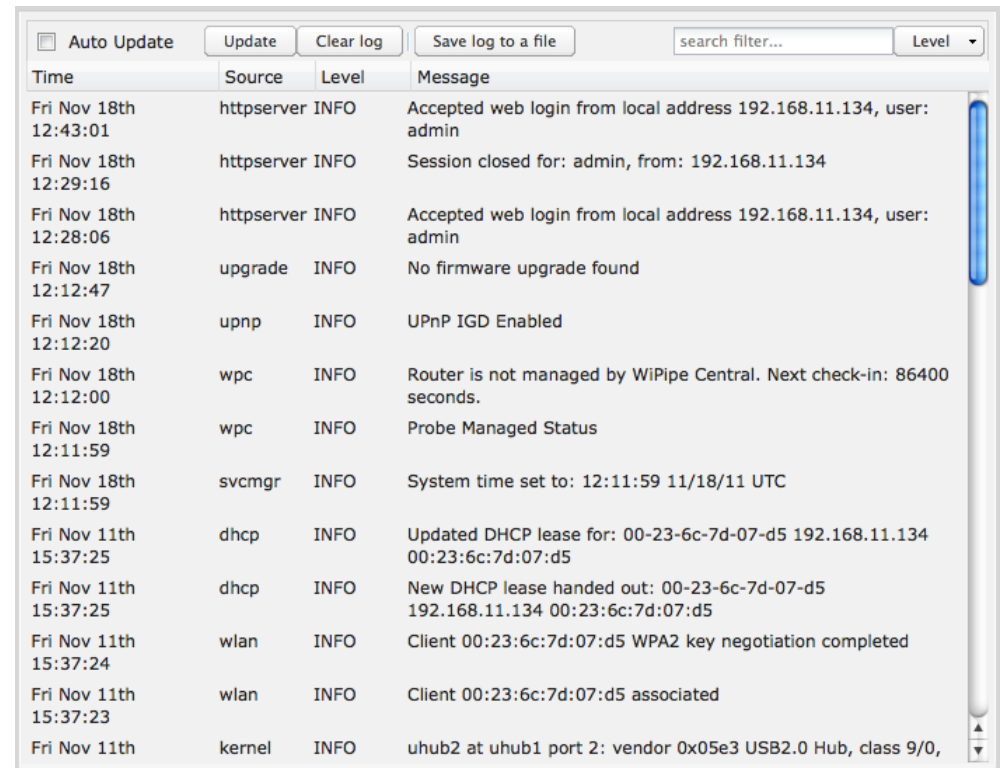


Time	Source	Level	Message
Fri Nov 18th 12:43:01	httpserver	INFO	Accepted web login from local address 192.168.11.134, user: admin
Fri Nov 18th 12:29:16	httpserver	INFO	Session closed for: admin, from: 192.168.11.134
Fri Nov 18th 12:28:06	httpserver	INFO	Accepted web login from local address 192.168.11.134, user: admin
Fri Nov 18th 12:12:47	upgrade	INFO	No firmware upgrade found
Fri Nov 18th 12:12:20	upnp	INFO	UPnP IGD Enabled
Fri Nov 18th 12:12:00	wpc	INFO	Router is not managed by WiPipe Central. Next check-in: 86400 seconds.
Fri Nov 18th 12:11:59	wpc	INFO	Probe Managed Status
Fri Nov 18th 12:11:59	svcmgr	INFO	System time set to: 12:11:59 11/18/11 UTC
Fri Nov 11th 15:37:25	dhcp	INFO	Updated DHCP lease for: 00-23-6c-7d-07-d5 192.168.11.134 00:23:6c:7d:07:d5
Fri Nov 11th 15:37:25	dhcp	INFO	New DHCP lease handed out: 00-23-6c-7d-07-d5 192.168.11.134 00:23:6c:7d:07:d5
Fri Nov 11th 15:37:24	wlan	INFO	Client 00:23:6c:7d:07:d5 WPA2 key negotiation completed
Fri Nov 11th 15:37:23	wlan	INFO	Client 00:23:6c:7d:07:d5 associated
Fri Nov 11th	kernel	INFO	uhub2 at uhub1 port 2: vendor 0x05e3 USB2.0 Hub, class 9/0,

5.9 VPN Tunnels

View the status of configured VPN tunnels. To set up or edit a VPN tunnel, go to **Internet** → **VPN Tunnels**.

Included information:

- Name
- Connections
- Status
- Protocols
- Transferred
- Direction
- Time Online

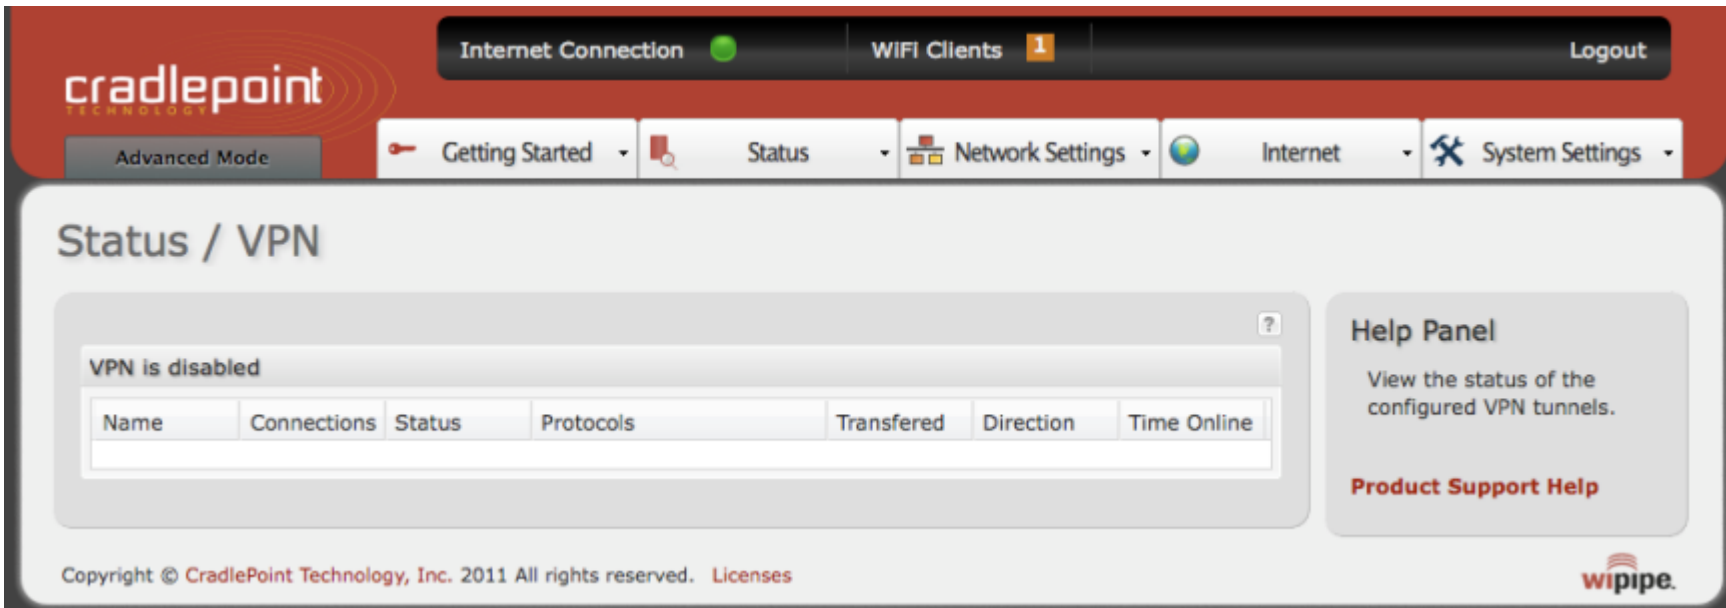

Internet Connection ● | WIFI Clients 1 | Logout


Advanced Mode | Getting Started | Status | Network Settings | Internet | System Settings

Status / VPN

VPN is disabled

Name	Connections	Status	Protocols	Transferred	Direction	Time Online
------	-------------	--------	-----------	-------------	-----------	-------------

Help Panel
View the status of the configured VPN tunnels.
[Product Support Help](#)

Copyright © CradlePoint Technology, Inc. 2011 All rights reserved. Licenses 

5.10 WiPipe QoS


View the breakdown of packets and bytes sent and received associated with each WiPipe QoS rule.

WiPipe QoS is Enabled		
Queue	Transmit (packets/bytes)	Receive (packets/bytes)
Default	3197 / 319.23 KB	4893 / 5.62 MB
limit upload	0 / 0.00 bytes	0 / 0.00 bytes

6 NETWORK SETTINGS

The Network Settings tab provides access to 8 submenu options for administering the following functions/tasks. These functions are all related to controlling the LAN (Local Area Network), the network you set up with the IBR600.

- Content Filtering
- DHCP Server
- DNS
- Firewall
- MAC Filter / Logging
- Routing
- WiFi / Local Networks
- WiPipe QoS



The screenshot displays the Cradlepoint management interface for the IBR600. The top navigation bar includes 'Internet Connection' (green indicator), 'WiFi Clients' (1), and 'Logout'. The main menu shows 'Advanced Mode', 'Getting Started', 'Status', 'Network Settings' (selected), 'Internet', and 'System Settings'. The 'Network Settings' dropdown menu is open, highlighting 'WiFi / Local Networks'. The main content area is titled 'Network Settings / WiFi / Local Networks' and features a 'Local IP Networks' section with 'Add', 'Edit', and 'Remove' buttons. Two network configurations are listed:

- Primary LAN: 192.168.0.1 / 255.255.255.0**
 - DHCP Server: Enabled
 - Routing Mode: NAT (Network Address Translation)
 - Access Control: Admin Access, UPnP Gateway
 - Attached Interfaces:
 - Ethernet Group: ID: lan, Port(s): 1, 2, 3, 4
 - WiFi Access Point: SSID: MBR1400-956
- Guest LAN: 192.168.10.1 / 255.255.255.0**
 - DHCP Server: Enabled
 - Routing Mode: HotSpot (Captive Portal) :: [Configure](#)
 - Access Control: LAN Isolation, UPnP Gateway
 - Attached Interfaces:
 - WiFi Access Point: SSID: CradlePoint Captive Portal

A 'Help Panel' on the right side states: 'This section is used to configure the network settings for your router.' and includes a 'Product Support Help' link.

6.1 Content Filtering

You have two main options for filtering content in a network created through your IBR600.

- 1) **Domain / URL Filter Rules:**
Create a list of websites that will be either disallowed (facebook.com, for example) or allowed exclusively (your company's website, for example).
- 2) **OpenDNS Content Filtering:**
Allows several options for filtering rules.

' and 'Filter by IP Addresses: '. At the bottom right are two buttons: 'Apply' and 'Undo'." data-bbox="375 169 954 465"/>

To create **Domain / URL Filter Rules**, simply input one or more website domain names or URLs. By default, these websites will be disallowed as part of a Blacklist. You can change this to a Whitelist to exclusively allow these sites.

Enable Whitelist: By default, Domain / URL filters allow you to **block** access from your network to any external domain or website. Enabling this as a Whitelist instead will allow access to only those sites in the list, blocking all other websites. Some sites use multiple domains, so each of them would need to be added to the list to get full site functionality. The default behavior enables the Whitelist for URLs only. Select Filter by IP Addresses to use IP addresses with the Whitelist.

Filter by IP Addresses: Enabling this will cause the router to block/allow URLs by the IP addresses they point to. This option will also force all DNS traffic through the router to ensure the correct IP address is returned during a DNS lookup.

Using IP address filtering with URLs is not recommended. Some URLs do not return all valid IP addresses with DNS, so these may be missed. Another possible problem is that example.com and www.example.com refer to the same website but may return different IP addresses.

6.1.1 OpenDNS


OpenDNS is a service that protects you online by filtering websites. OpenDNS protects you from phishing websites and URL typos once you select a filtering level.

- **None:** Disables Web filtering that uses OpenDNS,
- **Minimal:** Filters phishing and URL typos.
- **Good:** Filters any Web site containing pornography and enables typo and phishing redirection.
- **Better:** Filters more nudity, sexuality, and tasteless content.
- **Best:** Filters more nudity, sexuality, and tasteless content. Selecting “Best” will filter all content that is deemed adult content by OpenDNS.
- **Custom:** Custom OpenDNS settings. See below for more information.

In addition to the standard filtering levels, you have the following options for filter control:

Custom OpenDNS: To use the Custom OpenDNS setting you need to first create an OpenDNS account. You can create an account at [OpenDNS](#) and click on the “Create Account” link. Follow the onscreen instructions to create an account.

Once you have an OpenDNS account, enter your account information in order to use your Custom OpenDNS settings. Custom OpenDNS settings use the [DNS-O-MATIC](#) (an OpenDNS Service) API to update the IP address of your

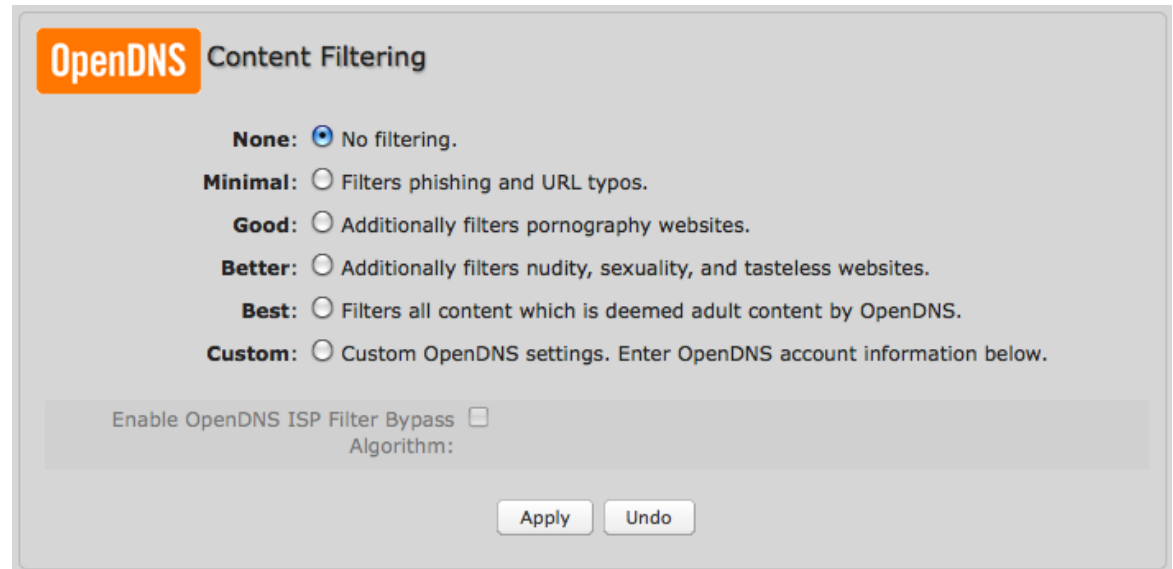

OpenDNS Content Filtering

None: No filtering.

Minimal: Filters phishing and URL typos.

Good: Additionally filters pornography websites.

Better: Additionally filters nudity, sexuality, and tasteless websites.


Best: Filters all content which is deemed adult content by OpenDNS.

Custom: Custom OpenDNS settings. Enter OpenDNS account information below.

Enable OpenDNS ISP Filter Bypass

Algorithm:

Apply Undo

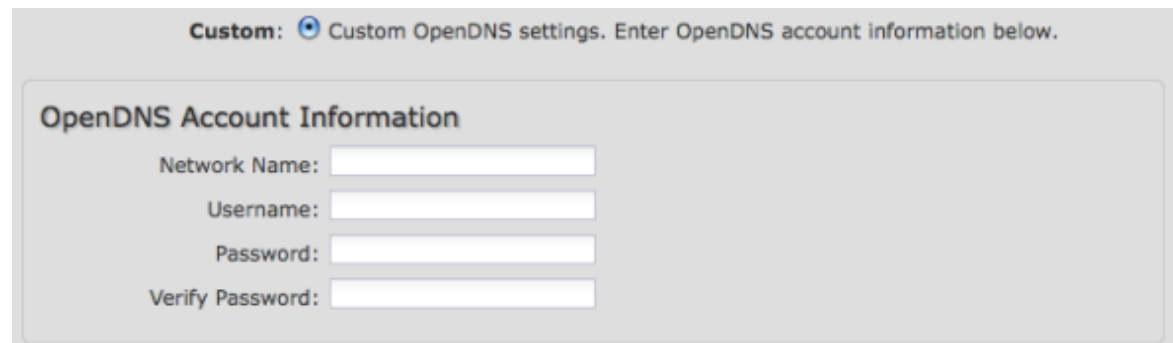

Custom: Custom OpenDNS settings. Enter OpenDNS account information below.

OpenDNS Account Information

Network Name:

Username:

Password:

Verify Password:

OpenDNS network. In order for Custom settings to work you need to login to [DNS-O-MATIC](#) using your OpenDNS credentials and "Add A Service" for the network specified above.

Enable OpenDNS ISP Filter Bypass Algorithm: It is possible that your Internet Service Provider (ISP) uses the port that OpenDNS is configured to access, port 53, which will prevent OpenDNS filtering. If OpenDNS does not appear to be working correctly, enabling this will attempt to bypass those ports when using an OpenDNS content filtering level.

6.2 DHCP Server

DHCP stands for Dynamic Host Configuration Protocol. The built-in DHCP server automatically assigns IP addresses to the computers and other devices on each local area network (LAN). In this section you can view a list of assigned IP addresses and reserve IP addresses for particular devices.

Active Leases: A list of devices that have been provided DHCP leases. The DHCP server automatically assigns these leases. This list will not include any devices that have static IP addresses on the network.

Reservations: This option lets you reserve IP addresses; you can assign the same IP address to the network device with the specified MAC address any time it requests an IP address. This is almost the same as

when a device has a static IP address except that the device must still request an IP address from the router. The router will provide the device the same IP address every time. DHCP Reservations are helpful for server computers on the local network that are hosting applications such as Web and FTP. Servers on your network should either use a static IP address or a reservation.

While you have the option to manually input the information to reserve an IP address (Hostname, Hardware Addr, IP Addr), it is much simpler to select a device under the **Active Leases** section and click “**Reserve**.” The selected device’s information will automatically be added under **Reservations**.

Active Leases					
<input type="button" value="Reserve"/>					
	Hostname	IP Addr	Hardware Addr	Client ID	Expiration
<input type="checkbox"/>	00-23-6c-7d-07-d5	192.168.2.134	00:23:6c:7d:07:d5	01:00:23:6c:7d:07:c	9 hours, 20 mins

Reservations				
<input type="button" value="Add"/> <input type="button" value="Edit"/> <input type="button" value="Remove"/>				
	Hostname	Hardware Addr	IP Addr	Enabled
<input type="checkbox"/>				


6.3 DNS

DNS, or Domain Name System, is a naming system that translates between domain names (www.cradlepoint.com, for example) and Internet IP addresses (206.207.82.197). A DNS server acts as an Internet phone book, translating between names that make sense to people and the more complex numerical identifiers. The DNS page for the IBR600 has these distinct functions:

- **DNS Settings:** By default your router is set to automatically acquire DNS servers through your Internet provider (Automatic). **DNS Settings** allows you to specify DNS servers of your choosing instead (Static).
- **Dynamic DNS Configuration:** Allows you to host a server (Web, FTP, etc.) using a domain name that you have purchased (www.yourname.com) with your dynamically assigned IP address.
- **Known Hosts Configuration:** Allows you to map a name (printer, scanner, laptop, etc.) to an IP address of a device on the network.

6.3.1 DNS Settings

You have the option to choose specific DNS servers for your network instead of using the DNS servers assigned by your Internet provider. The default DNS servers are usually adequate. You may want to assign DNS servers if the default DNS servers are performing poorly, if you want WiFi clients to access DNS servers that you use for customized addressing, or if you have a local DNS server on your network.

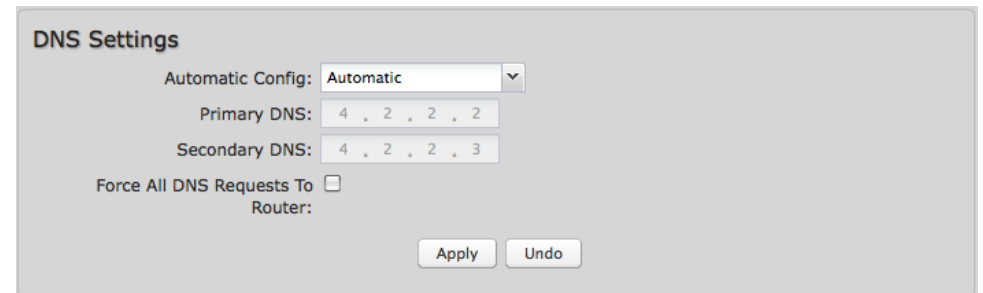

Automatic Config: Automatic or Static (default: Automatic). Switching to “Static” enables you to set specific DNS servers in the **Primary DNS** and **Secondary DNS** fields.

Primary DNS and **Secondary DNS:** If you choose to specify your DNS servers, then enter the IP addresses of the servers you want as your primary and secondary DNS servers in these fields. For example, Google Public DNS servers have the IP addresses 8.8.8.8 and 8.8.4.4 while 4.2.2.2 and 4.2.2.3 are servers from Level 3 Communications.

Force All DNS Requests To Router: Enabling this will redirect all DNS requests from LAN clients to the router's DNS server. This will allow the router even more control over IP addresses even when clients have their own DNS servers statically set.

6.3.2 Dynamic DNS Configuration

The Dynamic DNS feature allows you to host a server (Web, FTP, etc.) using a domain name that you have purchased (www.yourname.com) with your dynamically assigned IP address. Most broadband Internet Service Providers assign dynamic (changing) IP addresses. When you use a Dynamic DNS service provider, you can enter your host name to connect to your server, no matter what your IP address is.

Enable Dynamic DNS Service: Enable this option only if you have purchased your own domain name and registered with a Dynamic DNS service provider.

Server Type. Select a Dynamic DNS service provider from the pull-down list:


- www.DynDNS.org
- www.DNSomatic.com
- www.ChangeIP.com
- www.NO-IP.com
- Custom Server (DynDNS clone)

Custom Server Address. Only available if you select Custom Server from the Server Address dropdown list. Enter your custom dynamic DNS server address here. The server must support the Dynamic DNS protocol. See www.dyndns.org for details. Example: **myserver.mydomain.net**.

Host name: Enter your host name, fully qualified. For example: **myhost.mydomain.net**.

User name: Enter the user name or key provided by the Dynamic DNS service provider. If the Dynamic DNS provider supplies only a key, enter that key for both the **User name** and **Password** fields.

Password: Enter the password or key provided by the Dynamic DNS service provider.

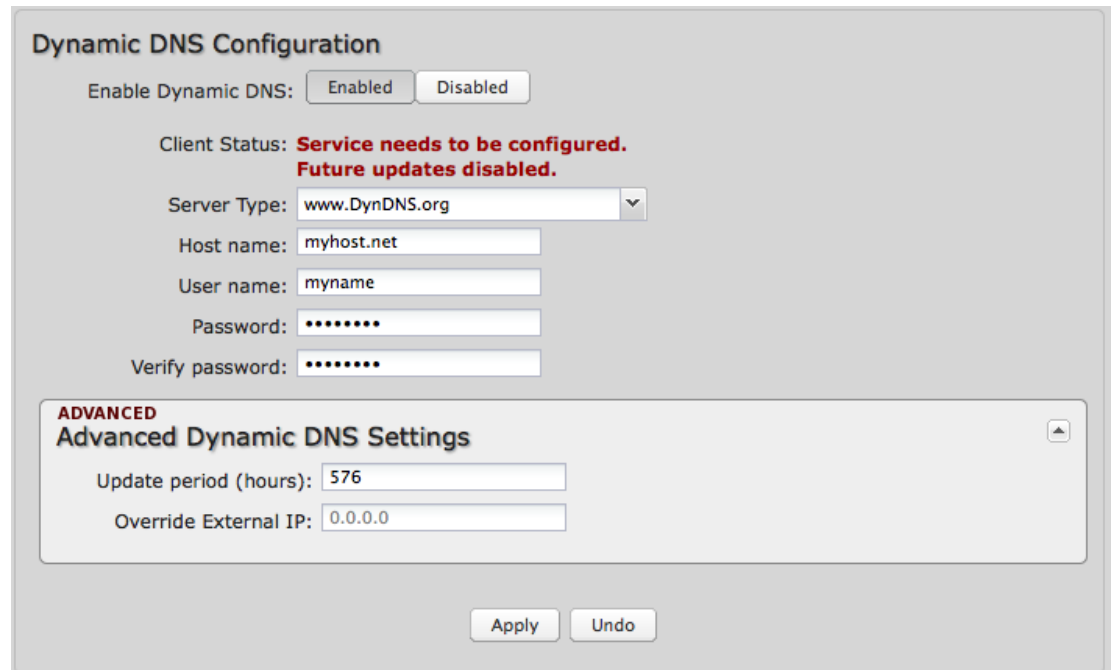

Dynamic DNS Configuration

Enable Dynamic DNS:

Client Status: **Service needs to be configured.
Future updates disabled.**

Server Type:

Host name:

User name:

Password:

Verify password:

ADVANCED
Advanced Dynamic DNS Settings

Update period (hours):

Override External IP:

6.3.3 Advanced Dynamic DNS Settings

Update period (hours). (Default: 576) The time between periodic updates to the Dynamic DNS, if your dynamic IP address has not changed. The timeout period is entered in hours so valid values are from 1 to 8760.

Override External IP. The external IP is usually configured automatically during connection. However, in situations where the unit is within a private network behind a firewall or router, the network's external IP address will have to be manually configured in this field.

You may find out what your external IP address is by going to <http://myip.dnsomatic.com/> in a web browser.

6.3.4 Known Hosts Configuration

The Known Hosts Configuration feature allows you to map a name (printer, scanner, laptop, etc.) to an IP address of a device on the network. This assigns a new hostname that can be used to conveniently identify a device within the network, such as an office printer.

Click **Add** to name a device in your network.

Fill in the following fields:

- **Hostname:** Choose a name that is meaningful to you. No spaces are allowed in this field.
- **IP address:** The address of the device within your network.

EXAMPLE: a personal laptop with IP address 192.168.0.164 could be assigned the name "MyLaptop".

Since the assigned name is mapped to an IP address, the device's IP address should not change. To ensure that the device keeps the same IP address, go to the "Reservations" section under **Network Settings** → **DHCP Server** and reserve the IP address for the device.



Known Hosts Configuration

Add Edit Remove

Hostname	IP address
MyLaptop	192.168.0.164



Host Entry

Assign a hostname to an IP address.

Hostname:

IP address:

Submit

6.4 Firewall

The router automatically provides a firewall. Unless you configure the router to the contrary, the router does not respond to unsolicited incoming requests on any port, thereby making your LAN invisible to cyber attackers.

However, some network applications cannot run with a tight firewall. Those applications need to selectively open ports in the firewall to function correctly. The options on this page control ways of opening the firewall to address the needs of specific types of applications.

6.4.1 Port Forwarding Rules

A port forwarding rule allows traffic from the Internet to reach a computer on the inside of your network. For example, a port forwarding rule might be used to run a Web server.

Exercise caution when adding new rules as they impact the security of your network.


Click **Add** to create a new port forwarding rule, or select an existing rule and click **Edit**.

Add/Edit Port Forwarding Rule

- **Name:** Name your rule.
- **Use Port Range:** Changes the selection options to allow you to input a range of ports (if desired).
- **Internet Port(s):** The port number(s) as you want it defined on the Internet. Typically these will be the same as the local port numbers, but they do not have to be. These numbers will be mapped to the local port numbers.
- **Local Computer:** Select the IP address of an attached device from the dropdown menu, or manually input the IP address of a device.



<input type="checkbox"/>	Name	Internet Port(s)	Forwarding to	Protocol

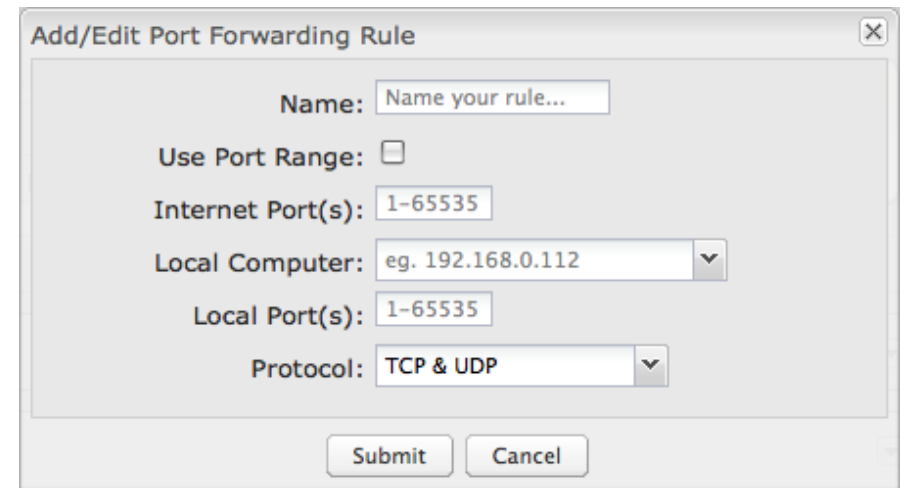

Add/Edit Port Forwarding Rule

Name:

Use Port Range:


Internet Port(s):

Local Computer:

Local Port(s):

Protocol:

- **Local Port(s):** The port number(s) that corresponds to the service (Web server, FTP, etc) on a local computer or device. For example, you might input “80” in the **Local Port(s)** field to open a port for a Web server on a computer within your network. The **Internet Port(s)** field could then also be 80, or you could choose another port number that will be used across the Internet to access your Web server. If you choose a number other than 80 for the Internet Port, connections to that number will be mapped to 80—and therefore the Web server—within your network.
- **Protocol:** Select from the following options in the dropdown menu:
 - TCP
 - UDP
 - TCP & UDP
- Click **Submit** to save your completed port forwarding rule.

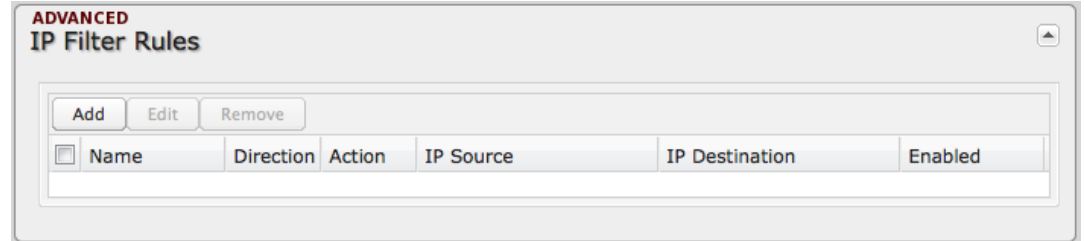

ADVANCED
IP Filter Rules

Add Edit Remove

<input type="checkbox"/>	Name	Direction	Action	IP Source	IP Destination	Enabled

6.4.2 IP Filter Rules (Advanced)


An "Incoming" IP filter rule restricts remote access to computers on your local network. "Outgoing" filter rules prevent computers on your local network from initiating communication to the address range specified in the rule.

This feature is especially useful when combined with port forwarding and/or DMZ to restrict remote access to a specified host or network range. For example, in order to host a server you might have opened ports with a port forwarding rule that could expose your LAN to cyber attacks. With an incoming IP filter rule, you can restrict the access to your LAN to only known devices.

- **Name:** Name your rule.
- **Enabled:** Selected by default.
- **Direction:** "Any," "Incoming," or "Outgoing"
- **Action:** "Allow" or "Deny"
- **Protocol:** Any, ICMP, TCP, UDP, GRE, ESP, or SCTP.

IP Source / IP Destination

- **Network IP:** Optional field to specify a matching network IP address for this rule to match against.
- **Netmask:** Use this to define a subnet size this rule will match against.
- **Port(s):** Use for a single port or a range of ports. Fill in the left side for a single port.

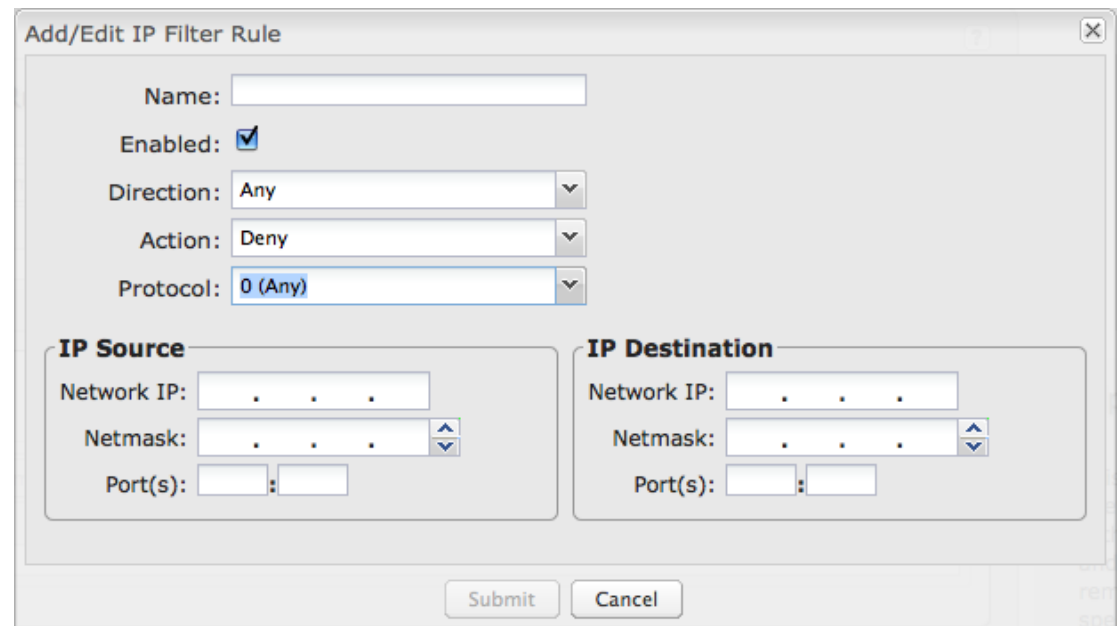

Use **Network IP**, **Netmask**, and **Port(s)** to specify the ports and addresses for which the rule applies. You can specify a range of ports or a single port. Similarly, the netmask can be used to define either a range of addresses (i.e. 255.255.255.0) or a single address (255.255.255.255).

If you leave these values blank, then all IP addresses and ports will be included. **IP Source** and **IP Destination** options can be used to differentiate between the directions that packets go. You could permit packets to come from particular IP addresses but then not allow packets to return to those addresses.

Example of an IP Filter Rule: Suppose you have opened a port in your firewall in order to run a server. Someone, Johnny, is abusing that opening, so you would like to restrict his access. Create a rule that will deny Johnny's IP address.

Add IP Filter Rule

- **Name:** No more Johnny
- **Enabled:** Selected
- **Direction:** Incoming
- **Action:** Deny
- **Protocol:** Any

IP Source


- **Network IP:** 172.22.24.160 (Johnny's IP address)
- **Netmask:** 255.255.255.255 (This netmask restricts the rule to one single address).
- **Port(s):** 80

6.4.3 DMZ: DeMilitarized Zone (Advanced)

A DMZ host is effectively not firewalled in the sense that any computer on the Internet may attempt to remotely access network services at the DMZ IP address. Typical uses involve running a public Web server or sharing files.

Input the **IP Address** of a single device in your network to create a DeMilitarized Zone for that device. To ensure that the IP address of the selected device remains consistent, go to the “Reservations” section under **Network Settings** → **DHCP Server** and reserve the IP address for the device.

As with port forwarding, use caution when enabling the DMZ feature as it can threaten the security of your network. Only use DMZ as a last resort.

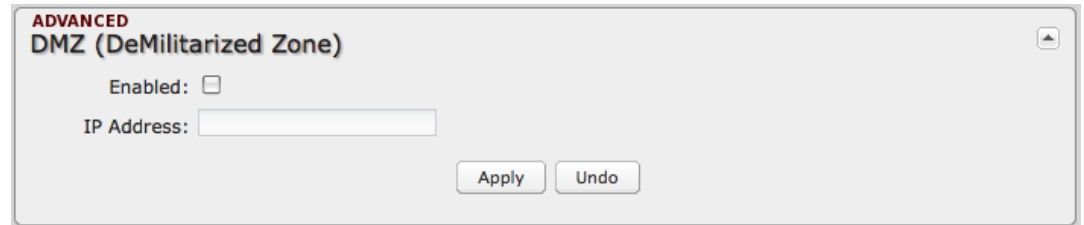


6.4.4 Firewall Options (Advanced)

Anti-Spoof: Anti-Spoof checks help protect against malicious users faking the source address in packets they transmit in order to either hide themselves or to impersonate someone else. Once the user has spoofed their address they can launch a network attack without revealing the true source of the attack or attempt to gain access to network services that are restricted to certain addresses.

Packet Normalization: Normalizing packets helps secure the router in untrusted environments. It does so by "scrubbing" packets that are ambiguous or might represent a break-in attempt. Packet Normalization also helps insure reliable connectivity for some WAN devices such as WiMAX modems. Only disable this option if you are sure you do not need it.


Static NAT Ports: If enabled the source port does not translate in TCP and UDP packets during NAT. Some NAT traversal protocols such as STUN(T) require that the source port stay the same when traversing the firewall.

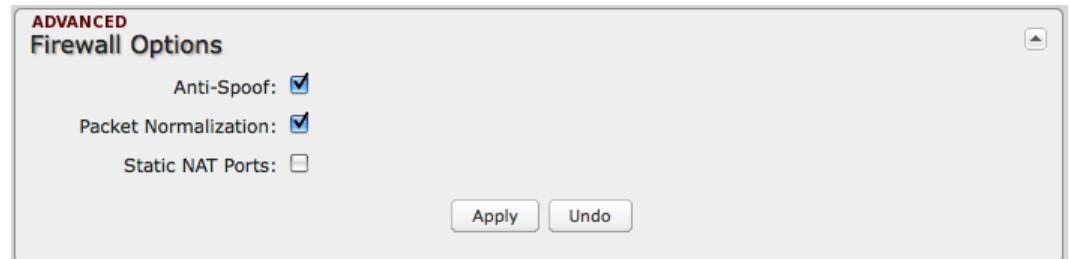

6.4.5 Remote Administration Access Control (Advanced)

Enable Remote Administration Access Control:

Selecting this option allows you to make remote administration tools available to only the specified IP addresses. Access from all other IP addresses will be blocked. This option only filters IP addresses: you must enable Remote Management separately ([System Settings](#) → [Administration](#)).

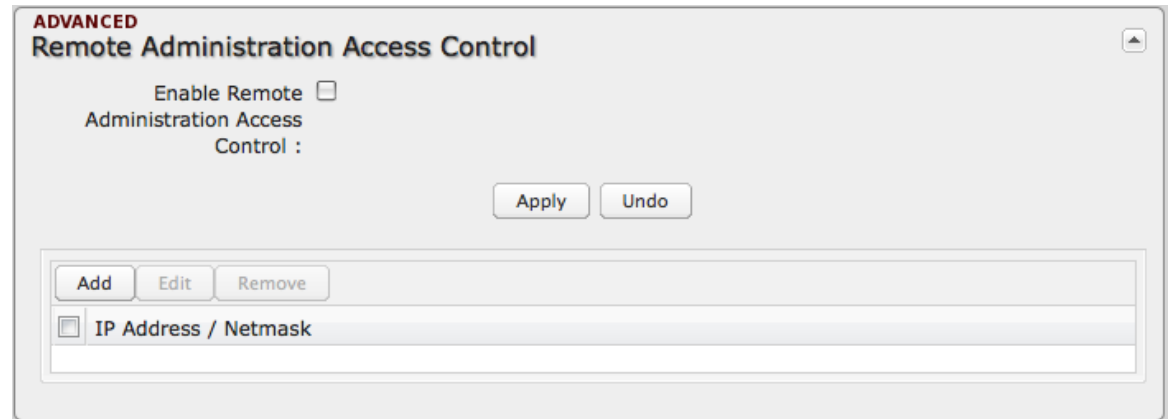


The services affected by this include remote HTTP, HTTPS, SNMP, and SSH configuration tools. This does not restrict access to LAN-based administration, i.e. devices within your network still have administration access. The individual remote administration services can be enabled under [System Settings](#) → [Administration](#) --> Remote Management.

Remote Administration Access Control Editor

IP Address: The IP address that will be allowed to access administrative services through the WAN.

Netmask (Optional): The netmask allows you to specify what IP address sets will be allowed access. If this field is left empty a netmask of 255.255.255.255 will be used, which means that only the single specified IP address would have remote administration access.

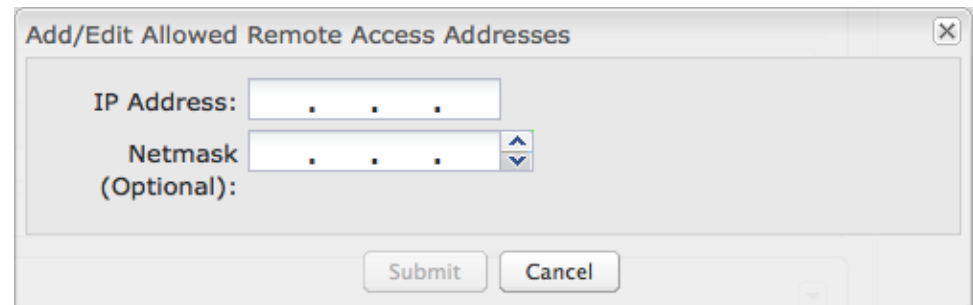

6.1 MAC Filter / Logging

A MAC (Media Access Control) address is a unique identifier for a computer or other device. This page allows you to manage clients by MAC address. You can filter clients by MAC addresses and/or keep a log of devices connected to your router.

6.1.1 Filter Configuration


The MAC Filter allows you to create a list of devices that have either exclusive access (whitelist) or no access (blacklist) to your wireless LAN.

Enabled: Click to allow MAC Filter options.

Whitelist: Select either “Whitelist” or “Blacklist” from a dropdown menu. In “Whitelist” mode, the router will restrict WiFi access to all computers except those contained in the “MAC Filter List” panel. In “Blacklist” mode, listed devices are completely blocked from WiFi access.

MAC Filter List (Whitelist or Blacklist): Add devices to either your whitelist or blacklist simply by inputting each device’s MAC address.

NOTE: Use caution when using the MAC Filter to avoid accidentally blocking yourself from accessing the router.

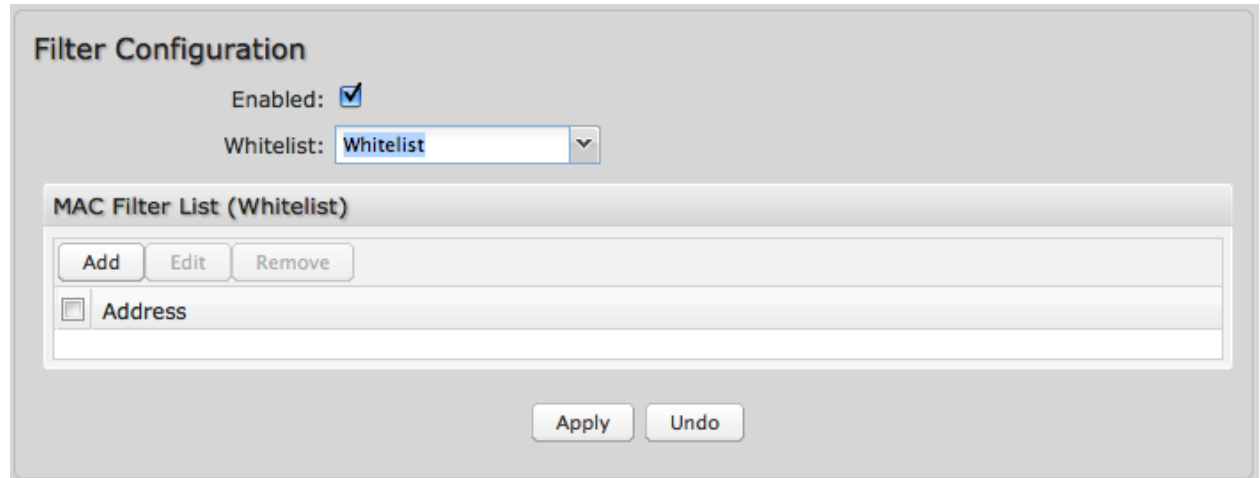

Filter Configuration

Enabled:

Whitelist: Whitelist ▼

MAC Filter List (Whitelist)

<input type="button" value="Add"/> <input type="button" value="Edit"/> <input type="button" value="Remove"/>	
<input type="checkbox"/>	Address
<input type="checkbox"/>	

6.1.2 MAC Logging Configuration

Enable MAC Logging: Enabling MAC Logging will cause the router to log MAC addresses that are connected to the router. MAC addresses that you do not want to have logged (addresses that you expect to be connected) should be added to the “Ignored MAC Addresses” list.


You can configure the router to send an alert if a connected device has a MAC address that the router doesn’t recognize. Go to **System Settings** → **Device Alerts** to set up these email alerts.

Ignored MAC Addresses: This is the list of MAC addresses that will not produce an alert or a log entry when they are connected to the router. These should be MAC addresses that you expect to be connected to the router.

To add MAC addresses to this list, simply select devices shown in the MAC Address Log and click “Ignore.” You can also add addresses manually.

MAC Address Log: This shows the last 64 MAC addresses that have connected to the router, as well as which interface was used to connect.

The time/date that is logged is the time of the first connection. The page may need to be refreshed to show the most recent log entries.

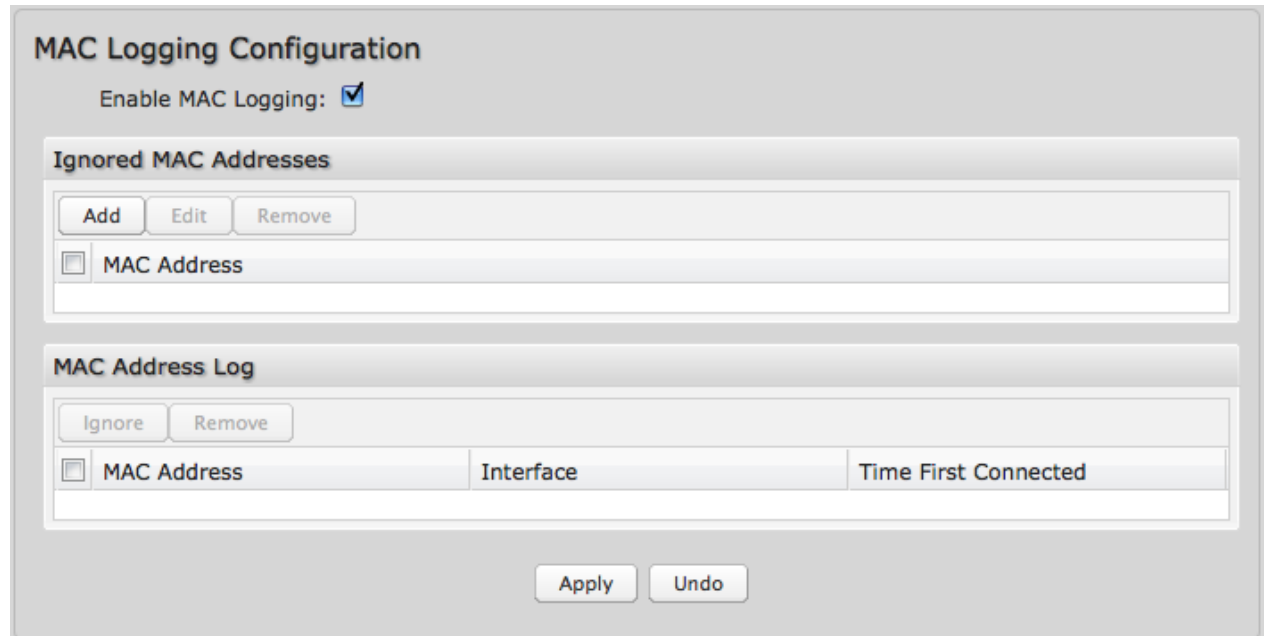

MAC Logging Configuration

Enable MAC Logging:

Ignored MAC Addresses

Add Edit Remove

MAC Address
<input type="checkbox"/> MAC Address

MAC Address Log

Ignore Remove

MAC Address	Interface	Time First Connected
<input type="checkbox"/> MAC Address		

Apply Undo

6.2 Routing

Add a new static route to the IP routing table or edit/remove an existing route.

Static routes are unnecessary for most users. They are typically only used in networks with more than one layer, such as when there is a network within a network so that packet destinations are hidden behind an additional router. Adding a static route is a way of telling the router about an additional step that packets will need to take to reach their destination.

Click **Add** to create a new static route.

IP/Network Address: The IP address of the target network or host.

Type: Select from a dropdown list to specify the type of the target:


- Network
- Host

Netmask: The Netmask, along with the IP address, defines the network the computer belongs to and which other IP addresses the computer can see in the same LAN. An IP address of 192.168.0.1 along with a Netmask of 255.255.255.0 defines a network with 256 available IP addresses from 192.168.0.0 to 192.168.0.255.


NOTE: 255.255.255.255 is used to signify only the host that was entered in the IP/Network Address field.

Gateway: Specifies the next hop to be taken if this route is used. A gateway of 0.0.0.0 implies there is no next hop, and the IP address matched is directly connected to the router on the interface specified: **LAN** or **WAN**.

Allow Network Access: (Default: Deselected.) Some static routes will need an IP Filter Rule via the Firewall to allow packets through the route without being blocked. Selecting this option automatically creates this IP Filter Rule. If the **IP/Network Address** falls outside the LAN IP range, you probably need to select this option.

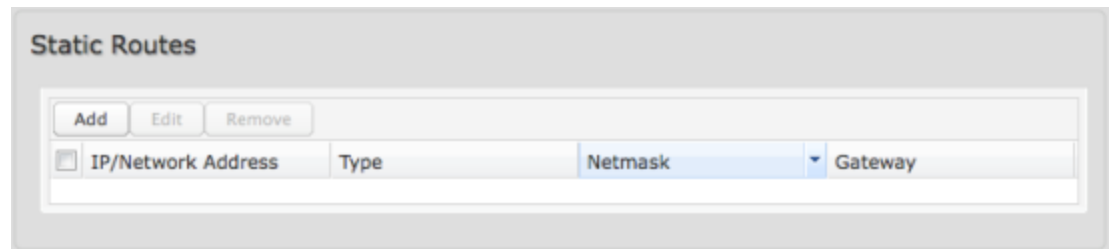

IP/Network Address	Type	Netmask	Gateway

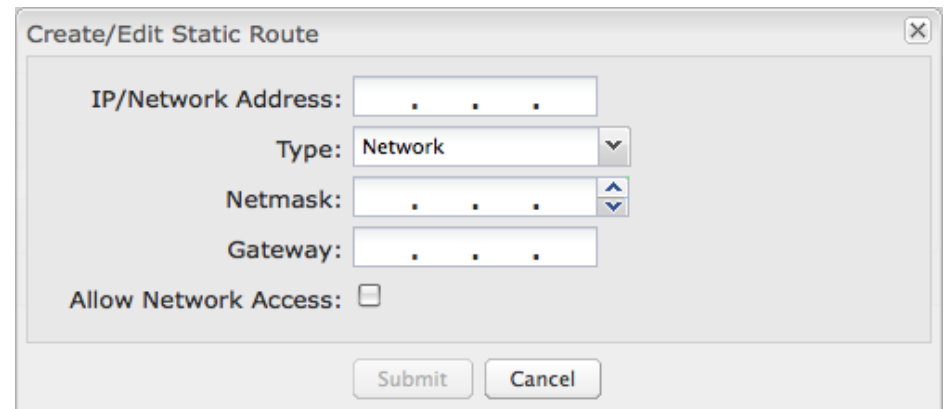

Create/Edit Static Route

IP/Network Address: . . .

Type: Network

Netmask: . . .

Gateway: . . .

Allow Network Access:

Submit Cancel

6.3 WiFi / Local Networks


This section is used to configure the settings for wireless networks created by your router. Note that changes made in this section may also need to be duplicated on wireless devices that you want to connect to your wireless network.

For example, if you change a LAN's IP address, devices within that network will lose connection. They will have to reconnect to the network.

The user can set up multiple networks on the IBR600, each with its own unique configuration and its own selection of interfaces. Each local network can be attached to any of the following types of interfaces:

- WiFi
- Ethernet
- VLAN

For example, one network might be just an isolated WiFi hotspot for guests, while another might be the main network with administrative access, an Ethernet port, a password-protected WiFi SSID, and a VLAN interface.

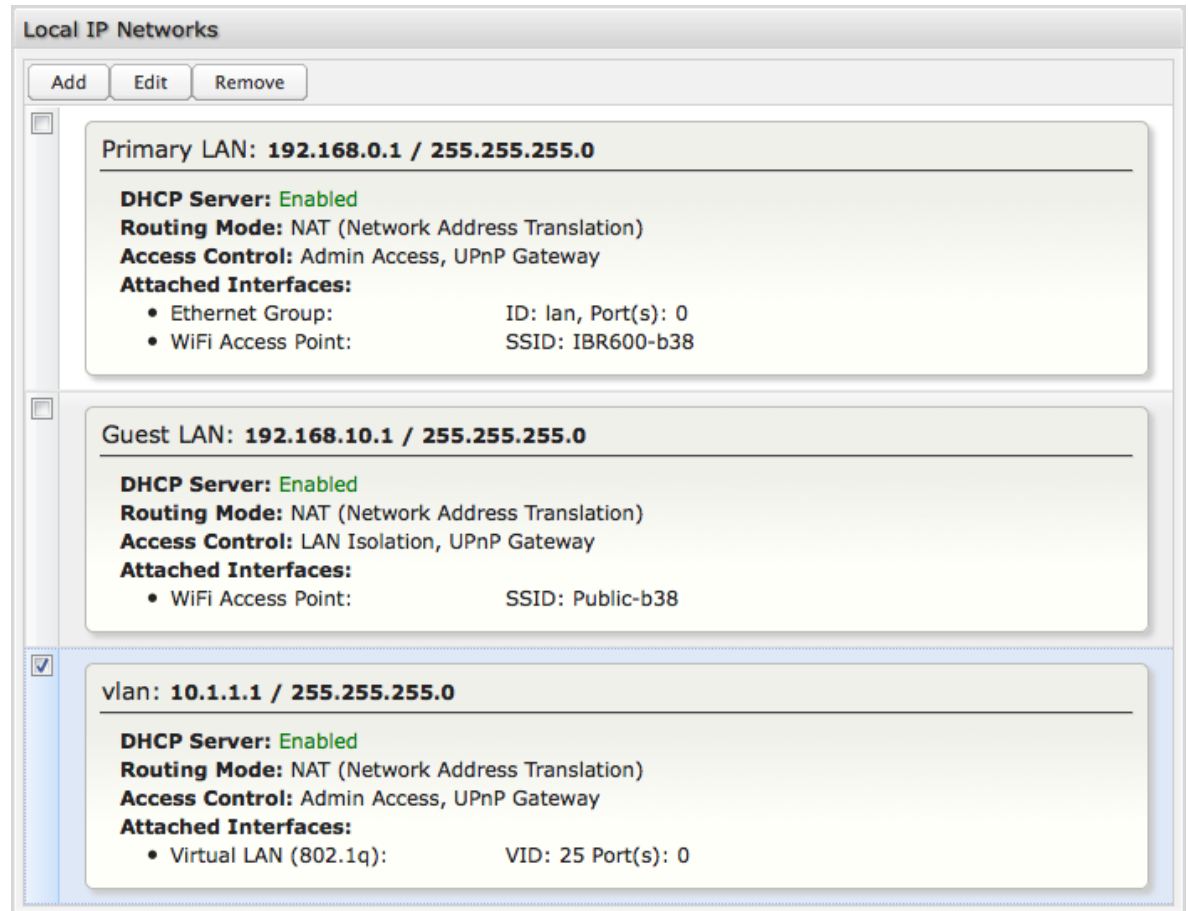

Local IP Networks

Buttons: Add, Edit, Remove

Primary LAN: **192.168.0.1 / 255.255.255.0**

DHCP Server: Enabled

Routing Mode: NAT (Network Address Translation)

Access Control: Admin Access, UPnP Gateway

Attached Interfaces:

- Ethernet Group: ID: lan, Port(s): 0
- WiFi Access Point: SSID: IBR600-b38

Guest LAN: **192.168.10.1 / 255.255.255.0**

DHCP Server: Enabled

Routing Mode: NAT (Network Address Translation)

Access Control: LAN Isolation, UPnP Gateway

Attached Interfaces:

- WiFi Access Point: SSID: Public-b38

vlan: **10.1.1.1 / 255.255.255.0**

DHCP Server: Enabled

Routing Mode: NAT (Network Address Translation)

Access Control: Admin Access, UPnP Gateway

Attached Interfaces:

- Virtual LAN (802.1q): VID: 25 Port(s): 0

6.3.1 Local IP Networks

Local IP Networks displays the following information for each network:

- **Network Name**
- **IP address/Netmask**
- **DHCP Server** (Enabled/Disabled)
- **Routing Mode** (NAT, Standard, Hotspot, Disabled)
- **Access Control** (Admin Access, UPnP Gateway, LAN Isolation)
- **Attached Interfaces** (Ethernet ports, WiFi, VLAN)

Primary LAN: **192.168.2.1 / 255.255.255.0**

DHCP Server: Enabled

Routing Mode: NAT (Network Address Translation)

Access Control: Admin Access, UPnP Gateway

Attached Interfaces:

- Ethernet Group: ID: lan, Port(s): 1, 2
- WiFi Access Point: SSID: TechWrite

Click **Add** to configure a new network, or select an existing network and click **Edit** to view configuration options.

HotSpot (Captive Portal)

When you set a network as a “Hotspot” under **Routing Mode**, you will also need to:

- 1) Configure hotspot settings under **System Settings → Hotspot Services**.

This is where you can

configure a “Terms of Service” agreement or select a website for redirection, for example. Click on **Configure** to link to the Hotspot Services page.

2) If you want a hotspot that includes WiFi, first set one of your WiFi interfaces to “Open” for its Security Mode and attach this interface to your hotspot network. Otherwise guests will need to know the password to connect to the WiFi network even before viewing a Terms of Service page (or other hotspot options).

Finally, make sure your WiFi interface is “Enabled”.

Guest LAN: **192.168.10.1 / 255.255.255.0**

DHCP Server: Enabled

Routing Mode: HotSpot (Captive Portal) :: [Configure](#)

Access Control: LAN Isolation, UPnP Gateway

Attached Interfaces:

- WiFi Access Point: SSID: CradlePoint Captive Portal

6.3.2 Local Network Editor

The **Local Network Editor** contains the following tabs: IP Settings, Interfaces, Access Control, DHCP Server and Schedule.

IP Settings:

Name: This primarily helps to identify this network during other administration tasks.

Hostname: [Default: cp (for CradlePoint)] The hostname is the DNS name associated with the router's local area network IP address.

NOTE: You can access the router's administration pages by typing the hostname into your browser, so if you change "cp" to another hostname, you can access the administration pages through the new hostname.

IP Address: This is the address used by the router for local area network communication. Changes to this parameter may require a restart to computers on this network.


Each network must have a distinct IP address. Most users will want an address from one of the following private IP ranges:

- 10.0.0.1 - 10.255.255.1
- 172.16.0.1 - 172.31.255.1
- 192.168.0.1 - 192.168.255.1

NOTE: The final number does not have to be 1, but it is a simple, logical convention for routers that leaves higher numbers free for other devices.

Netmask: (Default: 255.255.255.0) The netmask controls how many IP addresses can be used in this network. The default value allows for 254 IP addresses, which is enough in most cases.

Routing Mode: (Default: NAT) Each network can use a unique routing mode to connect to the Internet and other local networks. NAT is desirable for most configurations. Select from the following options in the dropdown list:

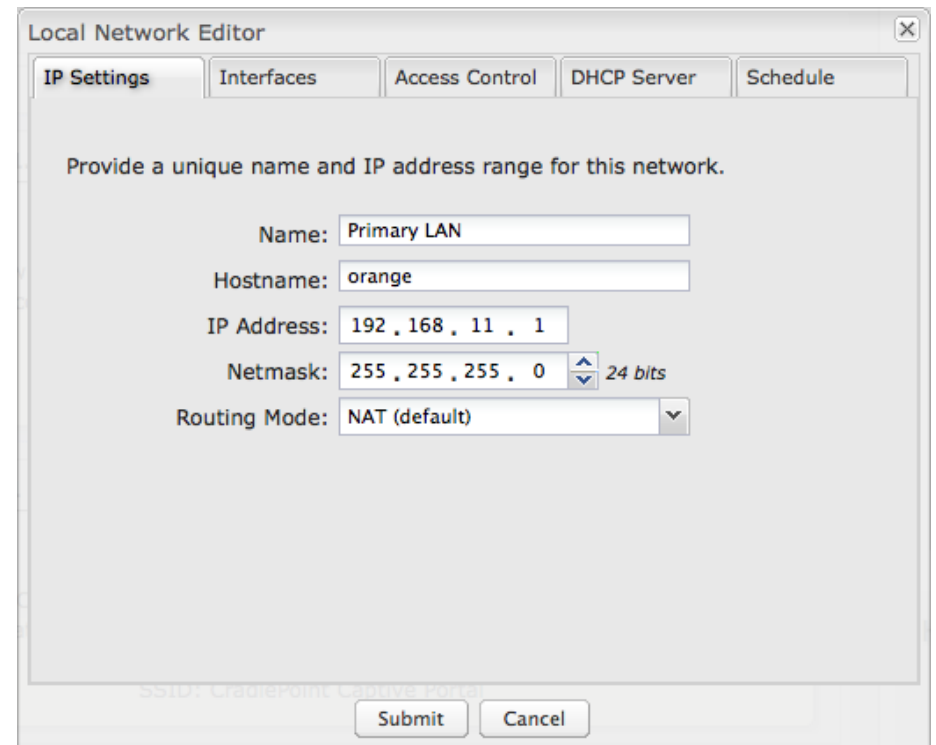

The screenshot shows the 'Local Network Editor' window with the 'IP Settings' tab selected. The window contains the following fields and controls:

- Name:** Primary LAN
- Hostname:** orange
- IP Address:** 192 . 168 . 11 . 1
- Netmask:** 255 . 255 . 255 . 0 (with a dropdown menu set to 24 bits)
- Routing Mode:** NAT (default) (with a dropdown menu)


At the bottom of the window, there are 'Submit' and 'Cancel' buttons. A faint watermark 'SSID: Cradlepoint Capiva Point' is visible at the bottom of the main content area.

- **NAT:** Network Address Translation hides private IP addresses behind the router's IP address. This is the simplest and most common choice for users, because NAT does the translation work for you.
- **Standard:** NAT-less routing. If you select **Standard**, you must separately configure your IP addresses so that they will be publically accessible. Typically you will not select this option unless you have a specific reason to bypass NAT.
- **Hotspot:** Provide Hotspot Services on this network, requiring Terms of Service or RADIUS/UAM authentication before WAN access will occur on both wireless and wired LAN connections. To enable a Hotspot you must also configure your Hotspot settings under **System Settings → Hotspot Services**.
- **Disabled:** Disable this network.

Interfaces:

Select network interfaces to attach to this network. Choose from WiFi, Ethernet ports, and VLAN interfaces. Double-click on any of the interfaces shown on the left in the **Available** section to move them to the **Selected** section on the right (or highlight an interface and click the + button). To deselect an interface, double-click on an interface in the **Selected** section (or highlight the interface and click the – button).


If you want more interface options, you must configure additional WiFi, Ethernet ports, and VLAN interfaces separately. See the **Local Network Interfaces** section below (on this same administration page: **Network Settings → WiFi / Local Networks**).

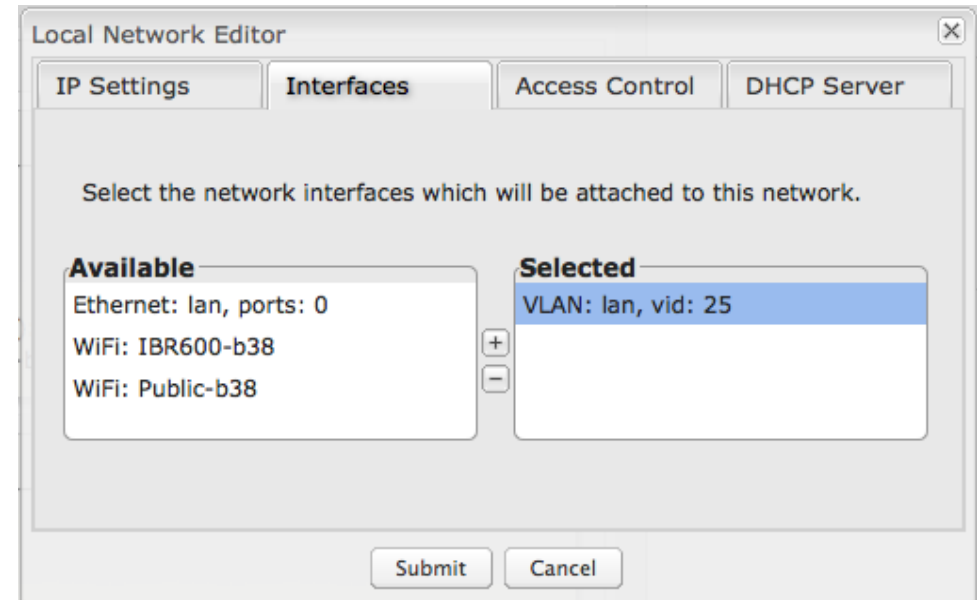

Access Control:

Tune the access control settings of this network to match the intended use. Simply select or deselect any of the following:

- **LAN Isolation:** When checked, this network will NOT be allowed to communicate with other local networks.
- **UPnP Gateway:** Select the UPnP (Universal Plug and Play) option if you want to enable the UPnP Gateway service for computers on this network.
- **Admin Access:** When enabled, users may access these administration pages on this network.

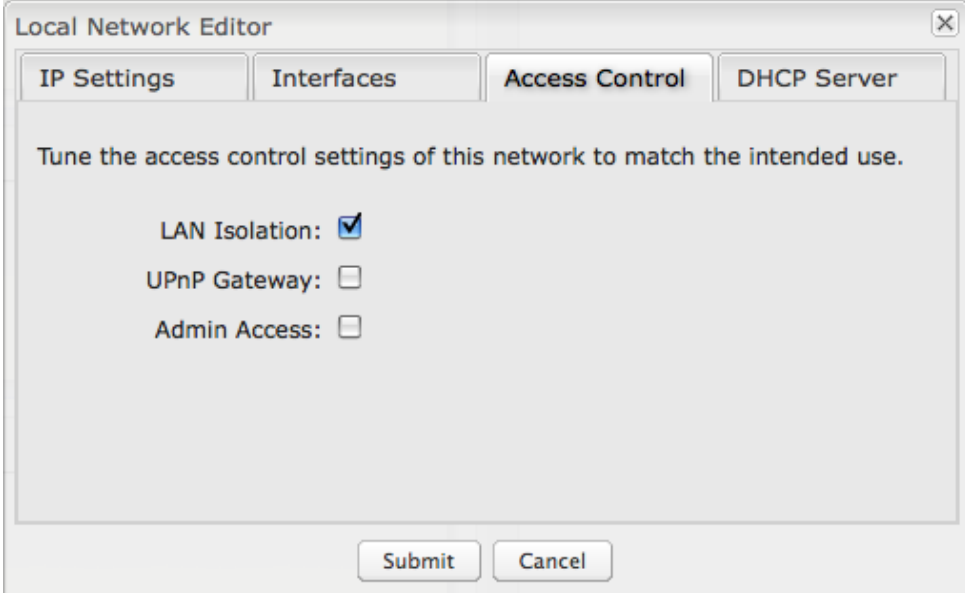

The image shows a screenshot of the 'Local Network Editor' dialog box. It has four tabs: 'IP Settings', 'Interfaces', 'Access Control', and 'DHCP Server'. The 'Access Control' tab is selected. Below the tabs, there is a text prompt: 'Tune the access control settings of this network to match the intended use.' Below this prompt are three settings, each with a checkbox: 'LAN Isolation: ', 'UPnP Gateway: ', and 'Admin Access: '. At the bottom of the dialog box are two buttons: 'Submit' and 'Cancel'.

DHCP Server:

Changing settings for the DHCP server is optional. The default selections are almost always sufficient.


DHCP Server: (Default: Enabled) When the DHCP server is enabled, users of your network will be able to automatically connect to the Internet without any special configuration. **It is recommended that you leave this enabled.** Disabling the DHCP server is only recommended if you have another DHCP server on your network and it is configured properly.

Range Start and Range End: These designate the range of values in the reserved pool of IP addresses for the DHCP server. Values within this range will be given to any DHCP enabled computers on your network. The default values are almost always sufficient (default: 72 to 200, as in 192.168.0.72 to 192.168.0.200).

Example: The IBR600 uses an IP address of 192.168.0.1 for its primary network by default. A computer designated as a Web server has a static IP address of 192.168.0.3. Another computer is designated as an FTP server with a static IP address of 192.168.0.4. The starting IP address for the DHCP server needs to be 192.168.0.5 or higher.

Lease Time: [Default: 720 minutes (12 hours)] The lease time specifies how long DHCP-enabled computers will wait before requesting a new DHCP lease. Smaller values are better suited to busy environments.

DHCP Options: Input a custom DHCP option by first clicking “Add”. There are close to 200 possible DHCP options available. One of the more common uses is to assign a VoIP phone server using option 66 (Server name).

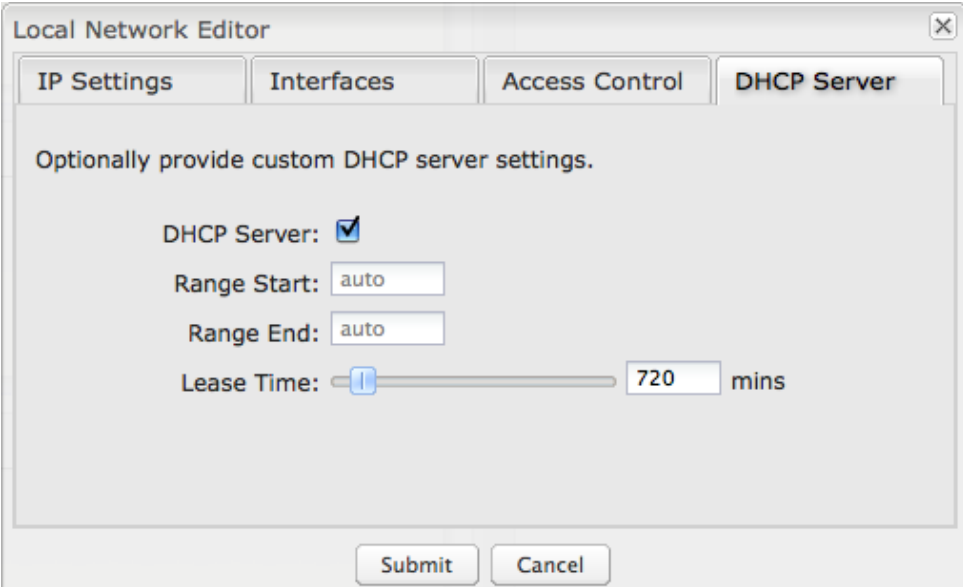


The screenshot shows the 'Local Network Editor' window with the 'DHCP Server' tab selected. The window contains the following settings:

- DHCP Server:** (checked)
- Range Start:** auto
- Range End:** auto
- Lease Time:** 720 mins (indicated by a slider and a text box)

Buttons for 'Submit' and 'Cancel' are located at the bottom of the window.

Option: Select an option from the dropdown list or manually enter the number of an option. A [complete list of options](#) is available from IANA.

Value: Generally this field should be a string, IP address, or numeric value. Some fields can accept both IP addresses and hostnames—in these cases you may need to wrap this value in quotes. For example, option 66 (Server name) requires quotes around IP addresses.

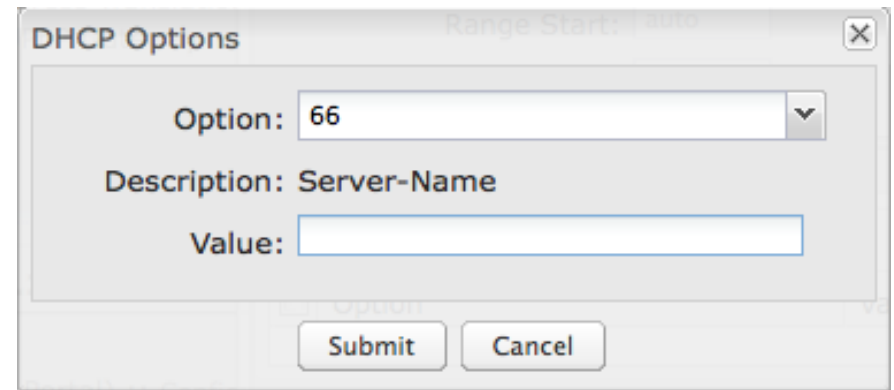

DHCP Options

Option: 66

Description: Server-Name

Value:

Submit Cancel


Schedule:

Set up a schedule for this network interface. This allows an interface to be enabled or disabled during specific hours of a day. For example, use this to limit a Hotspot network to business hours.

Schedule Service: (Default: Disabled.) Select to enable. This will open a configurable chart for setting the schedule.

Each hour of the week is represented by a black or gray square. Black represents disabled, while gray represents enabled. Hover over a square to reveal the hour it represents. Click on the squares to toggle between black and gray.

In the example shown, the network is enabled from 9-5 on Monday through Friday, but disabled at all other times.

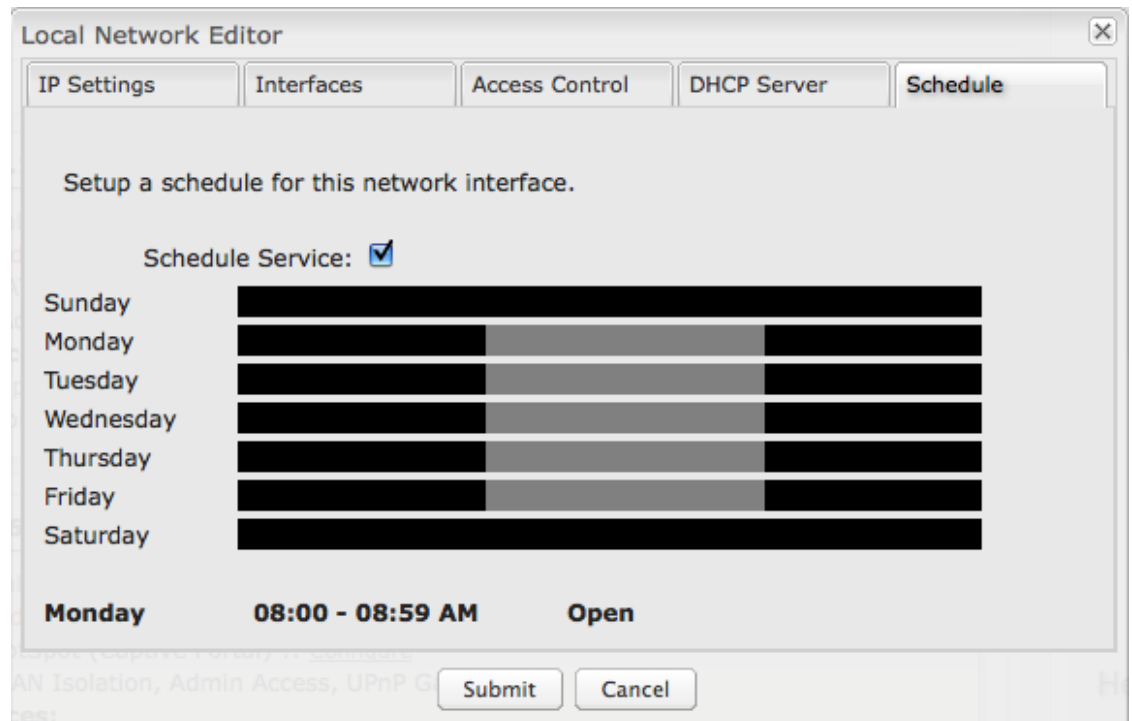

Local Network Editor

IP Settings Interfaces Access Control DHCP Server Schedule

Setup a schedule for this network interface.

Schedule Service:

Sunday	[Black]	
Monday	[Gray]	[Black]
Tuesday	[Gray]	[Black]
Wednesday	[Gray]	[Black]
Thursday	[Gray]	[Black]
Friday	[Gray]	[Black]
Saturday	[Black]	

Monday 08:00 - 08:59 AM Open


Submit Cancel

6.3.3 Local Network Interfaces

Each LAN type—WiFi, Ethernet, and VLAN—has a separate section with configuration options. Unless the default configuration is sufficient, **YOU MUST CONFIGURE EACH INTERFACE SEPARATELY** in order to create the desired interface options for a network. You can then select these interfaces to add to a network in the **Local Network Editor** (see above).

Select from the following tabs:

- **Wireless (WiFi) Network Settings**
- **Ethernet Port Configuration**
- **VLAN Interfaces**

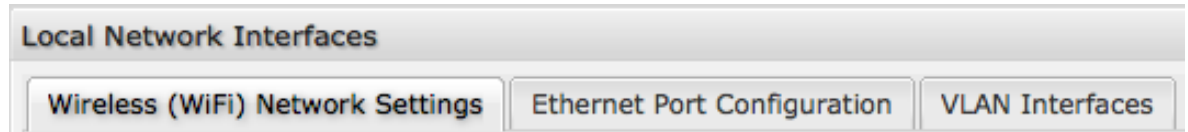


Wireless (WiFi) Network Settings

The IBR600 can broadcast two SSIDs (service set identifiers — the names for WiFi networks). One primary WiFi network is enabled by default, while you may have enabled a second guest network when using the First Time Setup Wizard. You have the ability to change the settings for either of these networks.

Wireless Radio: Enable/Disable. (Default: Enabled). Leave enabled unless you don't want any WiFi networks broadcast from your router.

Select a WiFi network and click **Edit** to change the settings.

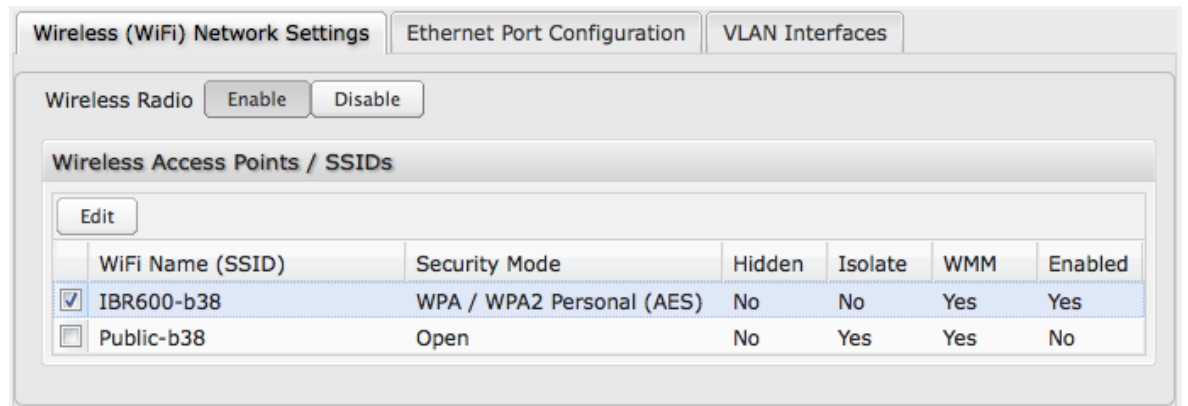

Wireless Network Editor


WiFi Name (SSID): When you are browsing for available wireless networks, this is the name that will be broadcast from this router for the selected network. This name is referred to as the SSID (service set identifier). For security purposes, CradlePoint highly recommends that you change this from the pre-configured name.

Hidden: This shows whether the router broadcasts its SSID. It is somewhat harder for hackers to find and attack a router that is not broadcasting its SSID, which adds to the wireless security, but it is also more difficult for friendly users to attach to a WiFi network with a hidden SSID.

Isolate: Select this to isolate all wireless clients so they cannot directly communicate with each other on the wireless network.

WMM: WiFi Multimedia. This is a basic traffic shaping, or QoS (quality of service), system for the network. WMM works behind the scenes to set priorities for different types of traffic on your network. For example, video streams are given higher priority than print jobs, since video streams need consistent throughput.

Enabled: If the network is available.

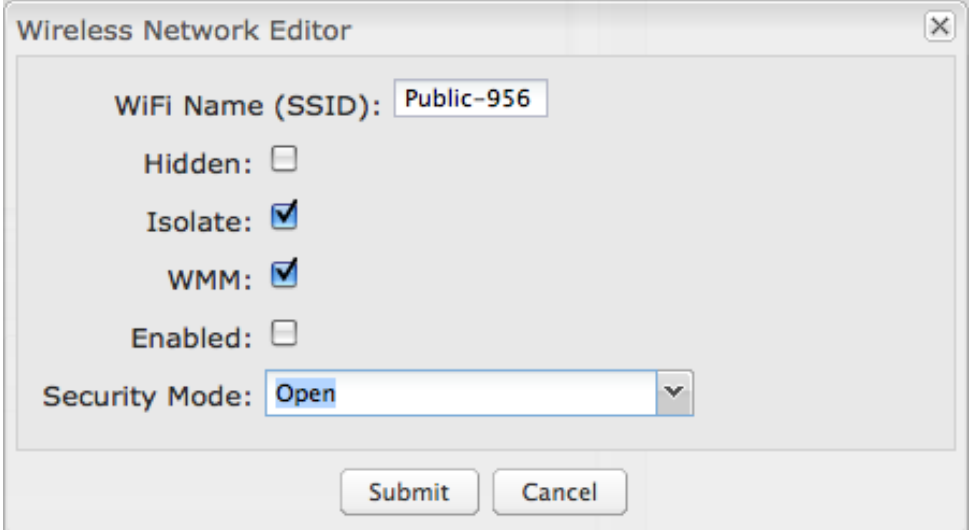

The screenshot shows a dialog box titled "Wireless Network Editor" with a close button (X) in the top right corner. The dialog contains the following fields and options:

- WiFi Name (SSID):** A text input field containing "Public-956".
- Hidden:** A checkbox that is unchecked.
- Isolate:** A checkbox that is checked.
- WMM:** A checkbox that is checked.
- Enabled:** A checkbox that is unchecked.
- Security Mode:** A dropdown menu with "Open" selected.

At the bottom of the dialog are two buttons: "Submit" and "Cancel".

Security Mode: You have several options for selecting a security mode. The mode you choose depends on the security features your wireless adapters support.

- WPA2 Personal
- WPA / WPA2 Personal
- WPA Personal
- WPA2 Enterprise
- WPA / WPA2 Enterprise
- WPA Enterprise
- WEP Auto
- Open


Select “Open” to create a hotspot: otherwise select the best security that your devices will support (CradlePoint recommends WPA2).

Depending on which Security Mode you select, there are different setup options.

- “**Personal**” security modes require passwords and a “Re-key Interval” (default: 3600 seconds).
- “**Enterprise**” security modes are linked to a RADIUS server and require RADIUS authentication: **IP**, **Port**, and **Shared Key**.
- “**WPA2**” (Personal or Enterprise) forces AES as the WPA Cipher.
- “**WPA/WPA2**” and “**WPA**” (Personal or Enterprise) allow AES, TKIP/AES, and TKIP.
- “**WEP Auto**” requires a WEP Key.
- “**Open**” has no password or other security measures.

NOTE: If you don’t know whether you should choose Personal or Enterprise, assume Personal since you need to know RADIUS authentication for Enterprise.

In order to protect your network from hackers and unauthorized users, CradlePoint highly recommends **WPA2/AES** for security if your attached devices can support it. WEP and WPA/TKIP are obsolete and have been replaced by WPA/AES. Using those security settings will cause the WiFi to limit to 802.11g modes.

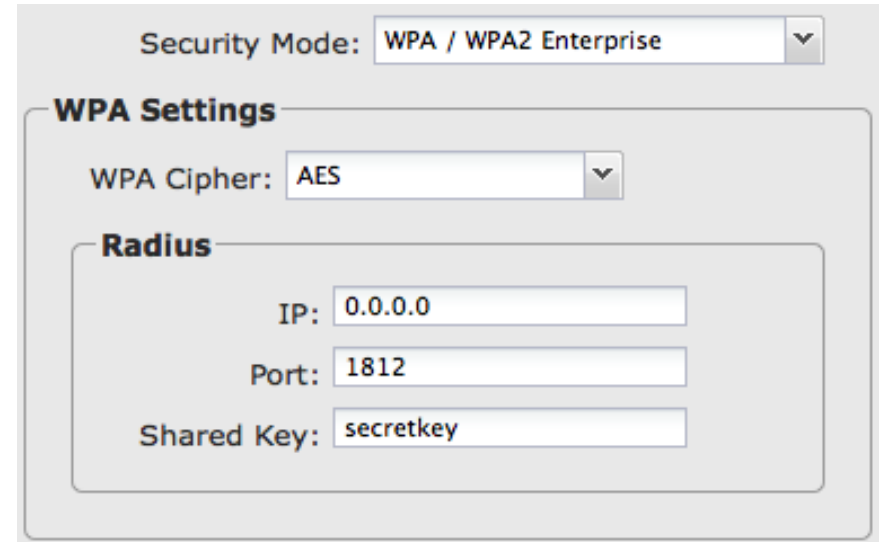

Security Mode: WPA / WPA2 Enterprise

WPA Settings

WPA Cipher: AES

Radius

IP: 0.0.0.0

Port: 1812

Shared Key: secretkey

NOTE: If you select one of the security modes and are unable to connect to the router afterwards, you can use the reset buttons to reset the router to its factory default state and try a different security mode instead.

Ethernet Port Configuration


Ethernet Port Configuration provides controls for your router's Ethernet ports. There are two ports: one set as LAN and one set as WAN. While default settings will be sufficient in most circumstances, you have the ability to control: **Mode** (WAN or LAN) and **Link Speed**. Additional controls for WAN ports are available in [Internet](#) → [Ethernet Settings](#).

Mode: WAN or LAN.

- **Internet (WAN)** is used to connect to another network such as a hotel or office wired network. The WAN connection is used as a possible source of Internet for the IBR600.
- **Local Network (LAN)** is for connecting a computer or similar device directly to the router with an Ethernet cable.

Link Speed: Default setting is Auto. The Auto setting is preferred in most cases.

- Auto
- 10Mbps - Half Duplex
- 10Mbps - Full Duplex
- 100Mbps - Half Duplex
- 100Mbps - Full Duplex
- 1000Mbps - Full Duplex

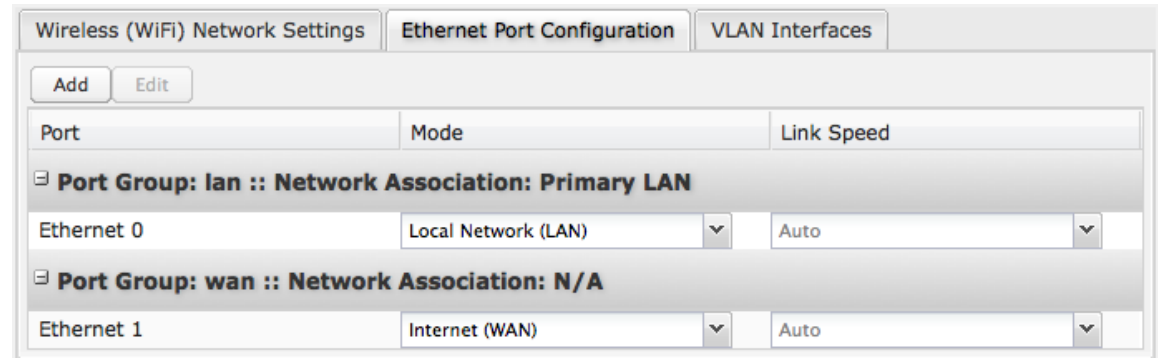

Port	Mode	Link Speed
Port Group: lan :: Network Association: Primary LAN		
Ethernet 0	Local Network (LAN)	Auto
Port Group: wan :: Network Association: N/A		
Ethernet 1	Internet (WAN)	Auto

Ethernet Port Group Editor

A Port Group represents a logical grouping of Ethernet ports. Any computers physically connected to ports in a group will be allowed to freely communicate with each other.


Since the IBR600 has only 2 Ethernet ports, this feature will rarely be necessary. It is possible, however, to set both ports as LAN ports (or both ports as WAN ports) and then either separate them or group them together. (For example, you could use one for the primary network and one for a guest network, or you could use both for the primary network.)

NOTE: When a port group uses the LAN mode you must separately ensure that this logical interface is attached to a **Local IP Network** in the top panel of this page.

Port Group ID: The Group ID field provides a reference to this grouping of ports to be used in other parts of the router configuration. For example, this ID is referenced in the

Local IP Networks configuration to attach this logical group of Ethernet ports with a network configuration. Use a simple short text phrase to describe a group, such as "main", "guestports", "backup_wan", etc.

Select one or more ports to create a port group that you can subsequently attach to a network in the **Local Network Editor**. Double-click on any of the Ethernet ports shown on the left in the **Available** section to move them to the **Selected** section on the right (or highlight a port and click the + button). To deselect an Ethernet port, double-click on an interface in the **Selected** section (or highlight the port and click the – button).

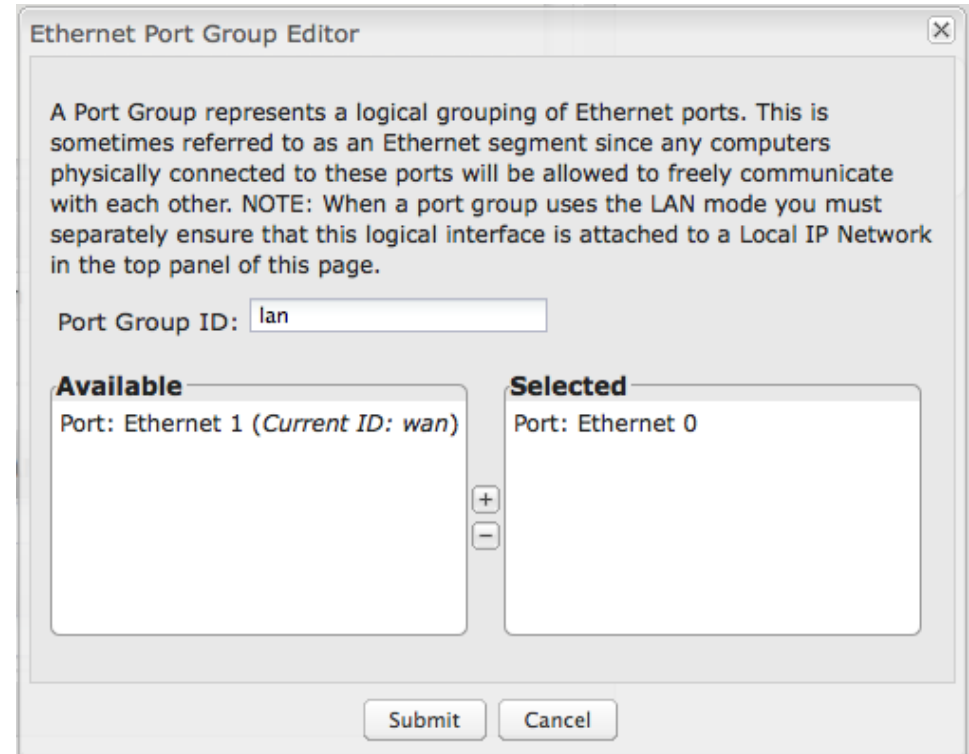

VLAN Interfaces

A virtual local area network, or VLAN, functions as any other physical LAN, but it enables computers and other devices to be grouped together even if they are not physically attached to the same network switch.

To enable a VLAN, select a VID (virtual LAN ID) and a group of Ethernet ports through which users can access the VLAN. Then go back up to the **Local Network Editor** to attach your new VLAN to a network. To use a VLAN, the VID must be shared with another router or similar device so that multiple physical networks have access to the one virtual network.


Click **Add** to create a new VLAN interface.

VLAN Editor


VID: An integer value that is the Virtual LAN ID.

Ethernet Group: Select the LAN ports with which you want to associate the VLAN ID from a dropdown list. Your Ethernet group must be created separately under **Ethernet Port Configuration**.

Click **Submit** to save your configured VLAN.

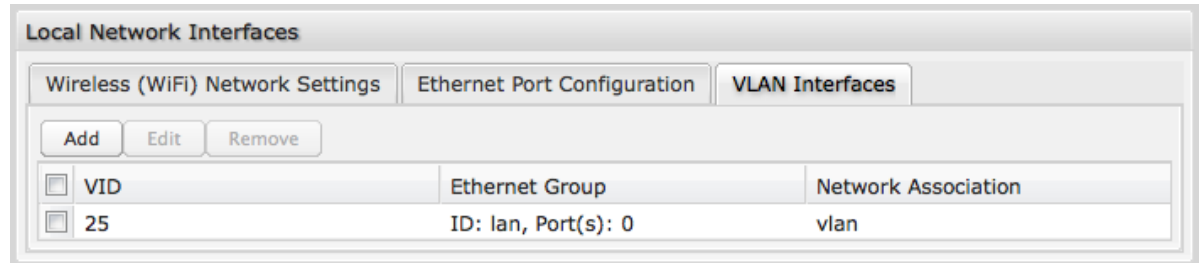

VID	Ethernet Group	Network Association
25	ID: lan, Port(s): 0	vlan

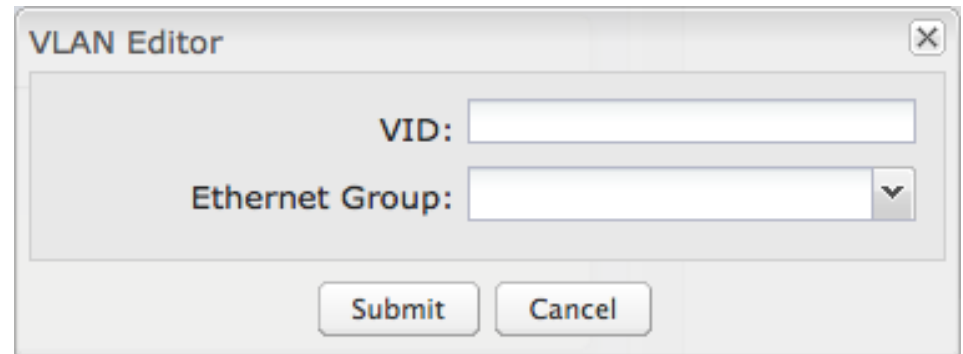

VID:

Ethernet Group:

Submit Cancel

6.3.4 WiFi Settings

When you select the **Wireless (WiFi) Networks Settings** tab in the **Local Network Interfaces** section, you have several additional options for configuring your wireless LANs under the **WiFi Settings** heading.

Random Channel: Select to randomize the WiFi channel. This makes it less likely that the wireless signal from this router will conflict with another router in the same area.

Channel: (Shows if **Random Channel** is deselected.) The WiFi channel corresponds to a frequency the router uses to communicate with other devices. The range is 1 to 11, and 1, 6, and 11 do not overlap each other. Select a channel from the dropdown list:

- 1 (2412 MHz)
- 2 (2417 MHz)
- 3 (2422 MHz)
- 4 (2427 MHz)
- 5 (2432 MHz)
- 6 (2437 MHz)
- 7 (2442 MHz)
- 8 (2447 MHz)
- 9 (2452 MHz)
- 10 (2457 MHz)
- 11 (2462 MHz)

ADVANCED
WiFi Settings

Random Channel:

Client Timeout:

TX Power: 100 %

RTS Threshold: 2347 bytes

Fragmentation Threshold: 2346 bytes

DTIM: 1

Beacon: 100 ms

WPS:

Short Slot:

Wireless Mode:

Channel Width:

Extended Channel:

MCS:

Short GI:

Greenfield Mode:

RADIUS Timeout:

RADIUS Retry:

Client Timeout: (Default: 300 seconds) If the access point is not able to communicate with the client it will disconnect after this amount of time in seconds.

TX Power: Normally the wireless transmitter operates at 100% power. In some circumstances, however, there might be a need to isolate specific frequencies to a smaller area. By reducing the power of the radio, you can prevent transmissions from reaching beyond your corporate/home office or designated wireless area.

RTS Threshold: When an excessive number of wireless packet collisions are occurring, wireless performance can be improved by using the RTS/CTS (Request to Send/Clear to Send) handshake protocol. The wireless transmitter will begin to send RTS frames (and wait for CTS) when data frame size in bytes is greater than the RTS Threshold. This setting should remain at its default value.

Fragmentation Threshold: Wireless frames can be divided into smaller units (fragments) to improve performance in the presence of RF interference and at the limits of RF coverage. Fragmentation will occur when frame size in bytes is greater than the Fragmentation Threshold. This setting should remain at its default value. Setting the Fragmentation value too low may result in poor performance.

DTIM: A DTIM is a countdown informing clients of the next window for listening to broadcast and multicast messages. When the wireless router has buffered broadcast or multicast messages for associated clients, it sends the next DTIM with a DTIM Interval value. Wireless clients detect the beacons and awaken to receive the broadcast and multicast messages. The default value is 1. Valid settings are between 1 and 255.

Beacon: Beacons are packets sent by a wireless router to synchronize wireless devices. Specify a Beacon Period value between 20 and 1000 milliseconds.

WPS: WiFi Protected Setup is a method for easy and secure establishment of a wireless network. It can be used instead of passwords when connecting clients that support WPS.

Short Slot: Slot Time is the period wireless clients use in determining if the channel is free for transmission. Enabling this value allows clients that can utilize a shorter time to do so. Disabling this option forces all clients to use a longer backoff check and thus may reduce network throughput while reducing the number of transmission collisions.

Wireless Mode: Select the WiFi clients the router will be compatible with. Greater compatibility is a tradeoff with better performance. For greatest compatibility with all WiFi devices, select "802.11 b/g/n". For best performance, connect with only other 802.11n-compatible devices and select "802.11 n."

- 802.11 b
- 802.11 b/g
- 802.11 b/g/n
- 802.11 n

Channel Width: Selects whether the router uses a single 20 MHz channel to send/receive, or uses two adjacent 20 MHz channels to create a 40 MHz channel. Higher performance is possible with the 40 MHz channel. Selecting Auto is generally best. Enabling WiFi as WAN will force 20 MHz only mode.

Extended Channel: When operating in 40 MHz mode the access point will use an extended channel either below or above the current channel. Optimal selection will depend on the channels of other networks in the area.

MCS: 802.11n uses multiple Modulation Coding Schemes to enable higher throughput in various environments. Since clients can dynamically change rates depending on environment, selecting **Auto** is generally best.

Short GI: Short GI is an optimization for shortening the interval between transmissions. May be incompatible with older clients.


Greenfield Mode: Greenfield mode uses an 802.11n-only preamble to transmit packets that older wireless clients cannot interpret. Use of greenfield mode in a mixed 802.11 environment may result in degraded performance but can improve performance if all devices in the area are 802.11n compatible.

RADIUS Timeout: (Default: 3600 seconds) When using an Enterprise security mode clients will be forced to re-authenticate with the RADIUS server at this interval in seconds. This allows administrators to revoke access so when an attached client's authentication expires, the client must re-authenticate.

RADIUS Retry: (Default: 60 seconds) When using an Enterprise security mode, if a RADIUS query fails to receive a response from the server it will delay by this interval (in seconds) before attempting another query. This helps protect the network from floods of authentication requests if the RADIUS server is temporarily unreachable.

6.4 WiPipe QoS

When WiPipe QoS (Quality of Service, also known as “Traffic Shaping”) is enabled, the router will control the flow of Internet traffic according to the user-defined rules. In other words, Traffic Shaping improves performance by allowing the user to prioritize applications.

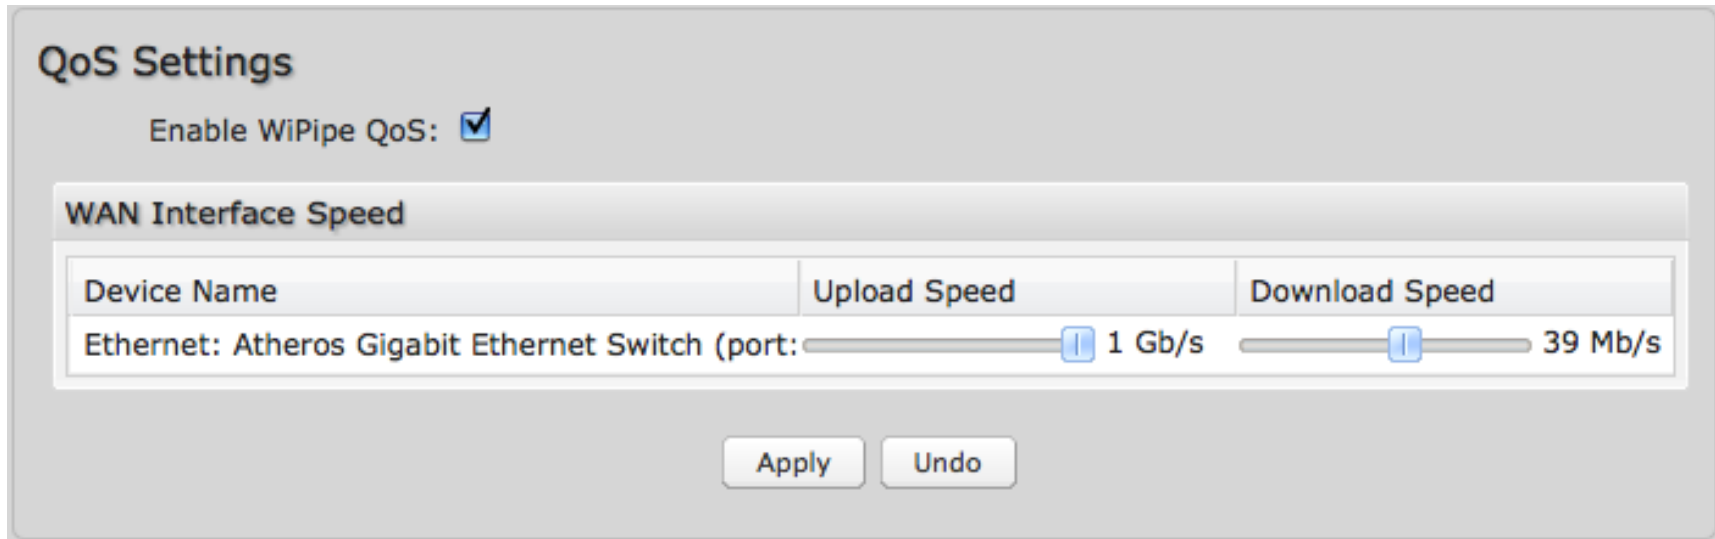

QoS Settings

Enable WiPipe QoS:

WAN Interface Speed

Device Name	Upload Speed	Download Speed
Ethernet: Atheros Gigabit Ethernet Switch (port: ...)	1 Gb/s	39 Mb/s

Apply Undo

Enable WiPipe QoS: Click on this box to open options for controlling Internet traffic. You can assign maximum Upload Speed and Download Speed values and define your own Traffic Shaping rules.

Upload Speed and Download Speed: Setting the **Upload Speed** and **Download Speed** is required to control traffic flow accurately. Adjust the sliding bar to restrict the maximum upload and/or download speed for the Internet source(s) you are using. For example, you might restrict the upload speed to prioritize available bandwidth for download or to reduce overall bandwidth use in order to lower costs. It is recommended that you experiment with different values for your particular Internet connection for best results.

NOTE: Upload speed is the speed at which data can be transferred to your ISP. Download speed is the speed at which data can be transferred to you from your ISP. You can test your connection speeds with a service such as speedtest.net.

6.4.1 Traffic Shaping Rules

A Traffic Shaping rule identifies a specific message flow and assigns a priority to that flow. Assign rules based on upload/download bandwidth, protocol, port numbers, and/or IP addresses.

EXAMPLE: You can restrict the bandwidth of your guest network in order to reserve crucial bandwidth for your primary network. Create a rule associated with the IP address range and appropriate netmask for the quest network. Then set upload/download bandwidth limits as a percentage of your available bandwidth.

<input type="button" value="Add"/> <input type="button" value="Edit"/> <input type="button" value="Remove"/>								
	Rule Name	Upload Bandwidth	Upload Priority	Download Bandwidth	Download Priority	Enabled		
↓	guest	10% (borrows)	Lower	25% (borrows)	Normal	Yes		
<table border="1"> <tr> <td> <p>Traffic Source: IP Address: 192.168.10.0 Netmask: 255.255.255.0 Any Port Protocol: any</p> </td> <td> <p>Traffic Destination: Any IP Address Any Port</p> </td> </tr> </table>							<p>Traffic Source: IP Address: 192.168.10.0 Netmask: 255.255.255.0 Any Port Protocol: any</p>	<p>Traffic Destination: Any IP Address Any Port</p>
<p>Traffic Source: IP Address: 192.168.10.0 Netmask: 255.255.255.0 Any Port Protocol: any</p>	<p>Traffic Destination: Any IP Address Any Port</p>							
↑	primary	30% (borrows)	High	70% (borrows)	High	Yes		

Traffic Shaping supports overlap between rules, where more than one rule can match for a specific message flow. If more than one rule matches, the rule with the highest priority will be used.

Click **Add** to create a new Traffic Shaping rule.

Traffic Shaping / QoS Rule Editor


The first page of the Traffic Shaping / QoS Rule Editor allows you enable/disable the rule, name the rule, and specify a protocol for the rule.

Rule Enabled: (Default: Enabled.) Deselect this to disable this rule. This can be useful for quickly changing configurations. If both upload QoS and download QoS are disabled then the rule will disable automatically.

Rule Name: Create a name and/or description for the rule that is meaningful to you.

Protocol. The protocol used by the messages: TCP, UDP, or ICMP. Select “Any” if your rule does not control a specific type of message that uses a specific protocol.

Click **Next** to continue to the next page.

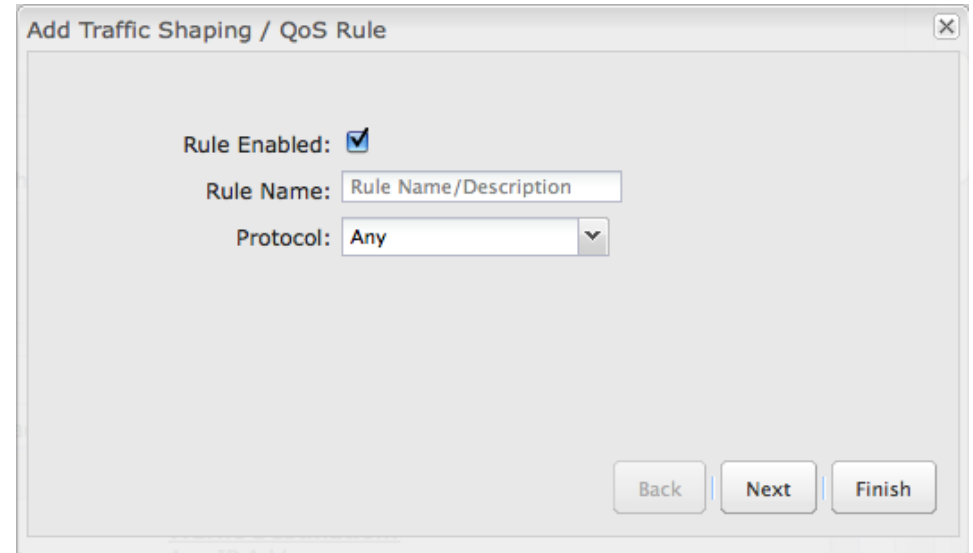

Add Traffic Shaping / QoS Rule

Rule Enabled:

Rule Name:

Protocol:

Back Next Finish

Enable Upload QoS: (Default: Enabled.) Deselect if you want your rule to apply to download traffic only.


Borrow Spare Bandwidth: (Default: Enabled.) When this is enabled, the interfaces/protocols associated with this rule will borrow unused bandwidth from other rules. Disabling borrowing will restrict the traffic to the specified bandwidth. Higher priority queues will be offered excess bandwidth first.

Upload Bandwidth: This is the percentage of the connected WAN upload bandwidth that will be reserved for the specified traffic. The maximum value is adjusted to the remaining percentage after other rules receive their share. (For example, if one rule reserves 10% of bandwidth for VoIP, the next rule will be limited to a maximum of 90%.)

Upload Priority: The priority value has two different effects on traffic. Higher priority traffic is handled before lower priority traffic, which can lead to shorter response times. Additionally, when spare bandwidth is available it is offered to higher priority classes first. Move the slider to select from the following options (Default: Normal):

- Lowest
- Lower
- Below Normal
- Normal
- Above Normal
- High
- Higher
- Highest

Click **Next** to continue to the next page.

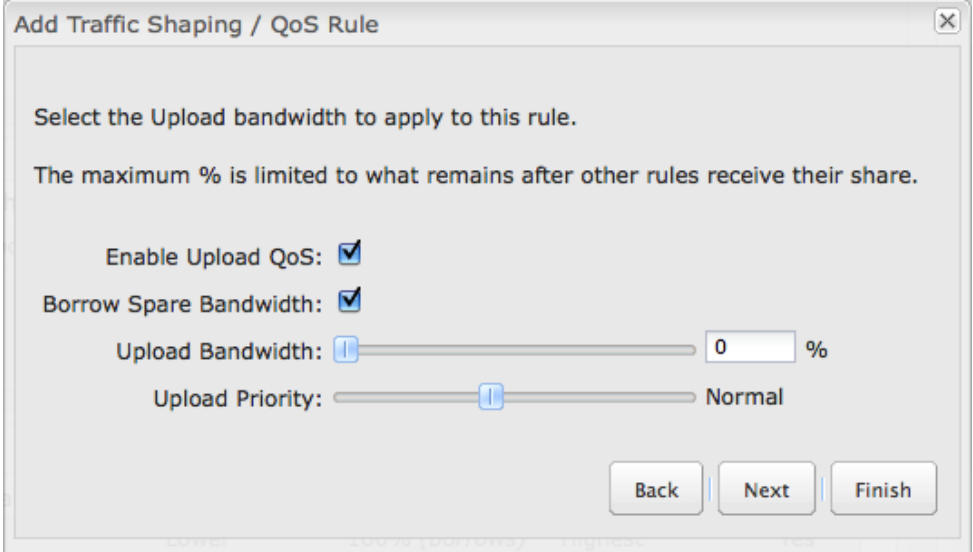

Enable Download QoS: (Default: Enabled.) Deselect if you want your rule to apply to upload traffic only.


Borrow Spare Bandwidth: (Default: Enabled.) When this is enabled, the interfaces/protocols associated with this rule will borrow unused bandwidth from other rules. Disabling borrowing will restrict the traffic to the specified bandwidth. Higher priority queues will be offered excess bandwidth first.

Download Bandwidth: This is the percentage of the connected WAN upload bandwidth that will be reserved for the specified traffic. The maximum value is adjusted to the remaining percentage after other rules receive their share. (For example, if one rule reserves 10% of the bandwidth for VoIP, the next rule will be limited to a maximum of 90%.)

Download Priority: The priority value has two different effects on traffic. Higher priority traffic is handled before lower priority traffic, which can lead to shorter response times. Additionally, when spare bandwidth is available it is offered to higher priority classes first. Move the slider to select from the following options (Default: Normal):

- Lowest
- Lower
- Below Normal
- Normal
- Above Normal
- High
- Higher
- Highest

Click **Next** to continue to the next page.

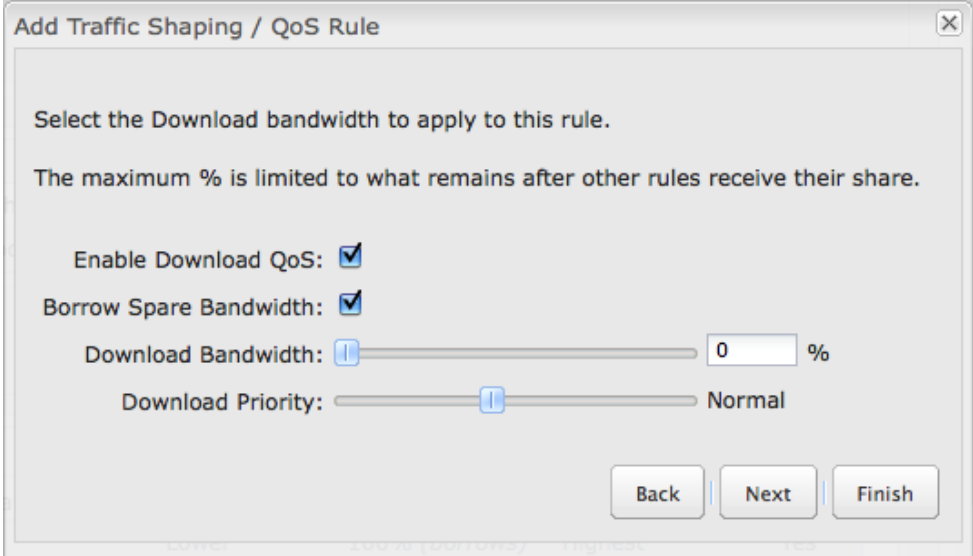


Source Port(s) and/or **Destination Port(s)**: Enter a port number between 1 and 65535. To enter a single port number, input the number into the left box. To enter a range of ports, fill in both boxes separated by the colon. For example "80:90" would represent all ports between 80 and 90 including 80 and 90 themselves.

Source IP Address, Source Netmask, Destination IP Address, and Destination Netmask: Specify an IP address or range of IP addresses by combining an IP address with a netmask for either "source" or "destination" (or both). Source vs. destination is defined by traffic flow. Leave these blank to include all IP addresses (such as if your rule is defined by a particular port instead).

EXAMPLE: If you want to associate this rule with your guest LAN, you could input the IP address and netmask for the guest LAN here (leaving the last slot "0" to allow for any user attached to the guest network):

- **Source IP Address:** 192.168.10.0
- **Source Netmask:** 255.255.255.0

Click **Finish** to save this rule.

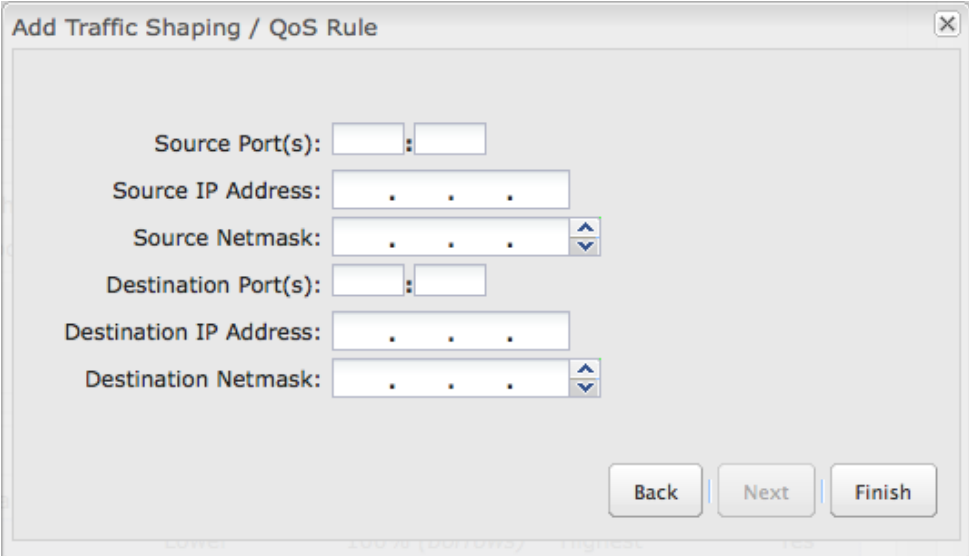

The screenshot shows a window titled "Add Traffic Shaping / QoS Rule". It contains the following fields:

- Source Port(s): Two input boxes separated by a colon.
- Source IP Address: A four-part dotted input field.
- Source Netmask: A four-part dotted input field with a dropdown arrow on the right.
- Destination Port(s): Two input boxes separated by a colon.
- Destination IP Address: A four-part dotted input field.
- Destination Netmask: A four-part dotted input field with a dropdown arrow on the right.

At the bottom right of the window are three buttons: "Back", "Next", and "Finish".

7 INTERNET

The Internet tab provides access to 6 submenu items for managing a variety of Internet connection options.

- Connection Manager
- Data Usage
- GRE Tunnels
- VPN Tunnels
- WiFi as WAN / Bridge
- WAN Affinity

Internet / Connection Manager

WAN Interfaces

Device	State	Load Balance	Enabled
Ethernet	Unplugged	<input type="checkbox"/>	<input checked="" type="checkbox"/>
LTE: Internal LTE/EVDO	Connected	<input type="checkbox"/>	<input checked="" type="checkbox"/>

Manager

establish an uplink via the Ethernet WAN port, or WiFi as WAN, or modems plugged into a modem port. If Load Balance is enabled, multiple WAN devices may be plugged in and each may establish a link. If the WAN connection fails the router will automatically attempt to bring up a new link on another device. This feature is called failover.

WAN Interfaces: This is a list of the available interfaces used to access the Internet. You can enable Load

[Product Support Help](#)

Copyright © CradlePoint Technology, Inc. 2012 All rights reserved. Licenses


wipipe

7.1 Connection Manager

The router can establish an uplink via the Ethernet WAN port, WiFi as WAN, or the internal modem. If the primary WAN connection fails the router will automatically attempt to bring up a new link on another device. This feature is called failover. If Load Balance is enabled, multiple WAN devices may be plugged in and each may establish a link.

7.1.1 WAN Interfaces

This is a list of the available interfaces used to access the Internet. You can enable, stop, or start devices from this section. By using the priority arrows (the arrows in the boxes to the left—these show if you have more than one available interface), you can set the interface the router uses by default and the order that it allows failover.

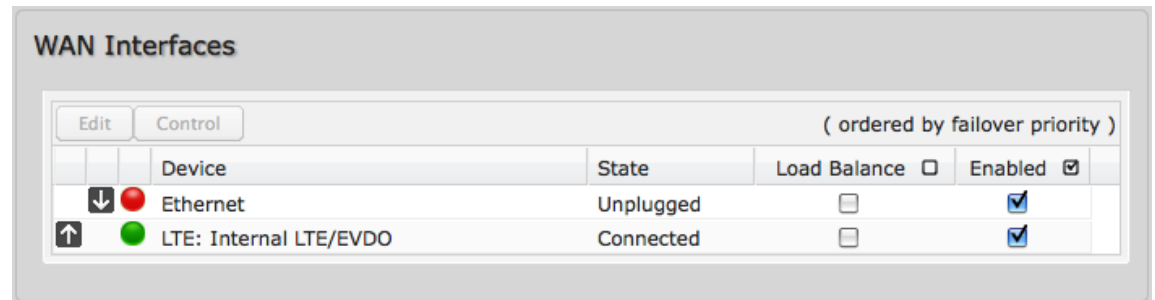

		Device	State	Load Balance <input type="checkbox"/>	Enabled <input checked="" type="checkbox"/>
↓	●	Ethernet	Unplugged	<input type="checkbox"/>	<input checked="" type="checkbox"/>
↑	●	LTE: Internal LTE/EVDO	Connected	<input type="checkbox"/>	<input checked="" type="checkbox"/>

In the example shown, Ethernet is set as the primary Internet source, while the internal modem is set for failover. The Ethernet is “Unplugged” while the modem is “Connected.”

Load Balance: If this is enabled, the router will use multiple WAN interfaces to increase the data transfer throughput by using any connected WAN interface consecutively. Selecting Load Balance will automatically start the WAN interface and add it to the pool of WAN interfaces to use for data transfer. Turning off Load Balance for an active WAN interface may require the user to restart any current browsing session.

Enabled: Selected by default. Deselect to disable an interface.

Click on the small box at the top of the list to select/deselect all devices for either **Load Balance** or **Enabled**.


Click on a device in the list to reveal additional information about that device and to enable configuration options.

7.1.2 Device Configuration

Clicking on a device reveals the following information:

- **State** (Connected, Available, etc.)
- **Port**
- **UID** (Unique identifier. This could be a name or number/letter combination.)
- **IP Address**
- **Gateway**
- **Netmask**
- **Stats: bytes in, bytes out**
- **Uptime** (in seconds)

Click “Edit” to view configuration options for the selected device. For the internal modem, click “Control” to view options to activate or update.

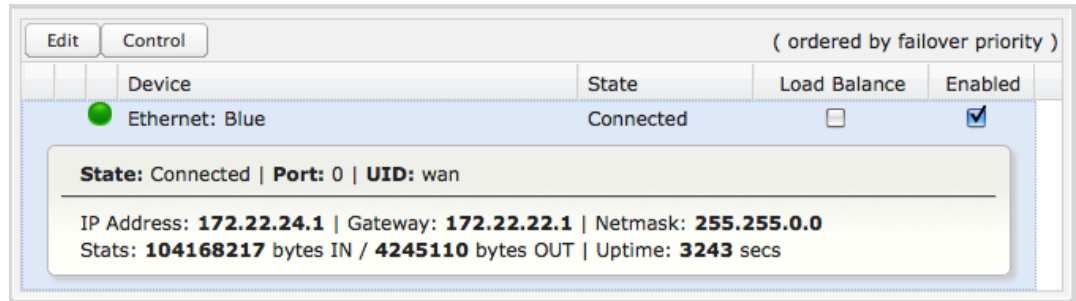


Edit Control		(ordered by failover priority)	
Device	State	Load Balance	Enabled
<input checked="" type="radio"/> Ethernet: Blue	Connected	<input type="checkbox"/>	<input checked="" type="checkbox"/>

State: Connected | **Port:** 0 | **UID:** wan

IP Address: **172.22.24.1** | Gateway: **172.22.22.1** | Netmask: **255.255.0.0**
Stats: **104168217** bytes IN / **4245110** bytes OUT | Uptime: **3243** secs

7.1.3 General Settings

- **Enabled:** Select/deselect to enable/disable.
- **Load Balance:** Select to allow this device to be available for the Load Balance pool.
- **LB default bandwidth:** Defines the default bandwidth for use in Load Balance algorithms. (Range: 100 Kilobits/second to 49 Megabits/second.)
- **QOS default bandwidth:** Defines the default bandwidth for use in QoS (quality of service, or traffic shaping) algorithms.
- **MTU:** Maximum transmission unit. This is the size of the largest protocol data unit that the device can pass. (Range: 46 to 1500 Bytes.)
- **Hostname** (This only shows for certain devices.)

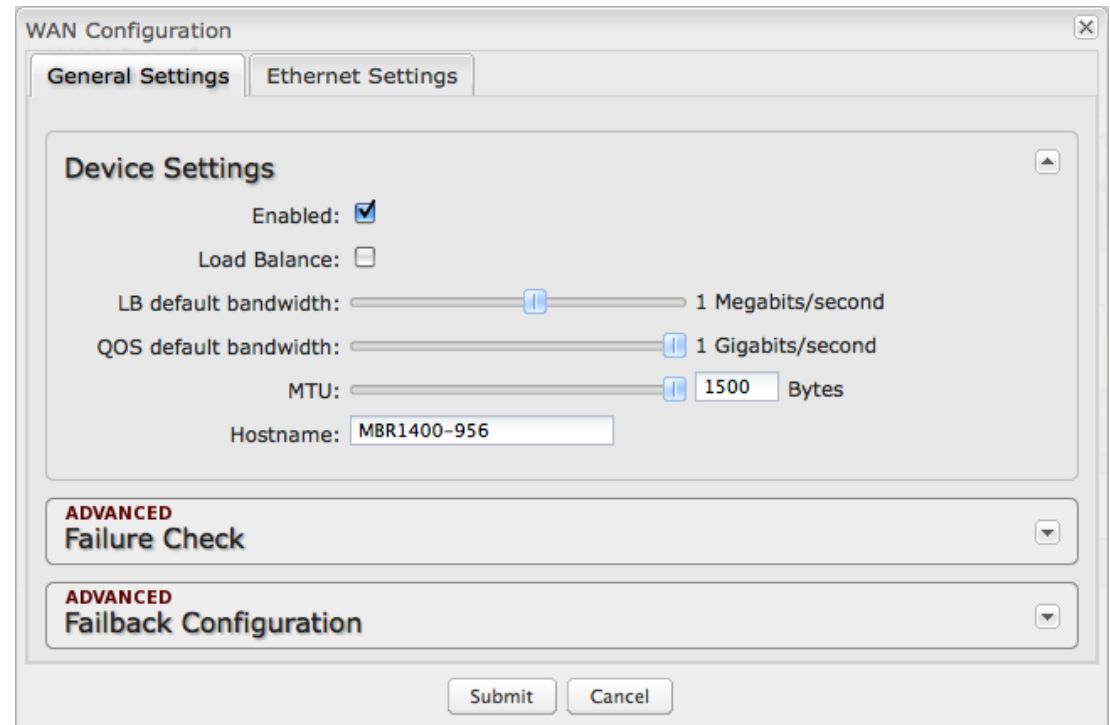

WAN Configuration

General Settings | Ethernet Settings

Device Settings

Enabled:

Load Balance:

LB default bandwidth: 1 Megabits/second

QOS default bandwidth: 1 Gigabits/second

MTU: 1500 Bytes

Hostname:


ADVANCED
Failure Check

ADVANCED
Failback Configuration

Submit Cancel

Failure Check (Advanced)

If this is enabled, the router will check that the highest priority active WAN interface can get to the Internet even if the WAN connection is not actively being used. If the interface goes down, the router will switch to the next highest priority interface available. If this is not selected, the router will still failover to the next highest priority interface but only after the user has attempted to get out to the Internet and failed.

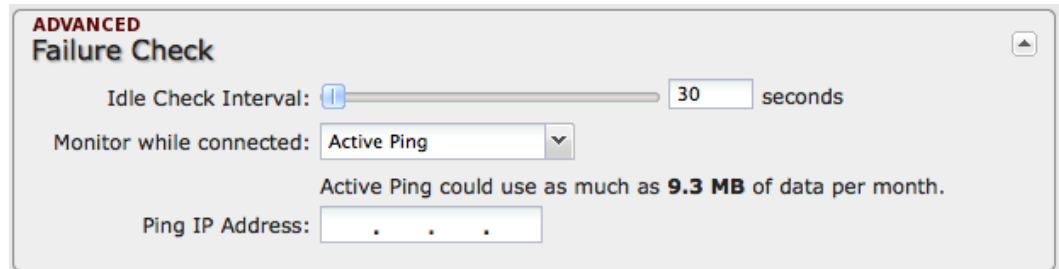

ADVANCED
Failure Check

Idle Check Interval: 30 seconds

Monitor while connected: Active Ping

Active Ping could use as much as **9.3 MB** of data per month.

Ping IP Address: . . .

Idle Check Interval: The amount of time between each check. (Default: 30 seconds. Range: 10-3600 seconds.)

Monitor while connected: (Default: Off) Select from the following dropdown options:

- **Passive DNS (modem only):** The router will take no action until data is detected that is destined for the WAN. When this data is detected, the data will be sent and the router will check for received data for 2 seconds. If no data is received the router behaves as described below under **Active DNS**.
- **Active DNS (modem only):** A DNS request will be sent to the DNS servers. If no data is received, the DNS request will be retried 4 times at 5-second intervals. (The first 2 requests will be directed at the Primary DNS server and the second 2 requests will be directed at the Secondary DNS server.) If still no data is received, the device will be disconnected and failover will occur.
- **Active Ping:** A ping request will be sent to the Ping Target. If no data is received, the ping request will be retried 4 times at 5-second intervals. If still no data is received, the device will be disconnected and failover will occur. When “Active Ping” is selected, the next line gives an estimate of data usage in this form: “Active Ping could use as much as **9.3 MB** of data per month.” This amount depends on the Idle Check Interval.
- **Off:** Once the link is established the router takes no action to verify that it is still up.

Ping IP Address: If you selected “Active Ping”, you will need to input an IP address. This must be an address that can be reached through your WAN connection (modem/Ethernet). Some ISPs/Carriers block certain addresses, so choose an address that all of your WAN connections can use. For best results, select an established public IP address.

For example, you might ping Google Public DNS at 8.8.8.8 or Level 3 Communications at 4.2.2.2.

Failback Configuration (Advanced)

This is used to configure failback, which is the ability to go back to a higher priority WAN interface if it regains connection to its network.


Usage: Fail back based on the amount of data passed over time. This is a good setting for when you have a dual-mode EVDO/WiMAX modem and you are going in and out of WiMAX coverage. If the router has failed over to EVDO it will wait until you have low data usage before bringing down the EVDO connection to check if a WiMAX connection can be made.

- **High** (Rate: 80 KB/s. Time Period: 30 seconds.)
- **Normal** (Rate: 20 KB/s. Time Period: 90 seconds.)
- **Low** (Rate: 10 KB/s. Time Period: 240 seconds.)
- **Custom** (Rate range: 1-100 KB/s. Time Period range: 10-300 seconds.)

Time: Fail back only after a set period of time. (Default: 90 seconds. Range: 10-300 seconds.) This is a good setting if you have a primary wired WAN connection and only use a modem for failover when your wired connection goes down. This ensures that the higher priority interface has remained online for a set period of time before it becomes active (in case the connection is dropping in and out, for example).

Disabled: Deactivate failback mode.

Immediate Mode: Fail back immediately whenever a higher priority interface is plugged in or when there is a priority change. Immediate failback returns you to the use of your preferred Internet source more quickly which may have advantages such as reducing the cost of a failover data plan, but it may cause more interruptions in your network than **Usage** or **Time** modes.

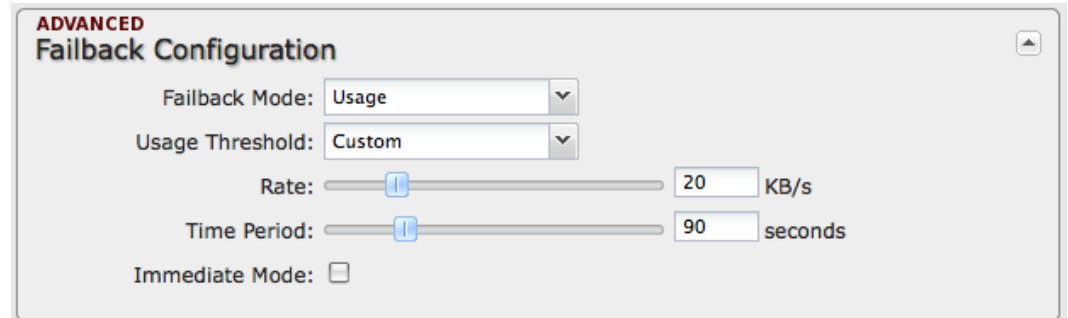

ADVANCED
Failback Configuration

Failback Mode: Usage

Usage Threshold: Custom

Rate: 20 KB/s


Time Period: 90 seconds

Immediate Mode:

7.1.4 Ethernet Settings

While default settings for each WAN Ethernet port will be sufficient in most circumstances, you have the ability to control:

- **Connect Method:** DHCP (Automatic), Static (Manual), or PPPoE (Point-to-Point Protocol over Ethernet).
- **MAC Address:** You have the ability to change the MAC address, but typically this is unnecessary. You can match this address with your device's address by clicking: "**Clone Your PC's MAC Address**".

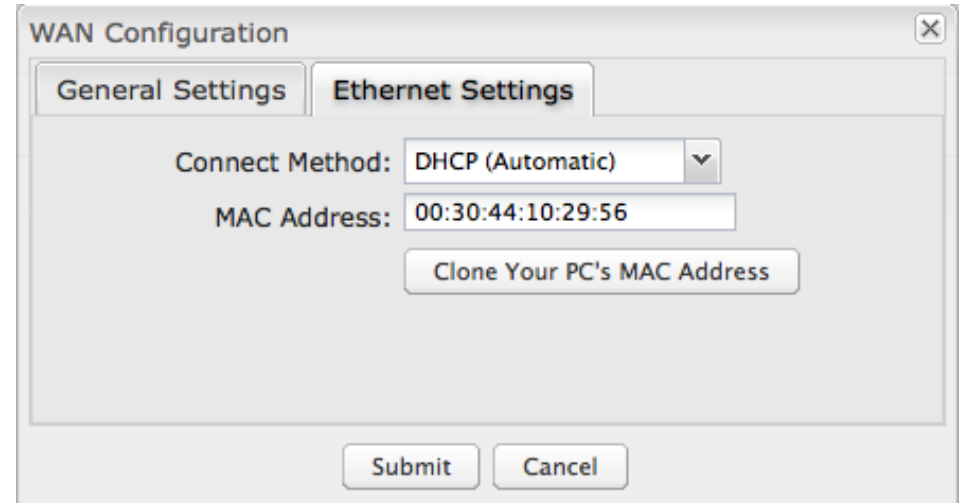

The screenshot shows a 'WAN Configuration' dialog box with two tabs: 'General Settings' and 'Ethernet Settings'. The 'Ethernet Settings' tab is active. It contains a 'Connect Method' dropdown menu set to 'DHCP (Automatic)', a 'MAC Address' text field containing '00:30:44:10:29:56', and a button labeled 'Clone Your PC's MAC Address'. At the bottom of the dialog are 'Submit' and 'Cancel' buttons.

Connect Method


Select the connection type that you need for this WAN connection. You may need to check with your ISP or system administrator for this information.

- **DHCP** (Dynamic Host Configuration Protocol) is the most common configuration. Your router's Ethernet ports are automatically configured for DHCP connection. DHCP automatically assigns dynamic IP addresses to devices in your networks. This is preferable in most circumstances.
- **Static** allows you to input a specific IP address for your WAN connection; this should be provided by the ISP if supported.
- **PPPoE** should be configured with the username, password and other settings provided by your ISP.

If you want to use a Static (Manual) or PPPoE connection, you will need to fill out additional information.

Static (Manual):


- IP Address
- Subnet Mask
- Gateway IP
- Primary DNS Server
- Secondary DNS Server

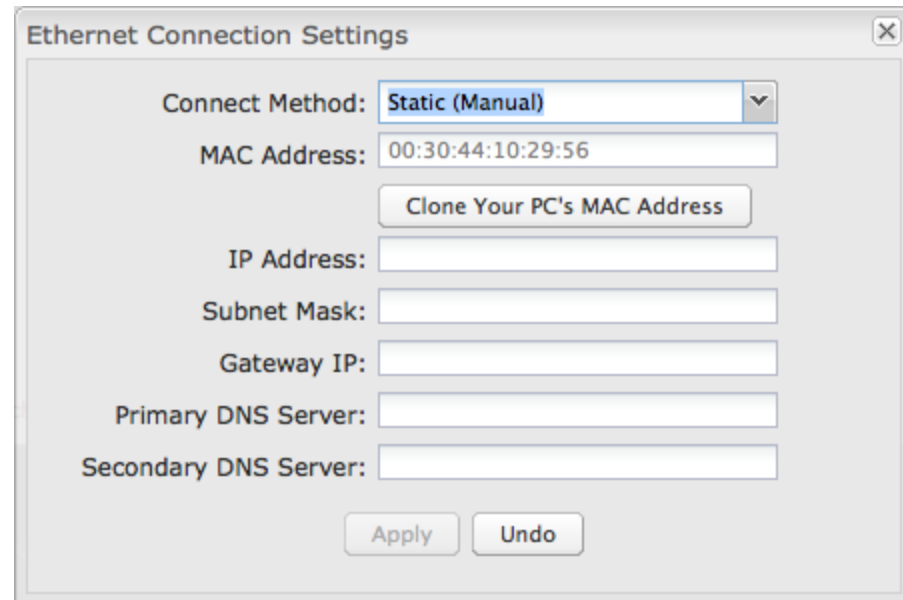

The screenshot shows the 'Ethernet Connection Settings' dialog box with the 'Connect Method' set to 'Static (Manual)'. The 'MAC Address' field is populated with '00:30:44:10:29:56' and has a 'Clone Your PC's MAC Address' button below it. The 'IP Address', 'Subnet Mask', 'Gateway IP', 'Primary DNS Server', and 'Secondary DNS Server' fields are empty. 'Apply' and 'Undo' buttons are at the bottom.

PPPoE:

- Username
- Password
- Password Confirm
- Service
- Auth Type: None, PAP, CHAP

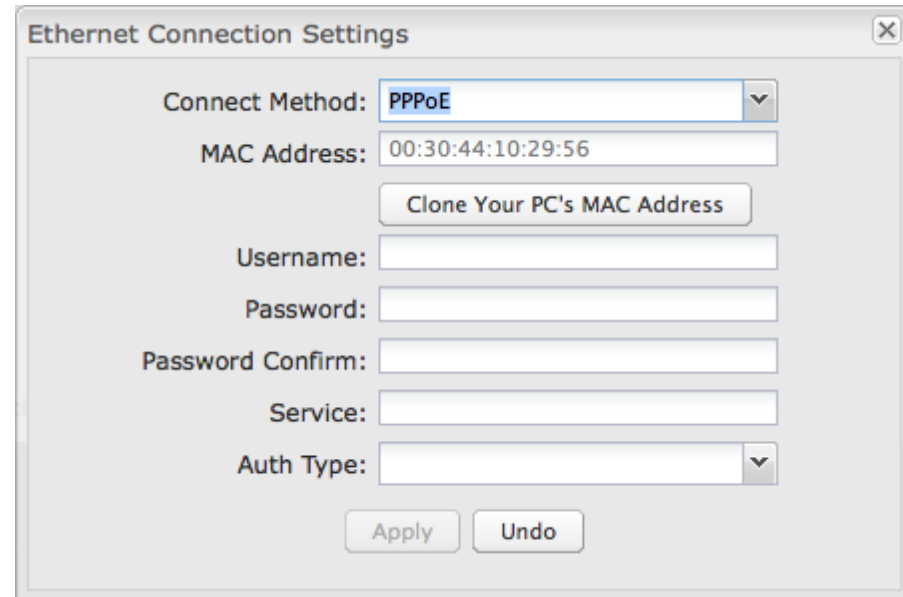

The screenshot shows the 'Ethernet Connection Settings' dialog box with the 'Connect Method' set to 'PPPoE'. The 'MAC Address' field is populated with '00:30:44:10:29:56' and has a 'Clone Your PC's MAC Address' button below it. The 'Username', 'Password', 'Password Confirm', 'Service', and 'Auth Type' fields are empty. 'Apply' and 'Undo' buttons are at the bottom.

7.1.5 Modem Settings

On Demand: Typically modem connections are not always on. When this mode is selected a connection to the Internet is made as needed. When this mode is not selected a connection to the Internet is always maintained.

Maximum Idle Time: The interval for which the modem can be idle before it is disconnected.


Aggressive Reset: When Aggressive Reset is enabled the system will attempt to maintain a good modem connection. If the Internet has been unreachable for a period of time a reset of the modem will occur in attempt to re-establish the connection.

LTE Connection Mode: Specify how the LTE Multi Mode modem should connect to the network.

- Auto: Let the modem decide which network to use.
- Auto EVDO/1xRTT: Connect to CDMA, letting the modem decide which 3G network to use. Do not attempt to connect to LTE.
- Force LTE: Connect to LTE only (do not attempt to connect to CDMA/GSM).
- Force EVDO: Connect to CDMA EVDO network only.
- Force 1xRTT: Connect to CDMA 1xRTT network only.

AT Dial Script: Enter the AT commands to be used in establishing a network connection. Each command must be entered on a separate line. All command responses must include “OK” except the final command response, which must include “CONNECT”.

Example:
AT

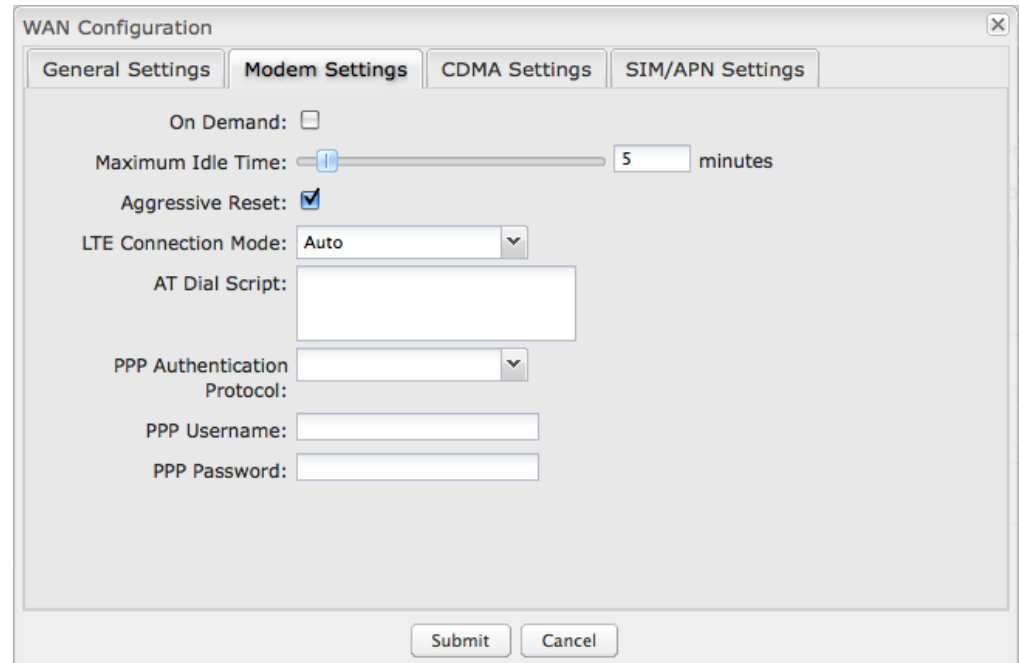

The screenshot shows the 'WAN Configuration' dialog box with the 'Modem Settings' tab selected. The settings are as follows:

- On Demand:**
- Maximum Idle Time:** A slider set to 5 minutes.
- Aggressive Reset:**
- LTE Connection Mode:** Auto (dropdown menu)
- AT Dial Script:** An empty text area.
- PPP Authentication Protocol:** (dropdown menu)
- PPP Username:** (text input field)
- PPP Password:** (text input field)

Buttons for 'Submit' and 'Cancel' are located at the bottom right of the dialog.


```
AT+CGDCONT=2,"IP","isp.cingular"  
ATCT*99***2#
```

PPP Authentication Protocol: Set this only if your service provider requires a specific protocol and the **Auto** option chooses the wrong one.

- **Auto**
- **PAP** (Password Authentication Protocol)
- **CHAP** (Challenge Handshake Authentication Protocol)

PPP Password: Password for PPP authentication.


PPP Username: Username for PPP authentication.

CDMA Settings

- **Persist Settings:**
- **Active Profile:** Select a number from 0-5 from the dropdown list.

The following fields can be left blank. If left blank they will remain unchanged in the modem.

- **NAI (Username@realm):** Network Access Identifier. NAI is a standard system of identifying users who attempt to connect to a network.
- **AAA Shared Secret (Password):** “Authentication, Authorization, and Accounting” password.
- **Verify AAA Shared Secret.**
- **HA Shared Secret:** “Home Agent” shared secret.
- **Primary HA.**
- **Secondary HA.**
- **AAA SPI:** AAA Security Parameter Index.
- **HA SPI:** HA Security Parameter Index.

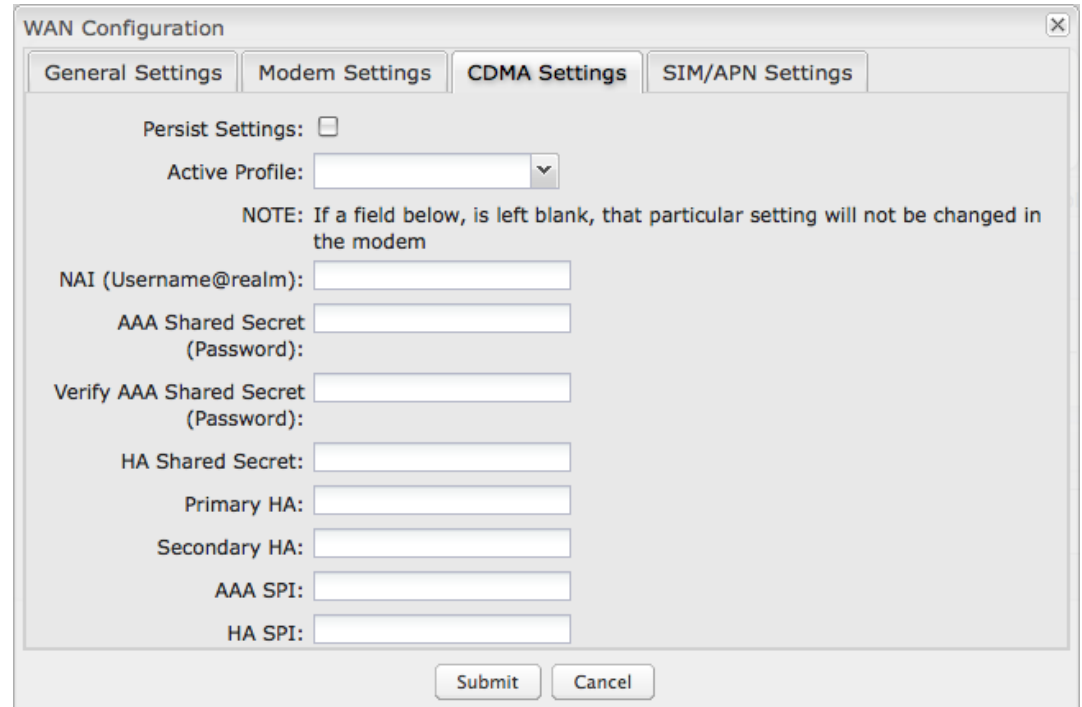


The screenshot shows the 'WAN Configuration' dialog box with the 'CDMA Settings' tab selected. The 'Persist Settings' checkbox is unchecked. The 'Active Profile' is a dropdown menu. Below these are several text input fields for NAI, AAA Shared Secret (Password), Verify AAA Shared Secret (Password), HA Shared Secret, Primary HA, Secondary HA, AAA SPI, and HA SPI. A note states: 'NOTE: If a field below, is left blank, that particular setting will not be changed in the modem'. At the bottom are 'Submit' and 'Cancel' buttons.

SIM/APN Settings

SIM PIN: PIN number for a GSM modem with a locked SIM.

Access Point Name (APN): Some wireless carriers provide multiple Access Point Names that a modem can connect to. Some APN examples are “isp.cingular” and “vpn.com”.

- **Default:** Let the router choose an APN automatically.
- **Manual:** Enter an APN by hand.
- **Select:** Select from a dropdown menu of the profiles already on the SIM.

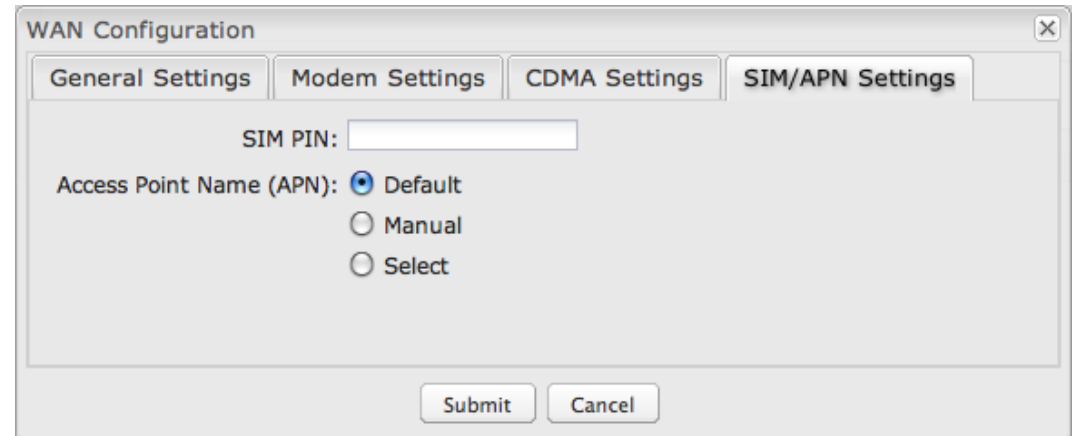

The screenshot shows a 'WAN Configuration' dialog box with a close button in the top right corner. It has four tabs: 'General Settings', 'Modem Settings', 'CDMA Settings', and 'SIM/APN Settings'. The 'SIM/APN Settings' tab is active. It contains a text input field for 'SIM PIN:'. Below it, the 'Access Point Name (APN):' section has three radio button options: 'Default' (which is selected), 'Manual', and 'Select'. At the bottom of the dialog are 'Submit' and 'Cancel' buttons.

WiMAX Settings

WiMAX Realm: Select from the following dropdown options:

- Clear – clearwire-wmx.net
- Rover – rover-wmx.net
- Sprint 3G/4G – sprintpcs.com
- Xohm –xohm.com
- BridgeMAXX – bridgeMAXX.com
- Time Warner Cable – mobile.rr.com
- Comcast – mob.comcast.net


TTLS Authentication Mode: TTLS inner authentication protocol. Select from the following dropdown options:

- **MSCHAPv2/MD5** (Microsoft Challenge Handshake Authentication Protocol version2/Message-Digest Algorithm 5)
- **PAP** (Password Authentication Protocol)
- **CHAP** (Challenge Handshake Authentication Protocol)

TTLS Username: Username for TTLS authentication.

TTLS Password: Password for TTLS authentication.

WiMAX Authentication Identity: User ID on the network. Leave this blank unless your provider tells you otherwise.

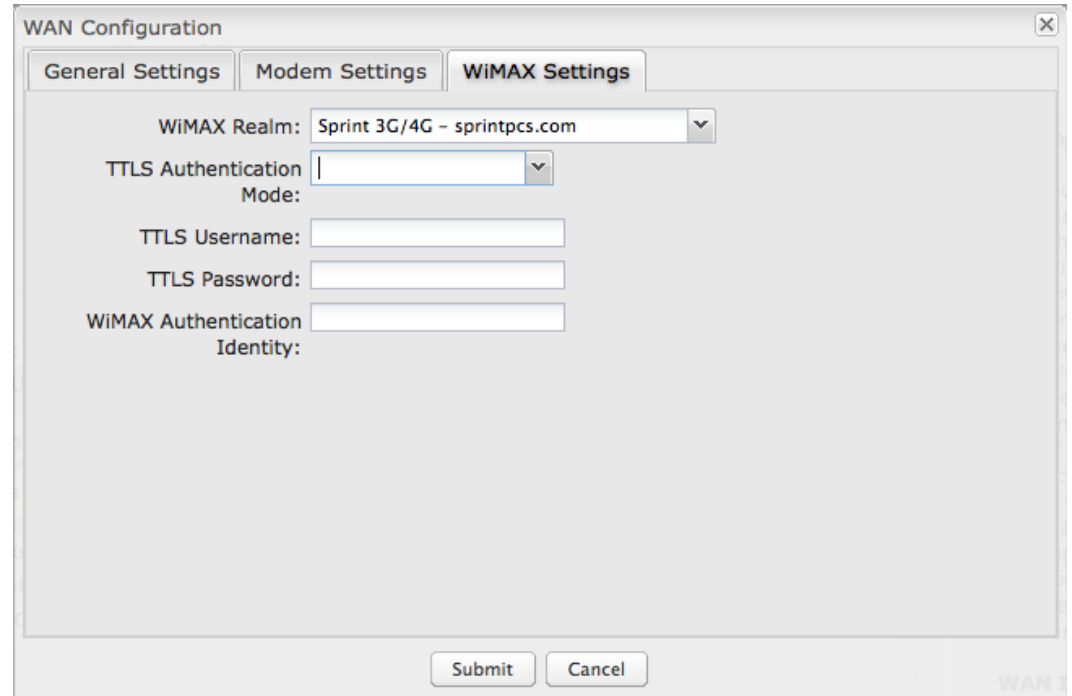

The screenshot shows the 'WAN Configuration' dialog box with the 'WiMAX Settings' tab selected. The 'WiMAX Realm' dropdown is set to 'Sprint 3G/4G - sprintpcs.com'. The 'TTLS Authentication Mode' dropdown is currently empty. Below it are text input fields for 'TTLS Username', 'TTLS Password', and 'WiMAX Authentication Identity'. At the bottom right, there are 'Submit' and 'Cancel' buttons.

7.1.6 Update/Activate a Modem

Some 3G modems can be updated and activated while plugged into the router. Updates and activation methods vary by modem model and service provider. Possible methods are: PRL Update, Activation, and FUMO. All supported methods will be displayed when you select your modem and click “Update/Activate”. If no methods are displayed for your device then you will need to update and activate your device externally.

To update or activate a modem, select the device and click “Control”.

The modem *does not* support Update/Activate methods: A message will state that there is no support for PRL Update, Activation, or FUMO.


The modem supports Update/Activate methods: A message will display showing options for each supported method:

- **Modem Activation / Update:** Activate, Reactivate, or Upgrade Configuration.
- **Preferred Roaming List (PRL) Update**
- **Firmware Update Management Object (FUMO)**

Click the appropriate icon to start the process.


If the modem is connected when you start an operation the router will automatically disconnect it. The router may start another modem as a failover measure. When the operation is done the modem will go back to an idle state, at which point the router may restart it depending on failover and fallback settings.

NOTE: Only one operation is supported at a time. If you try to start the *same* operation on the *same* modem twice the UI will not report failure and the request will finish normally when the original request is done. However if you try to start a *different* operation or use a *different* modem, this second request will fail without interfering with the pending operation.

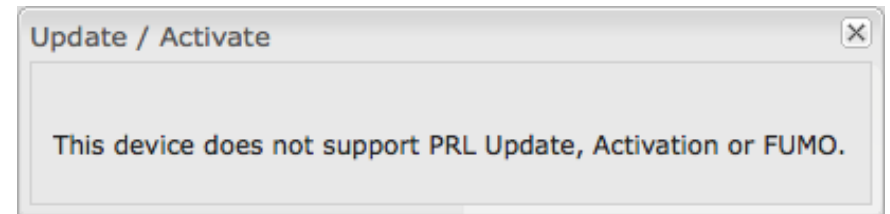

Process Timeout: If the process fails an error message will display.


Activation has a 3-minute timeout, PRL update has a 4-minute timeout, and FUMO has a 10-minute timeout.

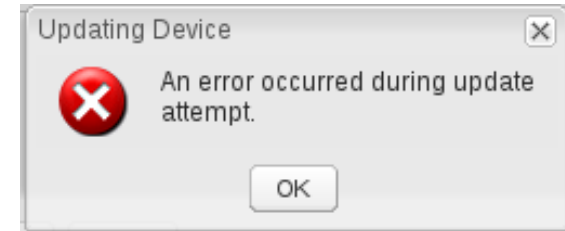

7.1.7 Configuration Rules (Advanced)

This section allows you to create general rules that apply to the Internet connections of a particular type. These can be general or very specific. For example, you could create a rule that applies to all WiMAX modems, or a rule that only applies to an Internet source with a particular MAC address.

The Configuration Rules list shows all rules that you have created, as well as all of the default rules. These are listed in the order they will be applied. The most general rules are listed at the top, and the most specific rules are at the bottom. The router goes down the list and applies all rules that fit for attached Internet sources. Configuration settings farther down the list will override previous settings.

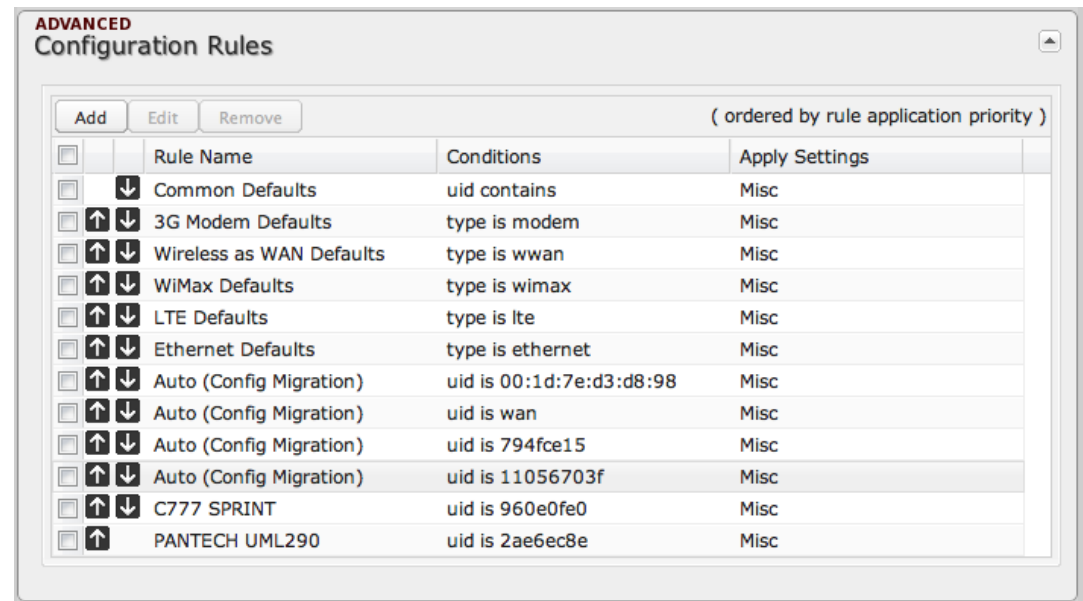

Select any of these rules and click “Edit” to change the settings for a rule. To create a new rule, click “Add.”

WAN Configuration Rule

This section allows you to create simple or complex rules that affect how individual Internet sources or classes of sources (perhaps all WiMAX modems or all modems from Sierra Wireless) behave in the router.

After clicking “Add” or “Edit,” you will see a popup with the following tabs:

- **Filter Criteria**
- **General Settings**
- **Ethernet Settings**
- **Modem Settings**
- **WiMAX Settings**
- **CDMA Settings**
- **SIM/APN Settings**


Filter Criteria. Begin by setting the **Filter Criteria** if you are creating a new rule. Create a name for your rule and the condition for which the rule applies:

Rule Name: Create a name meaningful to you. This name is optional.

Select each of the following to create a condition for your rule. **When:**

- **Port:** Internal USB Port or External USB Port.
- **Manufacturer:** Select by the manufacturer, such as Sierra Wireless.
- **Model:** Set your rule according to the specific model of modem.
- **Type** (Ethernet, LTE, Modem, WiMAX, Wireless as WAN, HSPA): Select by type of Internet source.
- **Serial Number:** Select 3G or LTE modem by Serial Number.
- **MAC Address:** Select WiMAX modem by MAC Address.
- **Unique ID:** Select by ID. This is generated by the router and displayed when the device is connected to the router.

Condition: Select “is,” “is not,” “starts with,” “contains,” or “ends with” to create your condition’s statement.

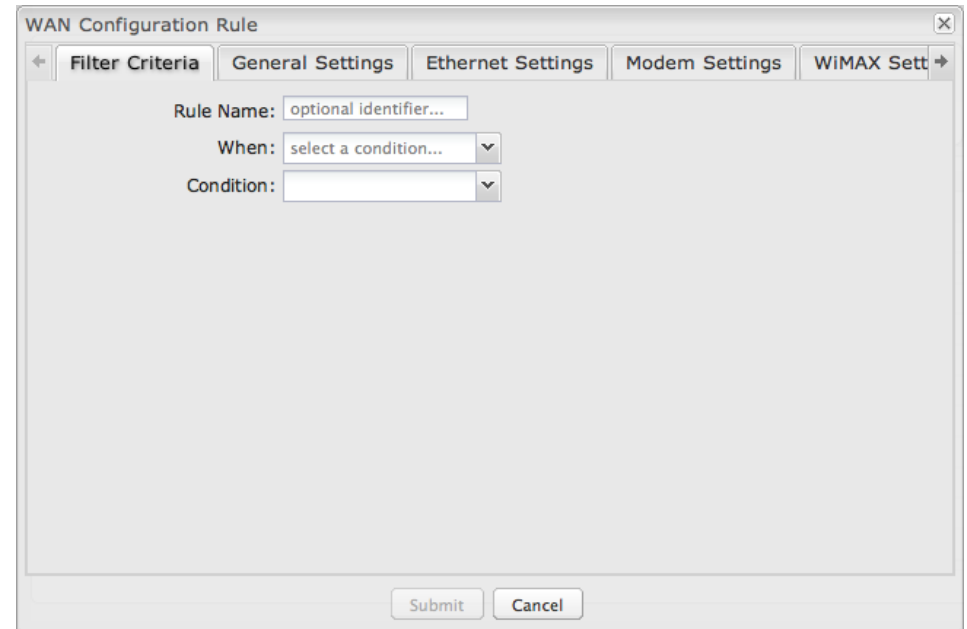

The screenshot shows a window titled "WAN Configuration Rule" with a close button (X) in the top right corner. The window has several tabs: "Filter Criteria" (selected), "General Settings", "Ethernet Settings", "Modem Settings", and "WiMAX Settings". The "Filter Criteria" tab contains the following fields:

- Rule Name:** A text input field containing "optional identifier..."
- When:** A dropdown menu with "select a condition..." selected.
- Condition:** A dropdown menu.

At the bottom of the window, there are two buttons: "Submit" and "Cancel".

Value: If you chose Port or Type, select from the dropdown list. If you chose Manufacturer, Model, Serial Number, MAC Address, or Unique ID, you will need to manually input the information.

The condition will be of the following form:

“ (When) is/is not (value) ”

For example:

“Type is not WiMAX”

“Port is Internal USB Port”

Once you have established the condition for your configuration rule, choose from the other tabs to set the desired configuration. Use the arrow buttons along the top to reveal more tab options. All of the tab options: **General Settings**, **Ethernet Settings**, **Modem Settings**, **WiMAX Settings**, **CDMA Settings**, and **SIM/APN Settings** have the same configuration options shown above in the WAN Configuration section (the options for Configuration Rules are the same as they are for individual devices).

7.2 Data Usage


Data Usage Management & Alerts allows you to create and manage rules that help control the data usage of a modem. If you have a limited data plan or a price increase on your plan after a certain amount of usage, a **Data Usage Rule** can help you track these amounts. You can set a rule to shut down use of a modem and/or send a message when you reach a data usage amount you set.

Enable Data Usage:

Enable Data Usage: Enabled/Disabled. (Default: Disabled.)

When you select **Enabled**, you will see the **Data Usage Agreement** shown to the right. The purpose of this agreement is to ensure that you understand that the data numbers for the IBR600 may not perfectly match those of your carrier: CradlePoint cannot be held responsible. You must accept the agreement by clicking **Yes** in order to begin creating data usage rules.


Warning: You should set your data limits lower than your Data Allowance and regularly compare the numbers provided by the router with the numbers from your carrier.

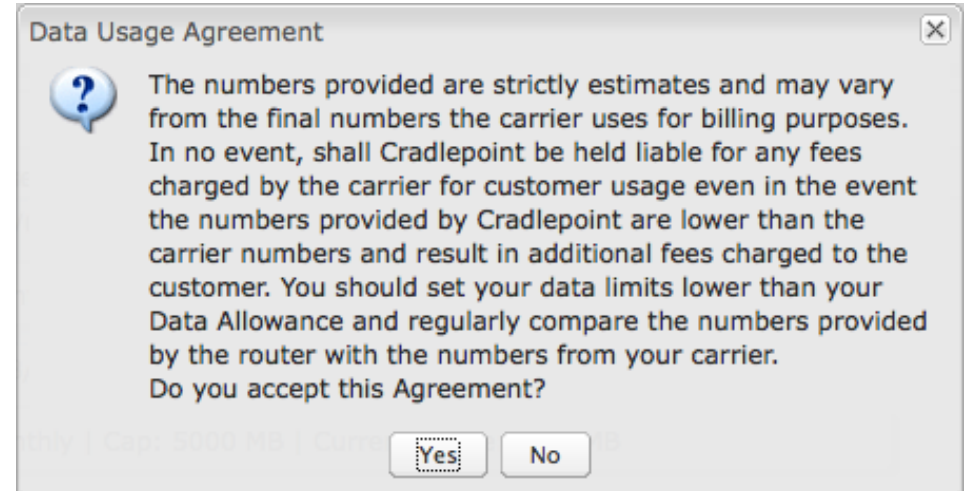

7.2.1 Data Usage Rules

The Data Usage Rule display shows basic information for each rule you have created (including rules created with a template). The following information is displayed:

- **Rule Name**
- **Enabled:** True/False
- **Date for Rule Reset**
- **Cycle Type:** Daily, Weekly, or Monthly
- **Cap:** Amount in MB.
- **Current Usage:** Shown as an amount in MB, as a percentage of the cap, and in a bar graph.

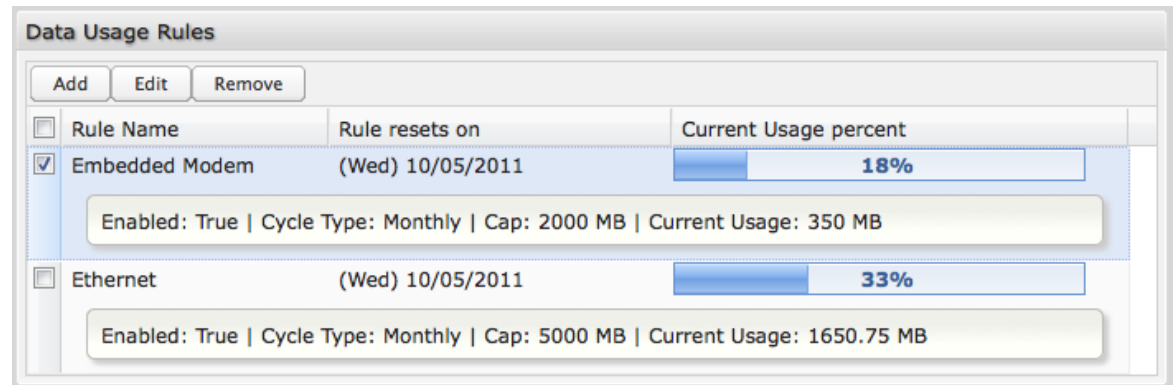

Click **Add** to configure a new Data Usage Rule.

Usage Rule Configuration – page 1


Rule Name: Give your rule a name for later recognition.

WAN Selection: Select from the dropdown list of currently attached WAN devices.

Assigned Usage in MB: Enter a cap amount in megabytes. 1024 megabytes equals 1 gigabyte.

Rule Enabled: (Default: Enabled.) Click to disable.

Click **Next** to continue to page 2.

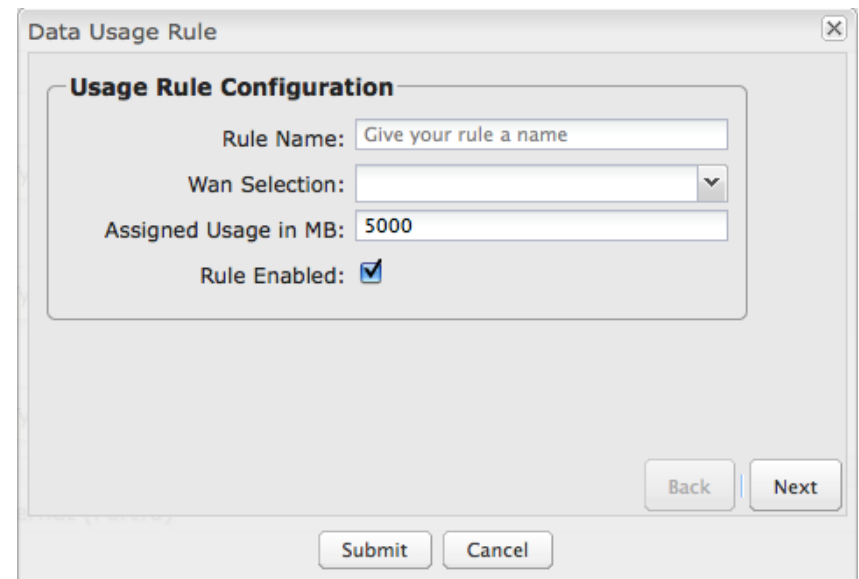


Usage Rule Configuration – page 2

Cycle Type: How often the rule will reset. The data usage amount will be reset at the end of each cycle. Select the length of a cycle from a dropdown menu with the following choices:

- Daily
- Weekly
- Monthly

Cycle Start Date: Select the date you wish the rule to begin. This date will be used to track when the rule will be reset.

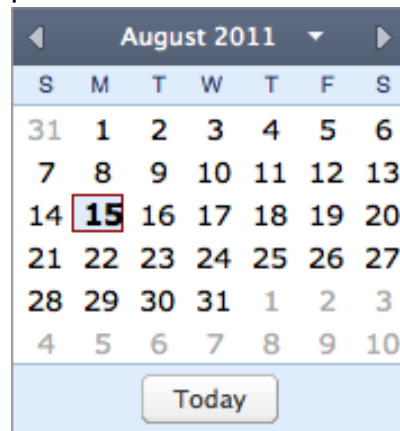


Shutdown WAN on Cap: If selected, the WAN device will shut down when the assigned usage is reached. A cycle reset or a rule deletion will re-enable the device.

Send Alert on Cap: An email alert will be generated and sent when the assigned usage is reached.

WARNING: The SMTP mail server must be configured in System Settings → Device Alerts.

Custom Alert: When checked you enable a second email to be configured for a percentage of the assigned usage.

Percent of Usage (1-1000): If selected, a custom alert will be sent when your data usage reaches this percentage of your usage cap. For example, you could set this at 90 percent so that you know when your usage is nearing 100 percent of the cap.

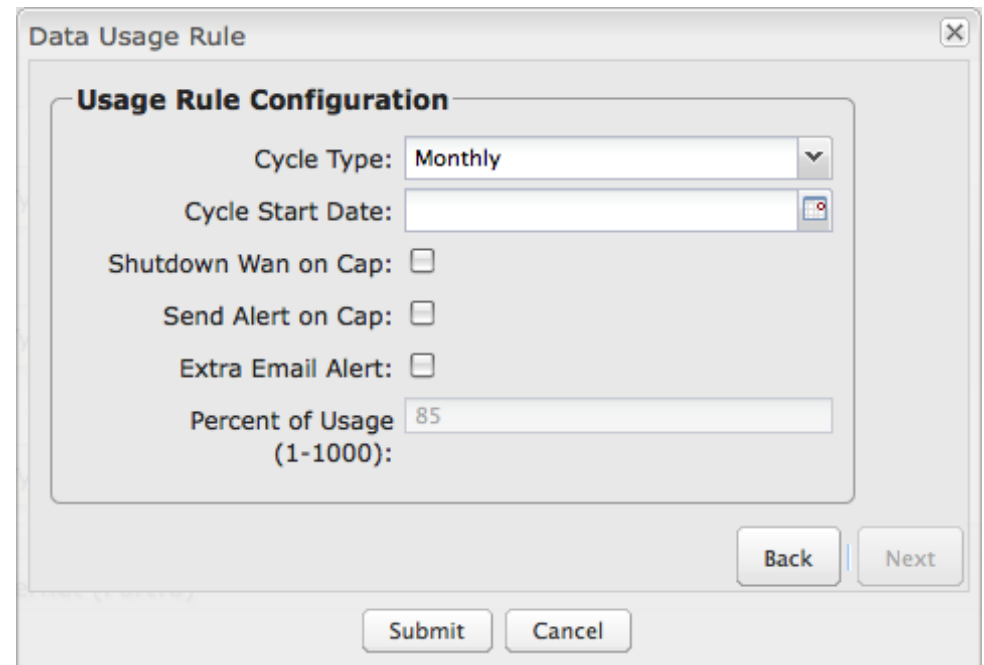

7.2.2 Template Configuration

Templates allow you to control multiple WAN devices with the same rule. Each WAN device that matches a template will automatically have its own rule created.

Template configuration				
<input type="button" value="Add"/> <input type="button" value="Edit"/> <input type="button" value="Remove"/>				
<input type="checkbox"/>	Template Name	WAN type	Assigned Usage in MB	Cycle Type
<input type="checkbox"/>	USB data plans	modem	5000	monthly

Click **Add** to configure a new Template rule.

Create a **Template Name** that you can recognize.

The template will apply to one of the following

WAN types:

- All WAN
- All Ethernet
- All Modems

Select one of these types.

The rest of the rule settings options match those in the **Data Usage Rules**. See the section above for additional information about how to configure your template usage rules.

Template Rule Creation

Template Name:

WAN type: All WAN All Ethernet All Modems

Assigned Usage in MB:

Cycle Type:

Cycle Start Date:

Shutdown WAN on Cap:

Send Alert on Cap:

Extra Email Alert:

Percent of Usage (1-1000):

7.2.3 Historical Data

Historical Data shows a graph of data usage for each attached WAN source that has an assigned Data Usage Rule. The graph shows the usage trend for one day.

Click **Add Usage** to manually input additional usage for an attached data source. You might do this if you used your modem while not attached to your router and you want to keep an accurate count of your data usage.


Enter the date of usage by using the pop-up calendar. Then enter the total data in MB—both in and out—to update the usage amounts.

Add data usage ✕

Select Date:

Total MB In:

Total MB Out:

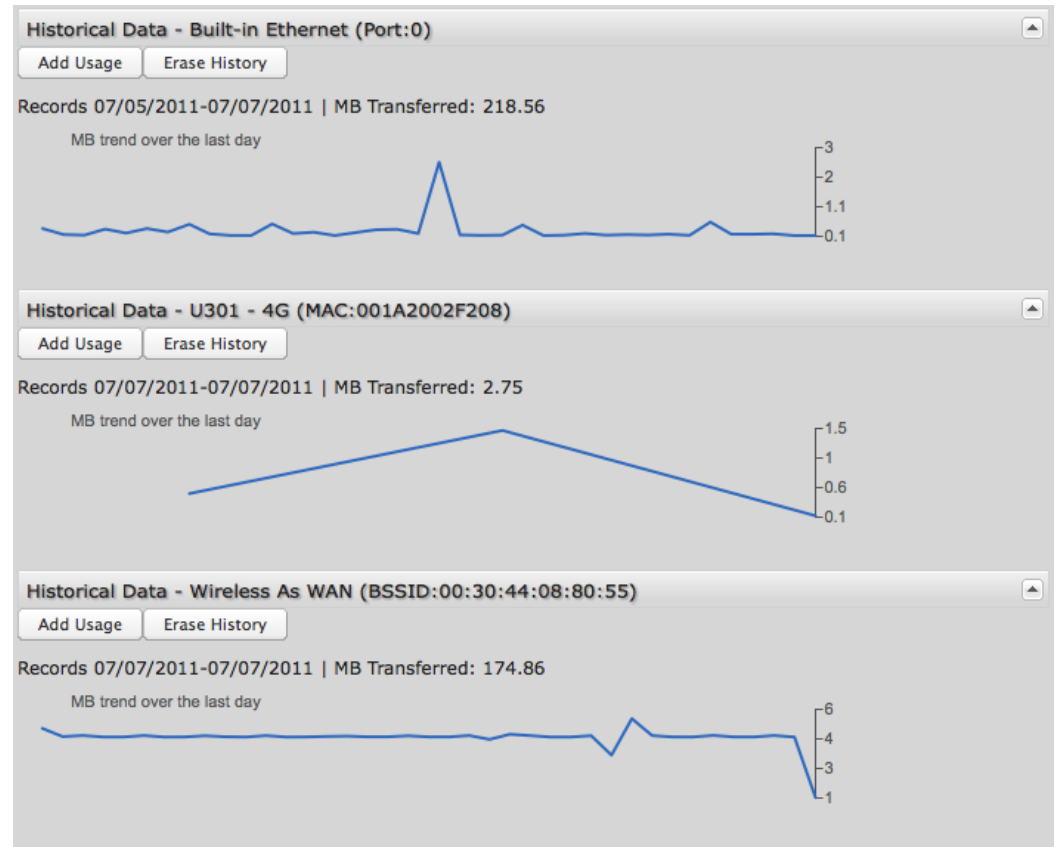

7.3 GRE Tunnels

Generic Routing Encapsulation (GRE) tunnels can be used to create a connection between two private networks. The IBR600 is enabled for either GRE or VPN tunnels. GRE tunnels are simpler to configure and more flexible for different kinds of packet exchanges, but VPN tunnels are much more secure.

GRE Tunnels							
<input type="button" value="Add"/> <input type="button" value="Edit"/> <input type="button" value="Remove"/>							
<input type="checkbox"/>	Name	Local Network	Remote Network	Remote Gateway	Routes	Keep Alive	Enabled
<input type="checkbox"/>	office_tunnel	10.1.1.1 255.255.255.0	10.1.1.2 255.255.255.0	172.22.22.1	1	Yes	Yes

In order to set up a tunnel you must know the following:

- **Local Network** and **Remote Network** addresses for the “**Glue Network**,” the network that is created by the administrator that serves as the “glue” between the networks of the tunnel. Each address must be a different IP address from the same private network, and these addresses together form the endpoints of the tunnel.
- **Remote Gateway**, the public facing WAN IP address that the local gateway is going to connect to.
- Optionally, you might also want to enable the tunnel **Keep Alive** feature to monitor the status of a tunnel and more accurately determine if the tunnel is alive or not.

Click **Add** to configure a new GRE tunnel.

Page 1: General

Tunnel Name: Choose a name that is meaningful to you.

Local Network: This is the local side of the “**Glue Network**,” a network created by the administrator to form the tunnel. The user creates the IP address inputted here. It must be different from the IP addresses of the networks it is gluing together.

Choose any private IP address from the following three ranges that doesn't match either network:

- 10.0.0.0 - 10.255.255.255
- 172.16.0.0 - 172.31.255.255
- 192.168.0.0 - 192.168.255.255


Remote Network: This is the remote side of the “**Glue Network**.” Again, the user must create an IP address that is distinct from the IP addresses of the networks that are being glued together.

The Remote Network and Local Network values will be flipped when inputted for the other side of the tunnel configuration.

Subnet Mask: This is the subnet mask for the Glue Network. The Local and Remote Network addresses must fit with this mask. 255.255.255.0 is a logical choice for most users.

Remote Gateway: This is the public facing, WAN-side IP address of the network that the local gateway is going to connect to.

Tunnel Enabled: Select to activate the tunnel.

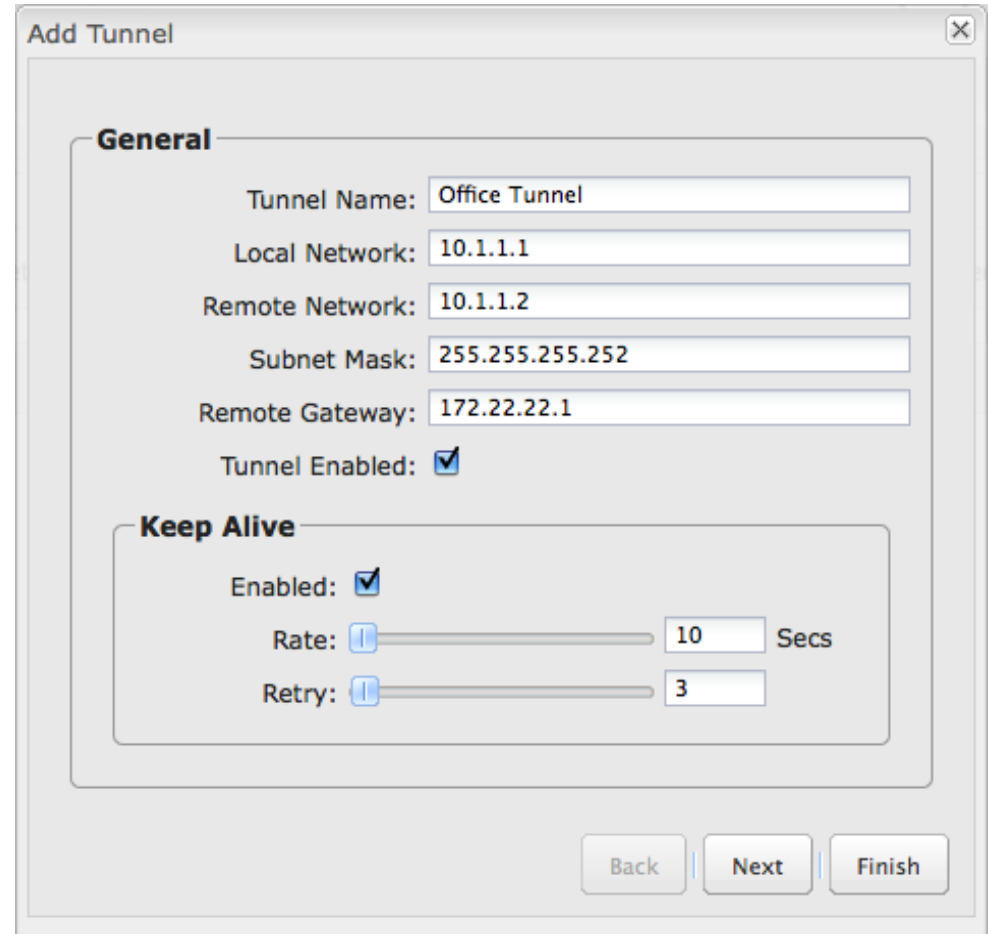

The screenshot shows the 'Add Tunnel' configuration window. It has a title bar with 'Add Tunnel' and a close button. The window is divided into two main sections: 'General' and 'Keep Alive'. In the 'General' section, there are five text input fields: 'Tunnel Name' (Office Tunnel), 'Local Network' (10.1.1.1), 'Remote Network' (10.1.1.2), 'Subnet Mask' (255.255.255.252), and 'Remote Gateway' (172.22.22.1). Below these is a checkbox for 'Tunnel Enabled' which is checked. The 'Keep Alive' section has a checkbox for 'Enabled' which is checked, a 'Rate' slider set to 10 with the unit 'Secs', and a 'Retry' slider set to 3. At the bottom right of the window are three buttons: 'Back', 'Next', and 'Finish'.

Keep Alive: This feature monitors the status of a tunnel. This will more accurately determine if the tunnel is alive or not. Choose the **Rate** in seconds for each check (Default: 10 seconds. Range: 2 – 3600 seconds) and the number of **Retry** attempts (Default: 3. Range: 1 – 255).

Page 2: Routes


Adding routes allows you to configure what types of network traffic from the local host or hosts will be allowed through the tunnel.

Click **Add Route** to configure a new route. You will need to input the following information, defined by the remote network:

- **Network Address**
- **Netmask:** (Default: 255.255.255.0)

You can set the tunnel to connect to a range of IP addresses or to a single IP address. For example, you could input **192.168.0.0** and **255.255.255.0** to connect your tunnel to all the addresses of the remote network in the **192.168.0.x** range. Alternatively, you could select a single address by inputting that address along with a Netmask of **255.255.255.255**.

Click **Save** to record each new route.

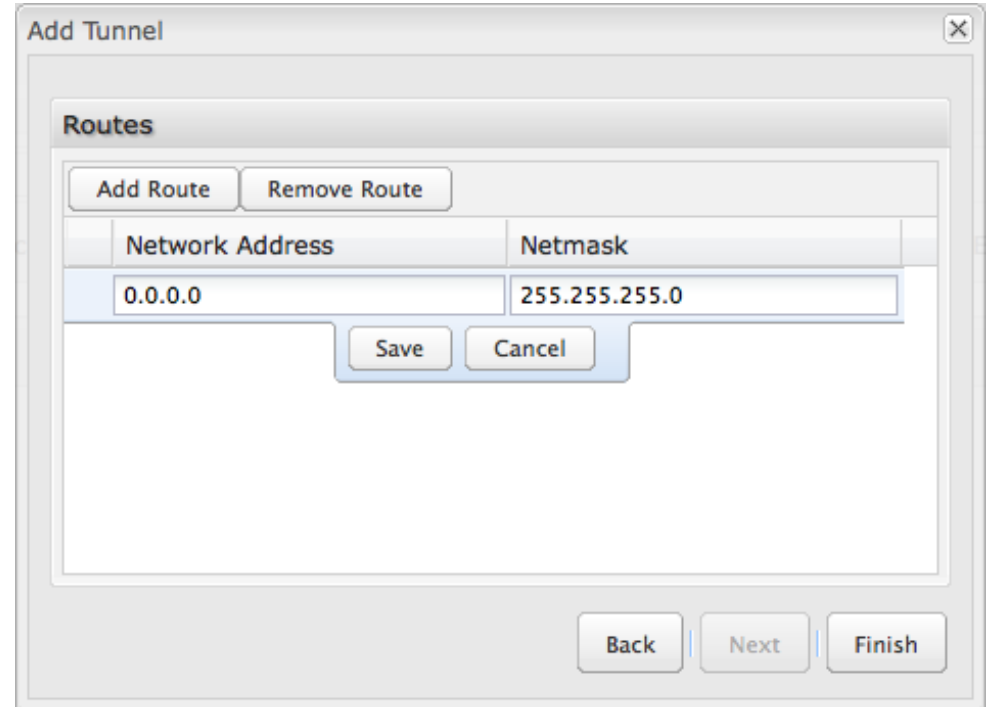


The screenshot shows a window titled "Add Tunnel" with a close button (X) in the top right corner. Inside the window, there is a section titled "Routes". At the top of this section are two buttons: "Add Route" and "Remove Route". Below these buttons is a table with two columns: "Network Address" and "Netmask". The "Network Address" column contains the text "0.0.0.0" and the "Netmask" column contains "255.255.255.0". Below the table are two buttons: "Save" and "Cancel". At the bottom of the window, there are three buttons: "Back", "Next", and "Finish".

When you have finished adding routes, click **Finish** to save your GRE tunnel configuration.

7.3.1 Global GRE Settings

GRE will use the primary WAN for connection, which will allow it to failover to other WANs as needed. If GRE needs to be tied to a particular WAN, it can be done by deselecting the box and selecting the appropriate WAN.

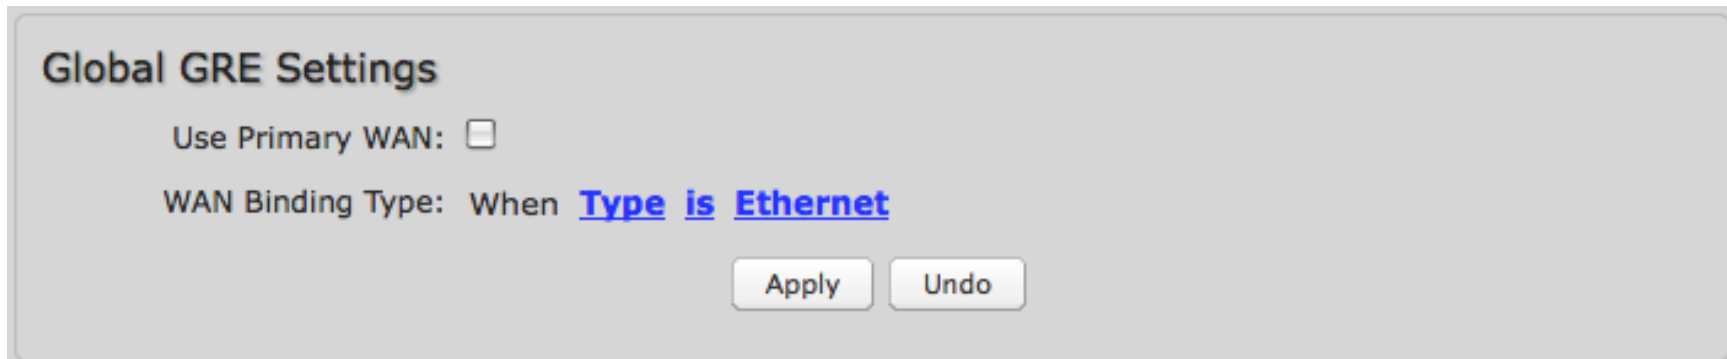

Global GRE Settings

Use Primary WAN:

WAN Binding Type: When **Type is Ethernet**

Apply Undo

Use Primary WAN: (Default: Selected.) Deselect to open further options.


WAN Binding Type: You have several options for specifying the type of WAN interface(s) you want associated with GRE Tunnels. Designate the interface(s) by **Port, Manufacturer, Model, Type, Serial Number, MAC Address, or Unique ID**. This selection will create a dropdown list of options to complete a sentence with the following form: “When _____ is _____,” such as, “When TYPE is LTE.” You also have the option to replace “is” with “isn’t,” “starts with,” “ends with,” or “contains.”

- **Port:** Select from the dropdown list of possible WAN ports on the router.
 - WAN Ethernet
 - LAN Ethernet
 - undefined
- **Manufacturer:** Select from a dropdown list of attached devices.
- **Model:** Select from a dropdown list of attached devices.
- **Type:** Select from the dropdown list of possible WAN types.
 - WiMAX
 - Modem
 - LTE

- Ethernet
- Wireless As WAN
- **Serial Number:** Select from a dropdown list of attached devices.
- **MAC Address:** Select from a dropdown list of attached devices.
- **Unique ID:** Select from a dropdown list of attached devices.

7.4 VPN Tunnels

VPN (virtual private network) tunnels are used to establish a secure connection to a remote network over a public network. For example, VPN tunnels can be used across the Internet by an individual to connect to an office network while traveling or by two office networks to function as one network. The two networks set up a secure connection across the (normally) unsecure Internet by assigning VPN encryption protocols.

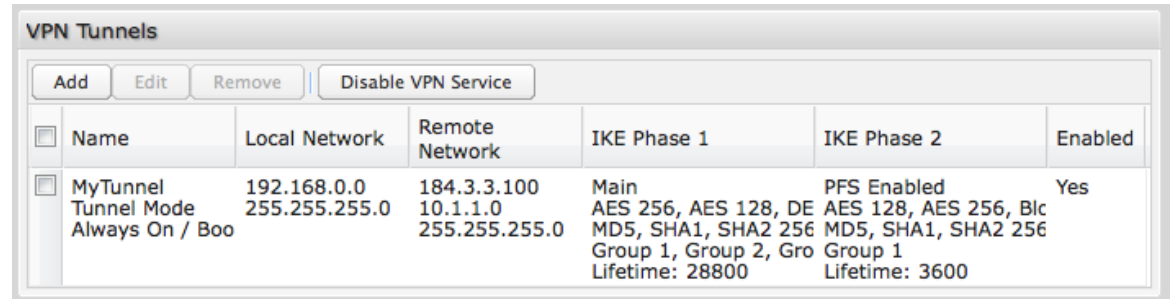

<input type="checkbox"/>	Name	Local Network	Remote Network	IKE Phase 1	IKE Phase 2	Enabled
<input type="checkbox"/>	MyTunnel	192.168.0.0	184.3.3.100	Main	PFS Enabled	Yes
	Tunnel Mode	255.255.255.0	10.1.1.0	AES 256, AES 128, DE	AES 128, AES 256, Blc	
	Always On / Boo		255.255.255.0	MD5, SHA1, SHA2 256	MD5, SHA1, SHA2 256	
				Group 1, Group 2, Gro	Group 1	
				Lifetime: 28800	Lifetime: 3600	

The IBR600 uses IPsec (Internet Protocol security) to authenticate and encrypt packets exchanged across the tunnel. To set up a VPN tunnel with the IBR600 on one end, there must be another device (usually a router) that also supports IPsec on the other end.

IKE (Internet Key Exchange) is the security protocol in IPsec. IKE has two phases, Phase 1 and Phase 2. The IBR600 has several different security protocol options for each phase, but the default selections will be sufficient for most users.

The VPN tunnel status page allows you to view the state of the VPN tunnels. If a tunnel fails to connect to the remote site, check the System Logs for more information. You may double click on a cell to directly edit that information.

Click **Add** to configure a new VPN tunnel.

7.4.1 Page 1: General

Tunnel Name: Choose a name meaningful to you.


Local Identity: This can be left blank for most users. If left blank it will default to the IP address of the WAN connection. Currently we only support identifiers in the form of an **IP address**, a **user fully qualified domain name** (user@mydomain.com) or just a **fully qualified domain name** (www.mydomain.com). If the remote side of the tunnel is configured to expect an identifier, then both **must match** in order for the negotiation to succeed.

Remote Identity: This can be left blank for most users. If left blank it will default to the IP address of the WAN connection. Currently we only support identifiers in the form of an **IP address**, a **user fully qualified domain name** (user@mydomain.com) or just a **fully qualified domain name** (www.mydomain.com). If no identifier is defined then no verification of the remote peer's identification will be done.

Pre-shared Key: Create a password or key. The routers on both sides of the tunnel must use this same key.

Mode: **Tunnel** or **Transport**. **Tunnel Mode** is used for protecting traffic between different networks, when traffic must pass through an intermediate, untrusted network. **Transport Mode** is used for end-to-end communications (for example, for communications between a client and a server).

Initiator Mode: “**Always On/Boot**” or “**On Demand.**” “**Always On/Boot**” is used if you want the tunnel to initiate the tunnel connection whenever the WAN becomes available. **On Demand** is used if you want the tunnel to initiate a connection if and only if there is data traffic bound for the remote side of the tunnel.

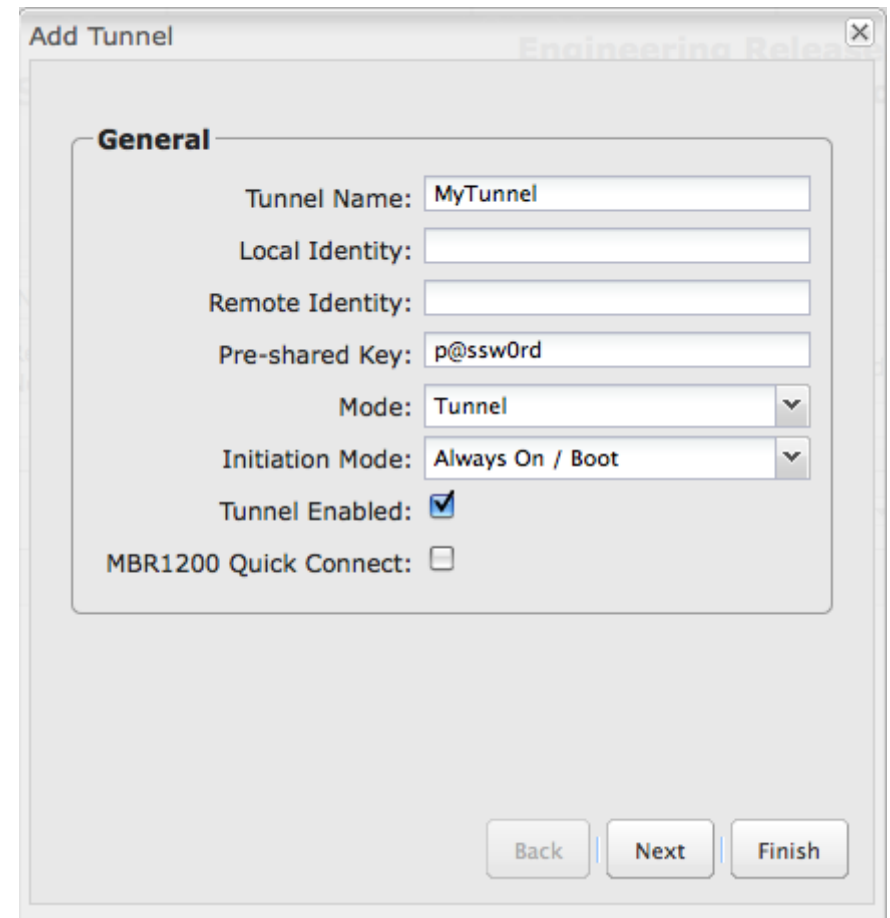

The screenshot shows a configuration window titled "Add Tunnel" with a close button in the top right corner. The window is divided into a "General" section. The fields in this section are:

- Tunnel Name: MyTunnel
- Local Identity: (empty)
- Remote Identity: (empty)
- Pre-shared Key: p@ssw0rd
- Mode: Tunnel (dropdown menu)
- Initiation Mode: Always On / Boot (dropdown menu)
- Tunnel Enabled:
- MBR1200 Quick Connect:

At the bottom right of the window, there are three buttons: "Back", "Next", and "Finish".

Tunnel Enabled: Enabled or Disabled.

MBR1200 Quick Connect: VPN tunnels in the IBR600 have more choices than they do in the MBR1200, so it is more complex to configure. Check this box to simplify setup by streamlining your options.

7.4.2 Page 2: Networks


Local Network: The **Network** IP address and the **Subnet Mask** define what local devices have access to or can be accessed from the VPN tunnel. The IBR600 will automatically fill in the values for your network, but you can change the values to limit the tunnel to only some of the devices in your network.

NOTE: The local network IP address *must* be different from the remote network IP address.

Remote Network: Enter the remote **Gateway's** IP address or fully qualified domain name (my.domain.com). It is recommended you use a dynamic DNS host name instead of the static IP address. By using the dynamic DNS host name updates of the remote WAN IP are compensated for while connecting to a VPN tunnel.

Enter the **Network** IP address with the **Subnet Mask** to define the remote network subnet that the local devices will have access to.

NOTE: The remote network IP address *must* be different from the local network IP address.

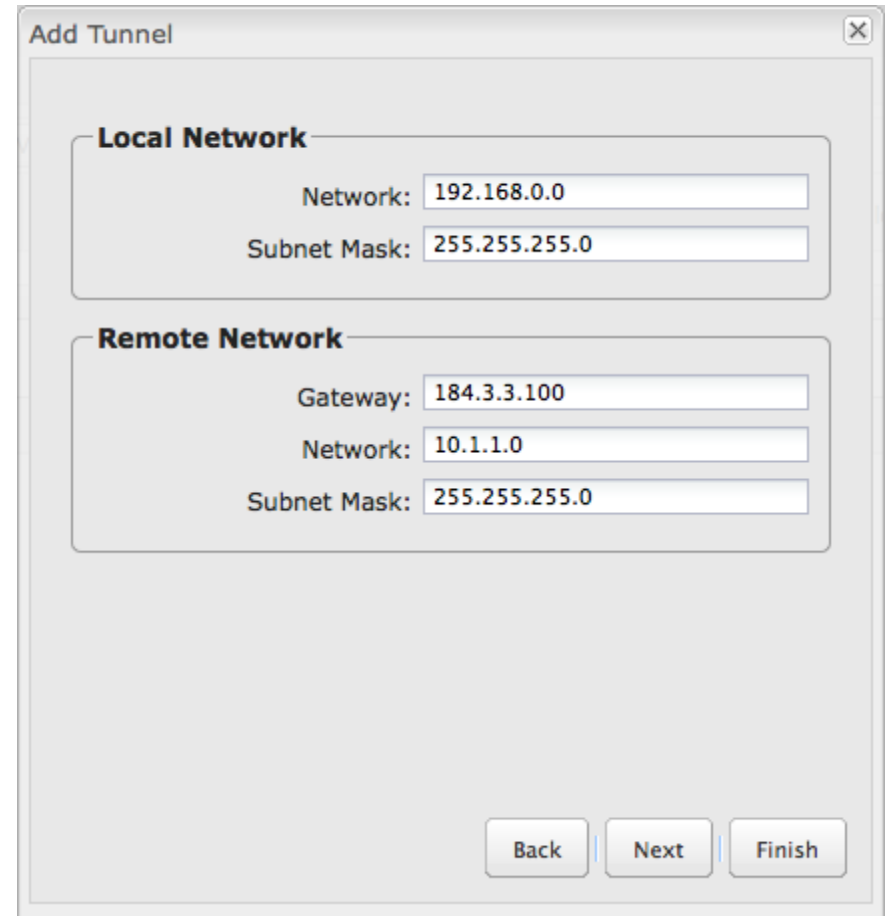

The screenshot shows a window titled "Add Tunnel" with a close button in the top right corner. It contains two sections: "Local Network" and "Remote Network".

Local Network:

- Network: 192.168.0.0
- Subnet Mask: 255.255.255.0

Remote Network:

- Gateway: 184.3.3.100
- Network: 10.1.1.0
- Subnet Mask: 255.255.255.0

At the bottom right of the window are three buttons: "Back", "Next", and "Finish".

7.4.3 Page 3: IKE Phase 1

IKE security has two phases, Phase 1 and Phase 2. You have the ability to distinctly configure each phase, but the default settings will be sufficient for most users.

To set up a tunnel with a remote site, you need to match your tunnel's IKE negotiation parameters with the remote site. By selecting several encryption, hash, and DH group options, you improve your chances for a successful tunnel negotiation. For greatest compatibility, select all options; for greatest security, select only the most secure options that your devices support.


Exchange Mode: The IKE protocol has 2 modes of negotiating phase 1 - **Main** (also called Identity Protection) and **Aggressive**.

- In **Main** mode, IKE separates the key information from the identities, allowing for the identities of peers to be secure at the expense of extra packet exchanges.
- In **Aggressive** mode, IKE tries to combine as much information into fewer packets while maintaining security. Aggressive mode is slightly faster but less secure.

Because it has better security, **Main** mode is recommended for most users.

Key Lifetime: The lifetime of the generated keys of Phase 1 of the IPsec negotiation from IKE. After the time has expired, IKE will renegotiate a new set of Phase 1 keys.

Encryption, Hash, and DH Groups: Each IKE exchange uses one encryption algorithm, one hash function, and one DH group to make a secure exchange.

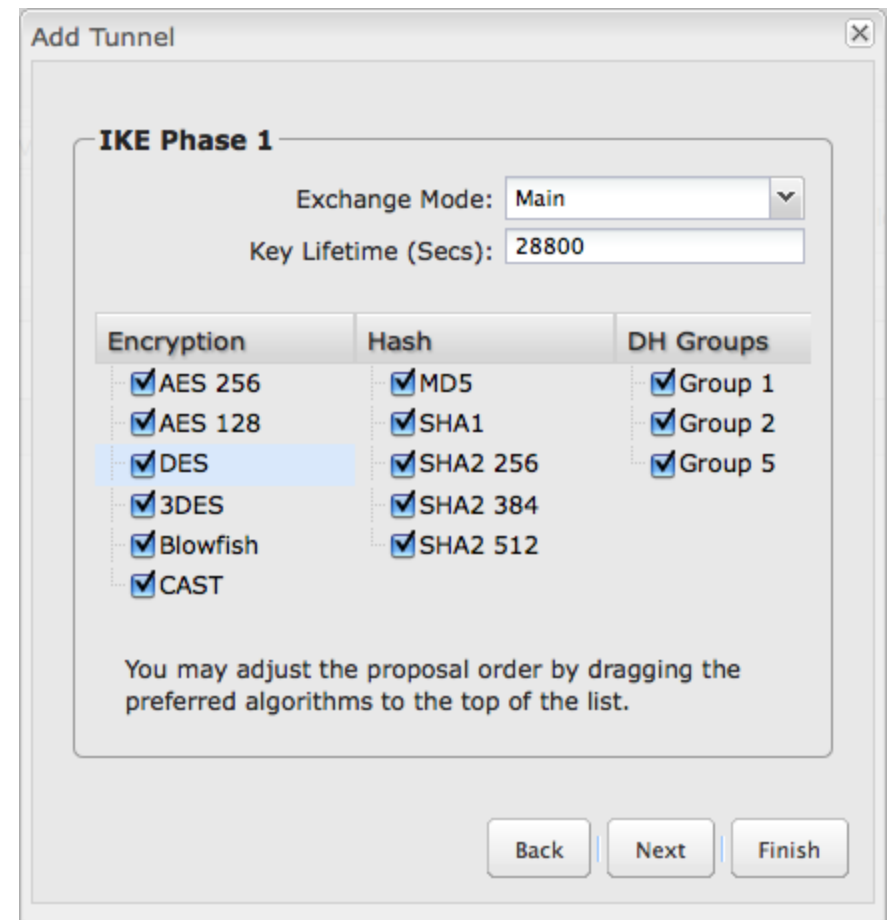

The screenshot shows the 'Add Tunnel' configuration window with the following settings for IKE Phase 1:

- Exchange Mode: Main
- Key Lifetime (Secs): 28800

Encryption	Hash	DH Groups
<input checked="" type="checkbox"/> AES 256	<input checked="" type="checkbox"/> MD5	<input checked="" type="checkbox"/> Group 1
<input checked="" type="checkbox"/> AES 128	<input checked="" type="checkbox"/> SHA1	<input checked="" type="checkbox"/> Group 2
<input checked="" type="checkbox"/> DES	<input checked="" type="checkbox"/> SHA2 256	<input checked="" type="checkbox"/> Group 5
<input checked="" type="checkbox"/> 3DES	<input checked="" type="checkbox"/> SHA2 384	
<input checked="" type="checkbox"/> Blowfish	<input checked="" type="checkbox"/> SHA2 512	
<input checked="" type="checkbox"/> CAST		

You may adjust the proposal order by dragging the preferred algorithms to the top of the list.

Buttons: Back, Next, Finish

- **Encryption:** Used to encrypt messages sent and received by IPsec.
 - AES 128
 - AES 256
 - Blowfish
 - CAST
 - DES
 - 3DES
- **Hash:** Used to compare, authenticate, and validate that data across the VPN arrives in its intended form and to derive keys used by IPsec.
 - MD5
 - SHA1
 - SHA2 256
 - SHA2 384
 - SHA2 512
- **DH Groups:** The DH (Diffie-Hellman) Group is a property of IKE and is used to determine the length of prime numbers associated with key generation. The strength of the key generated is partially determined by the strength of the DH Group. Group 5, for instance, has greater strength than Group 2.
 - DH group 1: 768-bit key.
 - DH group 2: 1024-bit key.
 - DH group 5: 1536-bit key.

In Phase 1, only one DH group can be selected while using **Aggressive** exchange mode.

By default, all the algorithms (encryption, hash, and DH groups) supported by the IBR600 are checked, which means they are *allowed* for any given exchange. Deselect these options to limit which algorithms will be accepted. Be sure to check that the router (or similar device) at the other end of the tunnel has matching algorithms.

The algorithms are listed in order by priority. You can reorder this priority list by clicking and dragging algorithms up or down. Any selected algorithm may be used for IKE exchange, but the algorithms on the top of the list are more likely to be used more often.


7.4.4 Page 4: IKE Phase 2

Perfect Forward Secrecy (PFS): Enabling this feature will require IKE to generate a new set of keys in Phase 2 rather than using the same key generated in Phase 1.

Additionally, the new keys generated in Phase 2 (with this option enabled) are exchanged in an encrypted session. Enabling this feature affords the policy greater security.

Key Lifetime: The lifetime of the generated keys of Phase 2 of the IPsec negotiation from IKE. After the time has expired, IKE will renegotiate a new set of Phase 2 keys.

Phase 2 has the same selection of **Encryption**, **Hash**, and **DH Groups** as Phase 1, but you are restricted to only one DH Group. Phase 2 and Phase 1 selections do not have to match.

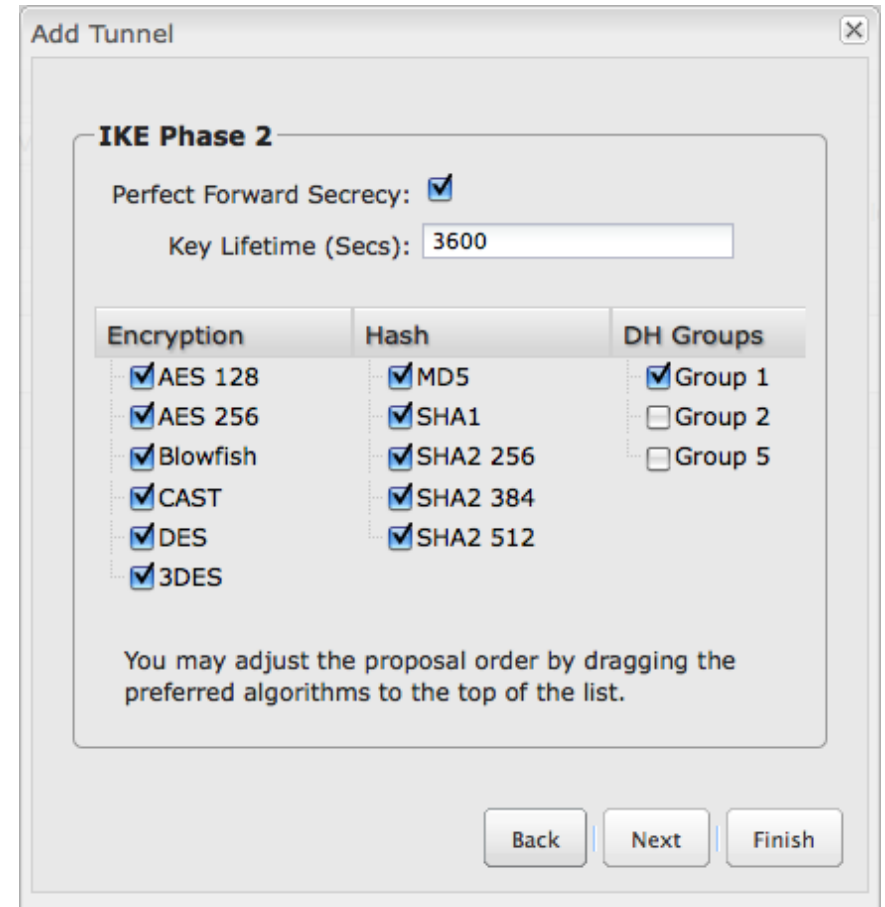

Add Tunnel

IKE Phase 2

Perfect Forward Secrecy:

Key Lifetime (Secs):

Encryption	Hash	DH Groups
<input checked="" type="checkbox"/> AES 128	<input checked="" type="checkbox"/> MD5	<input checked="" type="checkbox"/> Group 1
<input checked="" type="checkbox"/> AES 256	<input checked="" type="checkbox"/> SHA1	<input type="checkbox"/> Group 2
<input checked="" type="checkbox"/> Blowfish	<input checked="" type="checkbox"/> SHA2 256	<input type="checkbox"/> Group 5
<input checked="" type="checkbox"/> CAST	<input checked="" type="checkbox"/> SHA2 384	
<input checked="" type="checkbox"/> DES	<input checked="" type="checkbox"/> SHA2 512	
<input checked="" type="checkbox"/> 3DES		

You may adjust the proposal order by dragging the preferred algorithms to the top of the list.

Back Next Finish

7.4.5 Page 5: Dead Peer Detection


Dead Peer Detection (DPD) defines how the router will detect when one end of the IPsec session loses connection while a policy is in use.

Connection Idle Time allows you to configure how long the router will allow an IPsec session to be idle before beginning to send Dead Peer Detection (DPD) packets to the peer machine.

Request Frequency allows you to adjust the delay between these DPD packets to send as quickly as every 2 seconds up to 30 seconds apart.

Additionally, you can specify how many **Maximum Requests** to send at the selected time interval before the tunnel is considered dead.

You must click **Finish** to save your VPN tunnel.

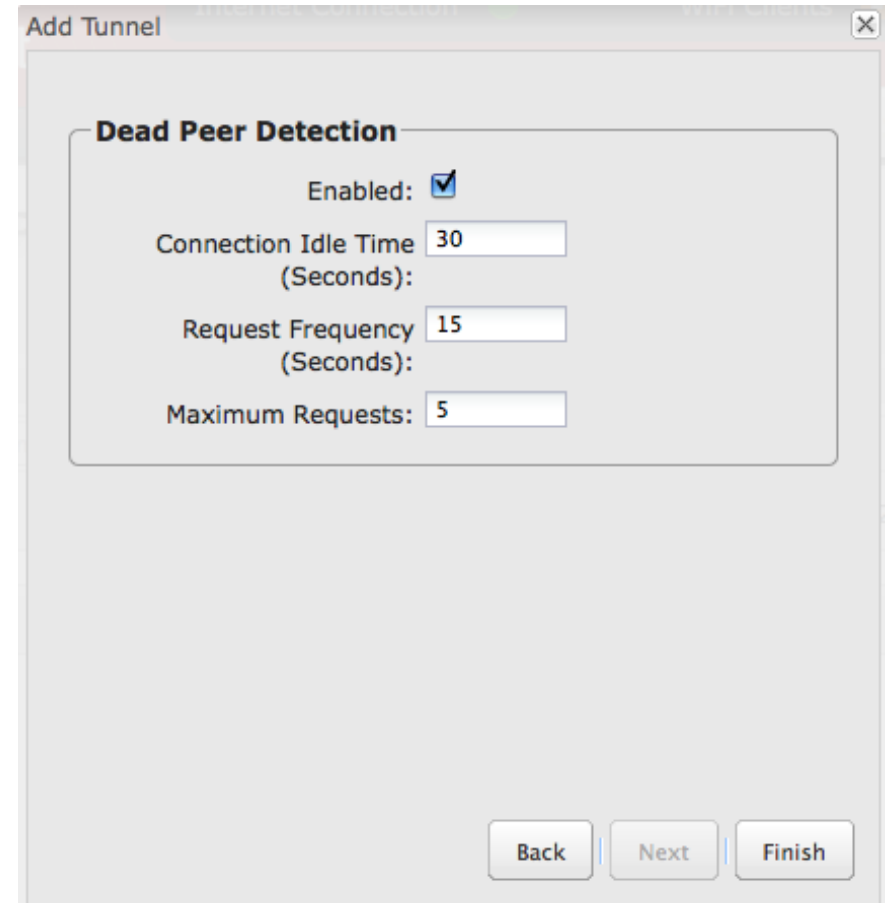

The screenshot shows a window titled "Add Tunnel" with a close button in the top right corner. Inside the window, there is a section titled "Dead Peer Detection" with a rounded border. The settings are as follows:

- Enabled:
- Connection Idle Time (Seconds):
- Request Frequency (Seconds):
- Maximum Requests:


At the bottom right of the window, there are three buttons: "Back", "Next", and "Finish".

7.4.6 Page 6: Tunnel Summary

The final page of the tunnel configuration interface is a summary of the tunnel specifications. This is especially helpful for matching this information with the router (or similar device) at the other end of the tunnel.

- Tunnel Name
- Mode
- Initiation Mode
- Pre-shared Key
- Local Network
- Remote Gateway
- Remote Network
- IKE Phase 1:
 - Exchange Mode
 - Key Lifetime (Secs)
 - Encryption
 - Hash
 - DH Groups
- IKE Phase 2:
 - PFS
 - Key Lifetime (Secs)
 - Encryption
 - Hash
 - DH Groups
- DPD

Click **Yes** at the bottom of the Tunnel Summary page to save your configuration changes. This will cause active tunnels to restart.

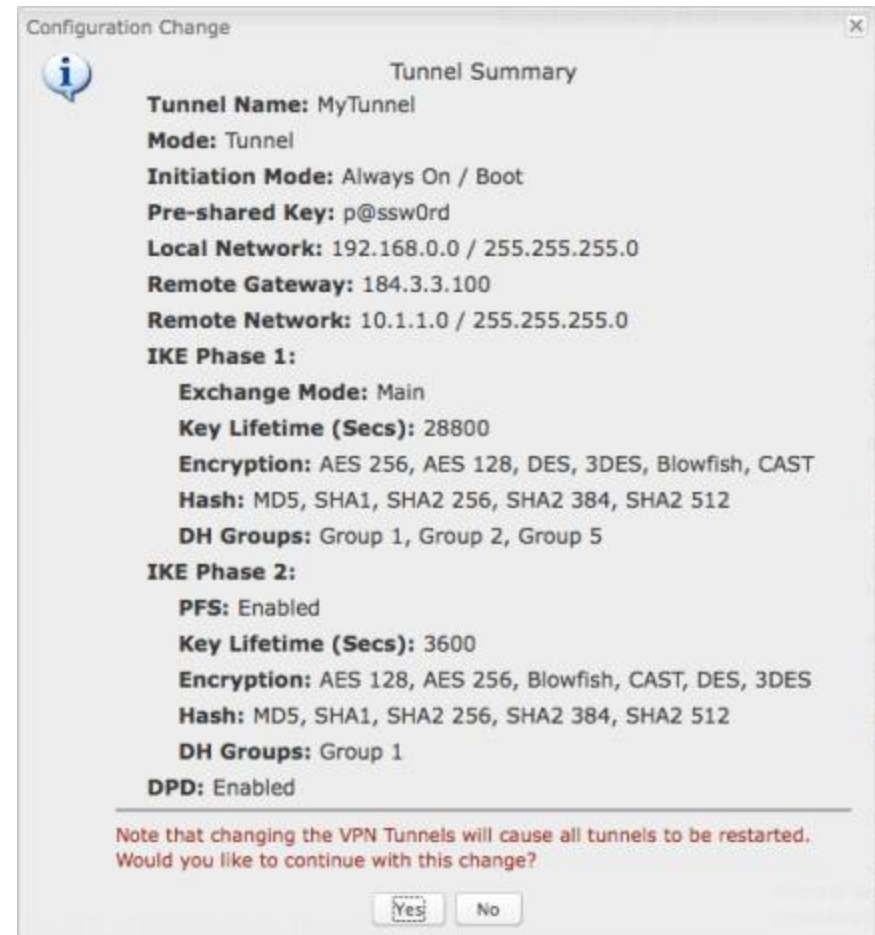

7.4.7 Global VPN Settings

These settings apply to all configured VPN tunnels.

Global VPN Settings

Use Primary WAN:

WAN Binding Type: When **Type is Ethernet**

IKE / ISAKMP Port:

IKE / ISAKMP NAT-T Port:

NAT-T KeepAlive Interval: 20 Secs

Tunnel Connect Retry: 30 Secs

Use Primary WAN: (Default: Selected.) Deselect to open options for specifying the WAN type. By default, VPN will use the primary WAN for connection, which will allow it to failover to other WANs as needed. If VPN needs to be tied to a particular WAN, deselect the box and selecting the appropriate WAN.

WAN Binding Type: You have several options for specifying the type of WAN interface(s) you want associated with GRE Tunnels. Designate the interface(s) by **Port**, **Manufacturer**, **Model**, **Type**, **Serial Number**, **MAC Address**, or **Unique ID**. This selection will create a dropdown list of options to complete a sentence with the following form: “When _____ is _____,” such as, “When TYPE is LTE.” You also have the option to replace “is” with “isn’t,” “starts with,” “ends with,” or “contains.”

- **Port:** Select from the dropdown list of possible WAN ports on the router.
 - WAN Ethernet
 - LAN Ethernet 1

- undefined
- **Manufacturer:** Select from a dropdown list of attached devices.
- **Model:** Select from a dropdown list of attached devices.
- **Type:** Select from the dropdown list of possible WAN types.
 - WiMAX
 - Modem
 - LTE
 - Ethernet
 - Wireless As WAN
- **Serial Number:** Select from a dropdown list of attached devices.
- **MAC Address:** Select from a dropdown list of attached devices.
- **Unique ID:** Select from a dropdown list of attached devices.

IKE / ISAKMP Port: Internet Key Exchange / Internet Security Association and Key Management Protocol port. Default: 500. This is a standard VPN port that usually does not need to be changed.

IKE / ISAKMP NAT-T Port: Internet Key Exchange / Internet Security Association and Key Management Protocol network address translation traversal port. Default: 4500. This is a standard VPN NAT-T port that usually does not need to be changed.

NAT-T KeepAlive Interval: Default: 20 seconds. Range: 0-3600 seconds. 20 seconds will be sufficient in almost all cases.

Tunnel Connect Retry: Default: 30 seconds. Range: 10-255 seconds. 30 seconds will be sufficient in almost all cases.

7.4.8 VPN with NAT-T


If one side of a planned VPN tunnel is behind a NAT (network address translation) firewall, the setup of your tunnel requires the following specifications:

1. Each side of the tunnel must use both a **Local Identity** and a **Remote Identity**. These must match the identities on the other side: The Local Identity must match the Remote Identity on the other side of the tunnel, and vice versa. In this case, these identities can each be a simple word.
2. The **Tunnel Name** for the side of the tunnel that is not behind the NAT firewall must be “anonymous”.
3. The VPN tunnel must be initiated from the side that is behind the NAT firewall.

7.5 WiFi as WAN / Bridge

WiFi as WAN uses another WiFi network as its Internet source and then rebroadcasts its own local network. For example, the IBR600 can create a private LAN using the public WiFi from a hotel as its WAN. **WiFi Bridge** functions similarly, but it rebroadcasts the original network. In other words, the router passes on the same settings and addresses already set up by the original NAT. **The WiFi as WAN and WiFi Bridge features cannot both be used at the same time.**

When either **WiFi as WAN** or **WiFi Bridge** is enabled, the IBR600 will find other WiFi networks that you can select and connect to. Unless a selected WiFi source is on an unprotected network, you will need to know its password or key.

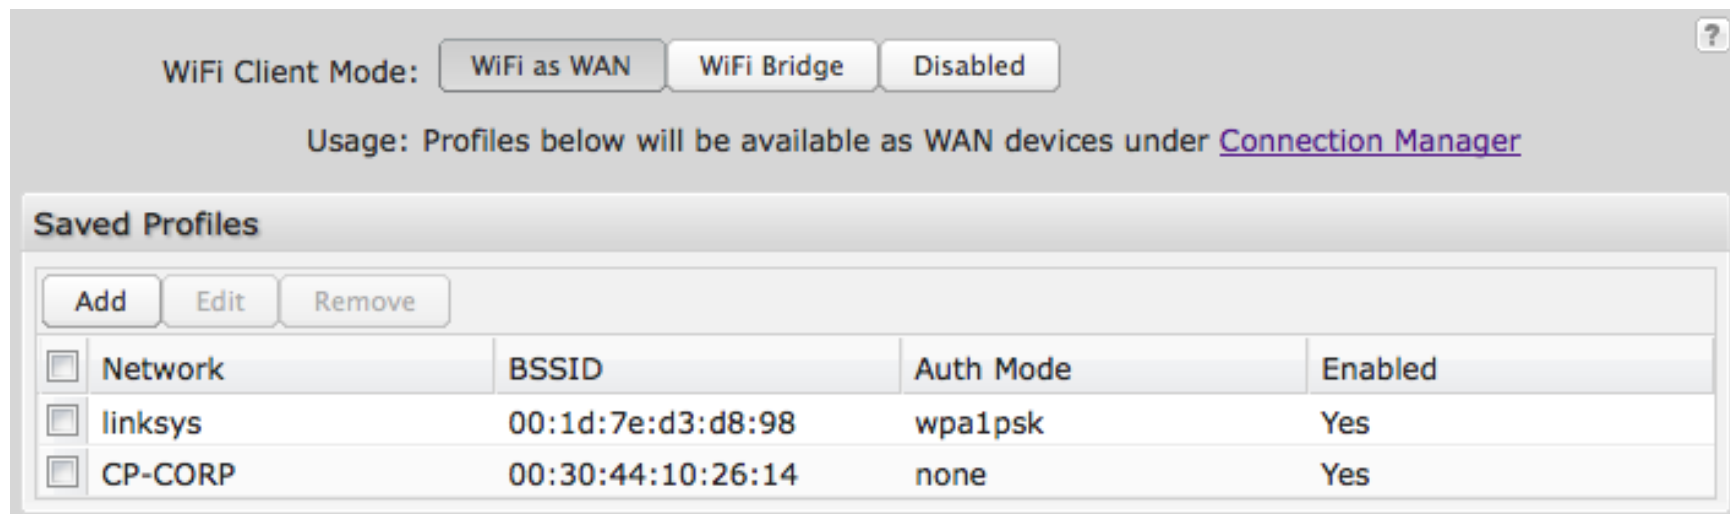

WiFi Client Mode: WiFi as WAN WiFi Bridge Disabled ?

Usage: Profiles below will be available as WAN devices under [Connection Manager](#)

Saved Profiles

<input type="checkbox"/>	Network	BSSID	Auth Mode	Enabled
<input type="checkbox"/>	linksys	00:1d:7e:d3:d8:98	wpa1psk	Yes
<input type="checkbox"/>	CP-CORP	00:30:44:10:26:14	none	Yes

All CradlePoint routers and some other routers use the same default IP address for the primary network, 192.168.0.1. If you attempt to set up WiFi as WAN and there is an “IP conflict,” you need to change the IP address. The router is attempting to use the same IP address for both WAN and LAN, which is impossible. Go to **Network Settings** → **WiFi / Local Networks**. **Select the network and click Edit. You can change the IP address under IP Settings. For example, you might change 192.168.0.1 to 192.168.1.1.**

7.5.1 WiFi Bridge

When in **WiFi Bridge** mode with a configured profile, a WiFi Bridge device will be added to the local network interfaces, providing a way to bridge two LANs over a WiFi connection. For example, two separate CradlePoint routers linked through WiFi Bridge mode allows you to have one WiFi-connected network in two separated sections of a large office building. This eliminates the need for extensive Ethernet cords to link the two routers, while allowing the full functionality of having one network.

A router that is using Bridge mode passes network information through from the partner access point, so typically DHCP and NAT should be disabled. The router will connect to the remote WiFi access point and enable the bridging of two LAN networks together over WiFi.

Under **Network Settings** → **WiFi / Local Networks**, choose the Local IP Network you want to attach this LAN interface to. Edit that Network, and under the "Interfaces" tab you will be able to see your WiFi Bridge profiles as "Available" interfaces.

NOTE: The LAN IP address of this router and the attached WiFi access point cannot be the same address.

To set up WiFi Bridge, follow these steps:

- 1) In **Internet** → **WiFi as WAN / Bridge** under **WiFi Client Mode**, click on "WiFi Bridge" to enable this mode.
- 2) Your bridge network must be enabled under **Saved Profiles**. Either import the desired network from **Site Survey** or click **Add** to configure it.
- 3) Once WiFi Bridge is enabled and a bridge network is configured in **Saved Profiles**, go to **Network Settings** → **WiFi / Local Networks** and select a network from the Local IP Networks list. Click on **Edit** to open the **Local Network Editor** and find the **Interfaces** tab. Your configured bridge network should be listed in the "Available" section. Add this interface to your chosen network.
- 4) You need to turn off the DHCP Server. If you click **Submit** after attaching the WiFi bridge interface, a window will pop up asking you if you want to turn off the DHCP Server. You can also do this manually: click on the **DHCP Server** tab while still under **Network Settings** → **WiFi / Local Networks** in the **Local Network Editor**. Deselect "DCHP Server" to disable it.
- 5) Optional: Also under **Network Settings** → **WiFi / Local Networks** in the **Local Network Editor**, click on the **IP Settings** tab. Change the **Routing Mode** to "Disabled." Changing the routing mode may improve security. You may also need to change the IP address to prevent IP conflict. Click **Submit** to save your configuration.

7.5.2 Saved Profiles

This is a list of WiFi networks that have already been configured as WAN sources (or Bridge profiles). The router will attempt to connect to any of these access points using the password you have configured. If more than one access point is in range, then the router will connect with the highest priority network.



WiFi Client Mode: WiFi as WAN WiFi Bridge Disabled

Usage: Profiles below will be available as WAN devices under [Connection Manager](#)

Saved Profiles

<input type="checkbox"/>	Network	BSSID	Auth Mode	Enabled
<input type="checkbox"/>	linksys	00:1d:7e:d3:d8:98	wpa1psk	Yes

Network: The name (SSID, or Service Set Identifier) that is broadcast by the access point.

BSSID: The numeric ID of the network (Basic Service Set Identifier). This parameter is required when trying to connect to a hidden network using WiFi as WAN. It is optional when connecting to a visible network. If it is set in a profile, both the SSID and BSSID must match to connect to an access point. If the BSSID is not set in a profile, then the router will connect to any access point that matches the given SSID.

Auth Mode: The type of encryption that is used by the network.

- None
- WEP Auto
- WEP Open
- WEP Shared
- WPA1 Personal
- WPA2 Personal
- WPA1 & WPA2 Personal

7.5.3 Site Survey

This is a list of WiFi networks that the router can currently find, along with information about the network such as its mode and channel. If you click on a network in the **Site Survey**, you can import it as a saved profile. You can sort the list based on any of the fields by clicking on the field name.

Click “Refresh” if a WiFi network to which you want to connect is invisible. **Site Survey** only operates on the 2.4 GHz band.

You have the option to manually add network profiles, but it is usually much easier to import them from **Site Survey**. Either click on **Add** under “**Saved Profiles**” or select a WiFi network in “**Site Survey**” and click **Import**.

If you import a network from **Site Survey**, most of the information about the network will already be completed. You need to input the password (if there is one) and then click submit to save the WiFi as WAN profile.

Site Survey - Configured for networks in the 2.4Ghz band

Refresh Import

<input type="checkbox"/>	Network	BSSID	RSSI	Mode	Auth Mode	Channel
<input type="checkbox"/>	CP-CORP	00:30:44:0f:e6:b7	-64	b/g/n	wpa1/tkipaes	11
<input type="checkbox"/>	CP-CORP	00:30:44:0f:e8:52	-76	b/g/n	wpa1/tkipaes	11
<input type="checkbox"/>	MBR1200-578	00:30:44:08:e5:78	-78	b/g/n	none	5
<input type="checkbox"/>	MBR1400-858	00:30:44:0f:e8:58	-80	b/g/n	wpa1wpa2psk/aes	2
<input type="checkbox"/>	MBR1400-79c	00:30:44:0d:97:9c	-80	b/g/n	wpa1wpa2psk/aes	3
<input type="checkbox"/>	MBR1400-748	00:30:44:0d:97:48	-84	b/g/n	wpa1wpa2psk/aes	6
<input type="checkbox"/>	MBR1200-4ac	00:30:44:09:14:ac	-86	b/g/n	wpa2psk/aes	2
<input type="checkbox"/>	MBR1400-42f	00:30:44:10:24:2f	-86	b/g/n	wpa1wpa2psk/aes	3

7.5.4 Wireless Scan Settings



The image shows a configuration panel titled "Wireless Scan Settings". It contains two main settings: "Scan Interval" and "Scan While Connected". The "Scan Interval" is set to 60 seconds, indicated by a slider and a text input field. The "Scan While Connected" option is a checkbox that is currently unchecked. At the bottom of the panel are two buttons: "Apply" and "Undo".

Scan Interval: How often WiFi as WAN scans the environment for updates. (Default: 60 seconds. Range: 5-3600 seconds.)

Scan While Connected: Continue to scan for WiFi as WAN profile updates when connected. Each time a scan occurs the wireless communication of the router will be temporarily interrupted. Normally this should be disabled.

7.6 WAN Affinity

WAN Affinity rules allow you to manage traffic in your network so that particular bandwidth uses are associated with particular WAN sources. This allows you to prioritize bandwidth.

EXAMPLE: You could specify that your guest LAN is only associated with your Ethernet connection with no failover. Then if your Ethernet connection goes down and the embedded modem connects for failover for your primary LAN, your guest LAN will not take bandwidth from your primary LAN, saving you money.

Click “Add” to open the WAN Affinity Policy Editor and create a new WAN Affinity rule.

Name: Give a name for your rule that is meaningful to you.

Protocol: Select from the dropdown list to specify the protocol for a particular data use. Otherwise, leave “Any” selected.

- Any
- ICMP
- TCP
- UDP
- GRE
- ESP
- SCTP

Source IP Address, Source Netmask, Destination IP Address, and Destination Netmask: Specify an IP address or range of IP addresses by combining an IP address with a netmask for either “source” or “destination” (or both). Source vs.

WAN Affinity Policy Editor ✕

NOTE: WAN affinity policies only apply to network traffic that is routed through the router. Any network services that terminate on the router itself or are initiated from the router are not controlled with affinity policies. Some services such as VPN and GRE tunnels have their own mechanism for dictating the WAN device they use, but this will be controlled from their respective config pages.

Also note that FTP and PPTP have limited interaction with affinity policies due to the application-level-gateway routines used to route them properly.

Name:

Protocol: ▾

Source IP Address: . . .

Source Netmask: . . . ▾

Destination IP Address: . . .

Destination Netmask: . . . ▾

Destination Port(s): :

Failover:

WAN Binding Type: When **Unique ID is (empty)**

destination is defined by traffic flow. Leave these blank to include all IP addresses (such as if your rule is defined by a particular port instead).

EXAMPLE: If you want to associate this rule with your guest LAN, you could input the IP address and netmask for the guest LAN here (leaving the last slot "0" to allow for any user attached to the guest network):

- **Source IP Address:** 192.168.10.0
- **Source Netmask:** 255.255.255.0

Destination Port(s): Enter a port number between 1 and 65535. To enter a single port number, input the number into the left box. To enter a range of ports, fill in both boxes separated by the colon. For example "80:90" would represent all ports between 80 and 90 including 80 and 90 themselves.

Failover: (Default: Selected.) When this is selected and traffic from the chosen WAN device for this rule is interrupted, the router will fail over to another available WAN device. Deselect this option to restrict this traffic to only the selected WAN interface.

WAN Binding Type: You have several options for specifying the type of WAN interface(s) you want associated with your rule. Designate the interface(s) by **Port**, **Manufacturer**, **Model**, **Type**, **Serial Number**, **MAC Address**, or **Unique ID**. This selection will create a dropdown list of options to complete a sentence with the following form: "When ____ is _____," such as, "When Type is LTE." You also have the option to replace "is" with "isn't," "starts with," "ends with," or "contains."


- **Port:** Select from the dropdown list of possible WAN ports on the router.
 - WAN Ethernet
 - LAN Ethernet
 - Undefined
- **Manufacturer:** Select from a dropdown list of attached devices.
- **Model:** Select from a dropdown list of attached devices.
- **Type:** Select from the dropdown list of possible WAN types.
 - WiMAX
 - Modem
 - LTE
 - Ethernet
 - Wireless As WAN
- **Serial Number:** Select from a dropdown list of attached devices.

- **MAC Address:** Select from a dropdown list of attached devices.
- **Unique ID:** Select from a dropdown list of attached devices.

8 SYSTEM SETTINGS

The System Settings tab has 8 submenu options that provide access to tools for broad administrative control of the IBR600:

- Administration
- Device Alerts
- GPIO Connector
- Hotspot Services
- Managed Services
- Serial Redirector
- System Control
- System Software

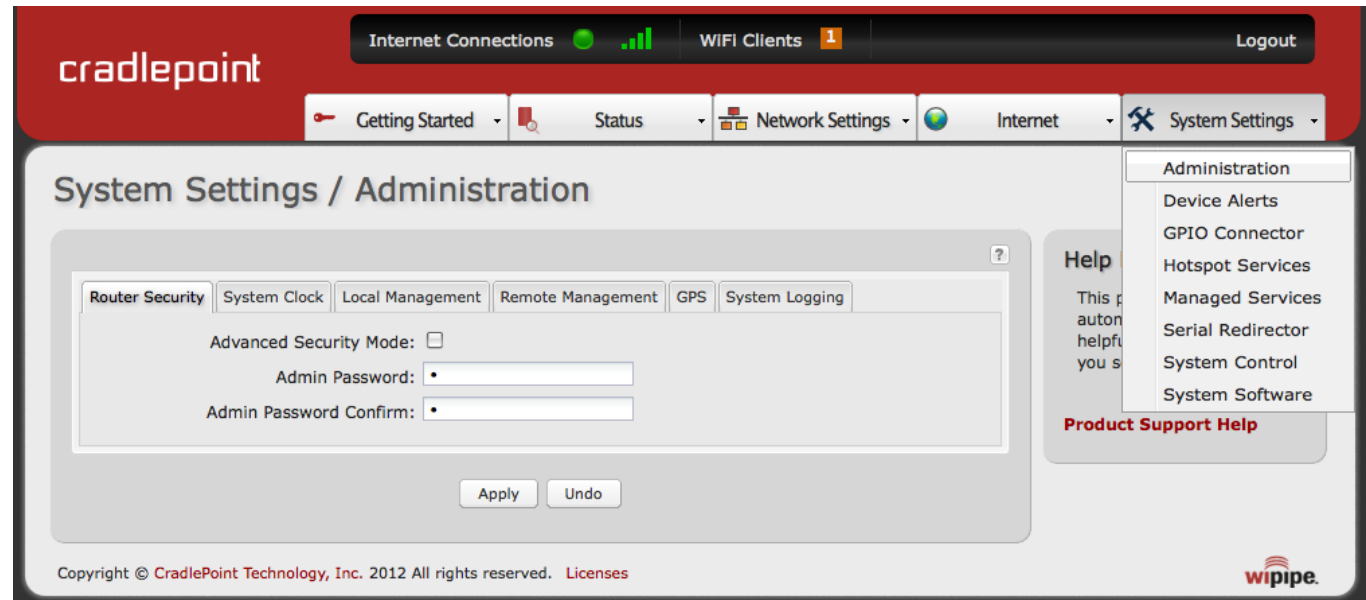


The screenshot displays the web management interface for the Cradlepoint IBR600. At the top, there is a red header with the 'cradlepoint' logo on the left and status indicators for 'Internet Connections' (green dot and signal strength), 'WIFI Clients' (orange box with '1'), and a 'Logout' button on the right. Below the header is a navigation bar with tabs: 'Getting Started', 'Status', 'Network Settings', 'Internet', and 'System Settings' (which is active and highlighted). The main content area is titled 'System Settings / Administration' and contains several sub-tabs: 'Router Security', 'System Clock', 'Local Management', 'Remote Management', 'GPS', and 'System Logging'. The 'Router Security' sub-tab is selected, showing an 'Advanced Security Mode' checkbox (unchecked), an 'Admin Password' field, and an 'Admin Password Confirm' field. Below these fields are 'Apply' and 'Undo' buttons. On the right side, there is a 'Help' section with a dropdown menu listing the 8 submenu options: Administration, Device Alerts, GPIO Connector, Hotspot Services, Managed Services, Serial Redirector, System Control, and System Software. Below the dropdown is a 'Product Support Help' button. At the bottom of the interface, there is a copyright notice: 'Copyright © CradlePoint Technology, Inc. 2012 All rights reserved. Licenses' and the 'wipipe' logo.

8.1 Administration

Select the Administration submenu item in order to control any of the following functions:

- Router Security
- System Clock
- Local Management
- Remote Management
- GPS
- System Logging

8.1.1 Router Security

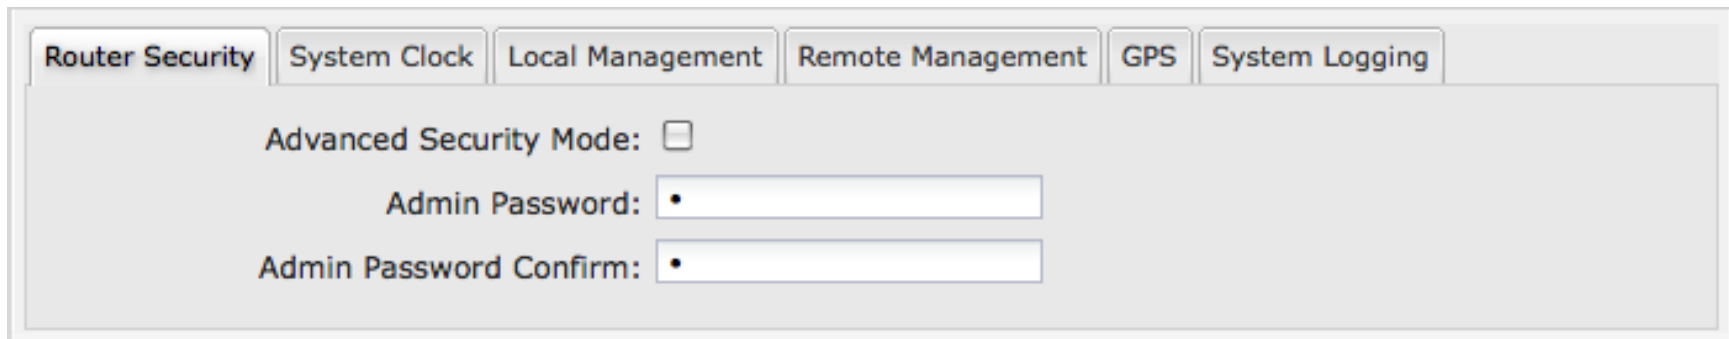


The screenshot shows a configuration page for Router Security. At the top, there is a navigation bar with tabs for Router Security, System Clock, Local Management, Remote Management, GPS, and System Logging. The Router Security tab is selected. Below the tabs, there is a section for Advanced Security Mode, which is currently unchecked. Below this, there are two password fields: Admin Password and Admin Password Confirm, both of which are currently empty and have a small red dot indicating a required field.

Advanced Security Mode: When the router is configured to use the advanced security mode, several aspects of the router's configuration and networking functionality will be extended to support high security environments. This includes support for multiple user accounts, increased password security, and additional network spoofing filters. If you plan to use your router in a PCI DSS compliant environment this option is mandatory.

Admin Password: Enter a password for the administrator who will have full access to the router's management interface. You can use the default password on the back of your product, or you can create a custom Administrator Password.

8.1.2 System Clock

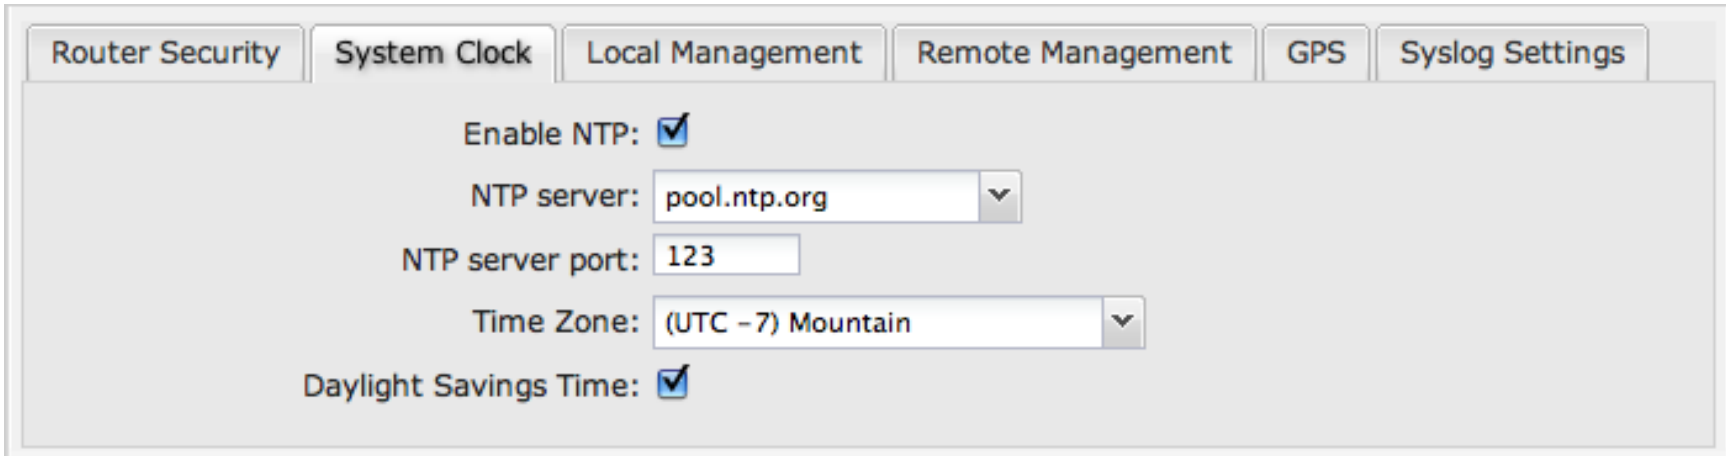

Router Security System Clock Local Management Remote Management GPS Syslog Settings

Enable NTP:

NTP server:

NTP server port:

Time Zone:

Daylight Savings Time:


Enabling NTP will tell the router to get its system time from a remote server on the Internet. If you do not enable NTP then the router time will be based on when the router firmware was built, which is guaranteed to be wrong. Whenever the Internet connection is re-established and once a week thereafter the router will ask the server for the current time so it can correct itself.

You then have the option of selecting an NTP server and adjusting the NTP server port. Select the NTP server from the dropdown list. Any of the given NTP servers will be sufficient unless, for example, you need to synchronize your router's time with other devices in a network.

Time Zone: Select from a dropdown list. Setting your Time Zone is required to properly show time in your router log.

Daylight Savings Time: Select this checkbox if your location observes daylight savings time.

8.1.3 Local Management

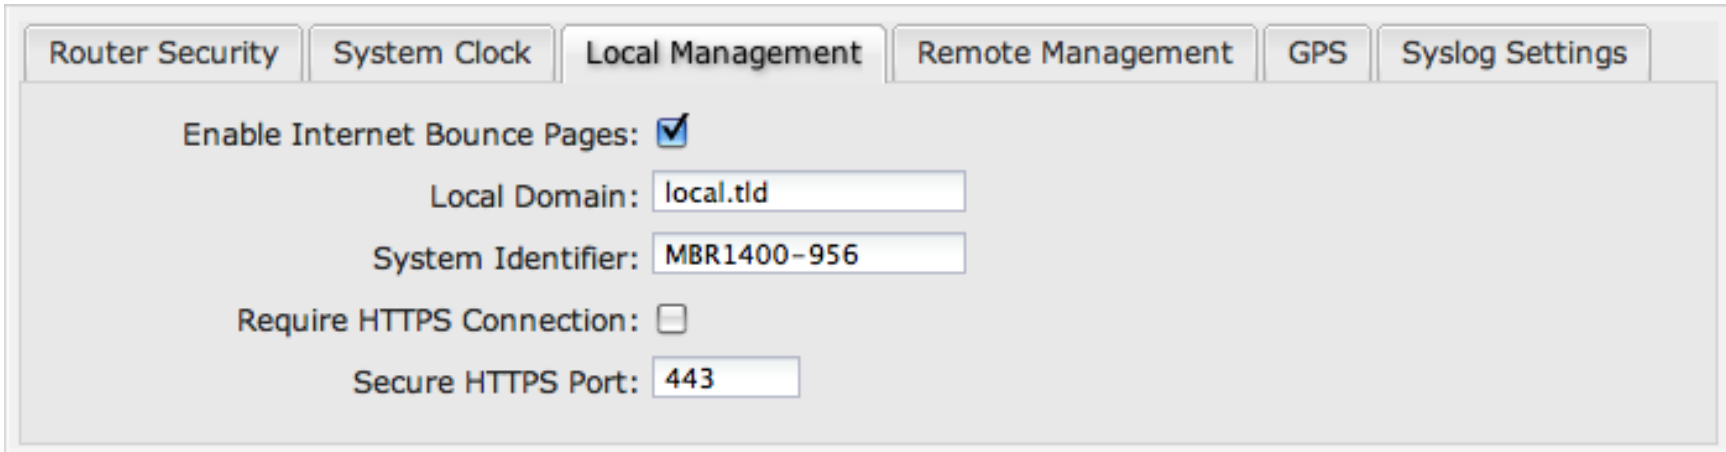

Router Security	System Clock	Local Management	Remote Management	GPS	Syslog Settings
-----------------	--------------	-------------------------	-------------------	-----	-----------------

Enable Internet Bounce Pages:

Local Domain:

System Identifier:

Require HTTPS Connection:

Secure HTTPS Port:

Enable Internet Bounce Pages: Bounce pages show up in your web browser when the router is not connected to the Internet. They inform you that you are not connected and try to explain why. If you disable bounce pages then you will just get the usual browser timeout. In the normal case when the router is connected to the Internet you don't see them at all.


Local Domain: The local domain is used as the suffix for DNS entries of local hosts. This is tied to the hostnames of DHCP clients as DHCP_HOSTNAME.LOCAL_DOMAIN.

System Identifier: This is a customizable identity that will be used in router reporting and alerting. The default value is the MAC address of the router.

Require HTTPS Connection: Check this box if you want to encrypt all router administration communication.

Secure HTTPS Port: Enter the port number you want to use. The default is 443.

8.1.4 Remote Management

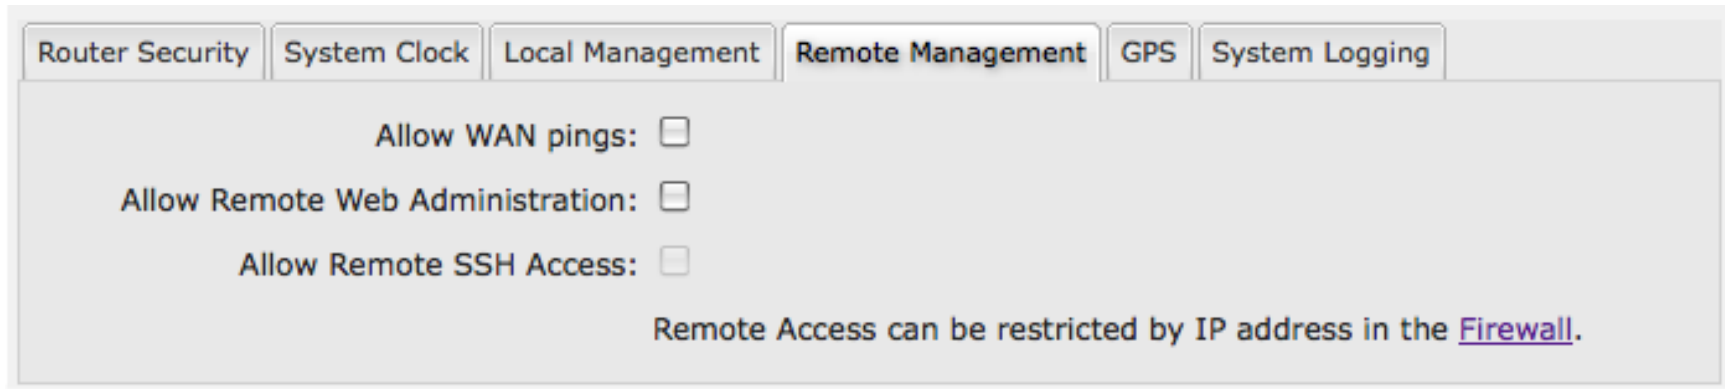

Router Security System Clock Local Management **Remote Management** GPS System Logging

Allow WAN pings:

Allow Remote Web Administration:

Allow Remote SSH Access:

Remote Access can be restricted by IP address in the [Firewall](#).

Allows a user to enable incoming WAN pings or to change settings for the router from the Internet using the router's Internet address.

Allow WAN pings: When enabled the functionality allows an external WAN client to ping the router.

Allow Remote Web Administration: When remote administration is enabled it allows access to these administration web pages from the Internet. With it disabled, you must be a client on the local network to access the administration website. For security, remote access is usually done via a non-standard http port. Additionally, encrypted connections can be required for an added level of security.


- **Require HTTPS Connection:** Requiring a secure (**https**) connection is recommended.
- **HTTP Port:** Default: 8080. This option is disabled if you select "Require Secure Connection".
- **Secure HTTPS Port:** Default: 8443.

Enable SSH Server: When the router's SSH server is enabled you may access the router's command line interface (CLI) using the standards based SSH protocol. Use the username "admin" and the standard system password to login.

- **SSH Server Port:** Default: 22.
- **Allow Remote SSH Access:** Only enable this option if instructed by a CradlePoint support agent.

NOTE: You can restrict remote access to only specified IP addresses in [Network Settings](#) → [Firewall](#) under Remote Administration Access Control.

8.1.5 GPS

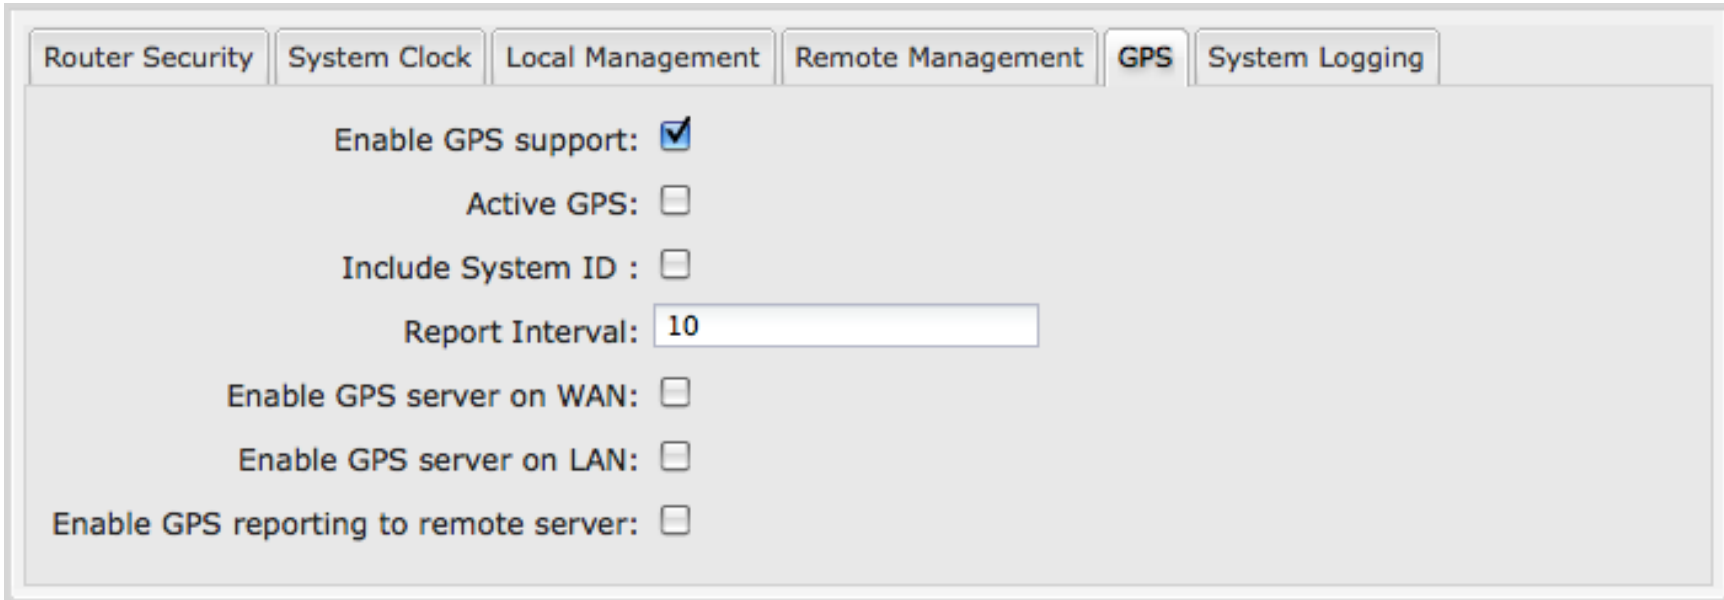

Router Security System Clock Local Management Remote Management **GPS** System Logging

Enable GPS support:

Active GPS:

Include System ID :

Report Interval:

Enable GPS server on WAN:

Enable GPS server on LAN:

Enable GPS reporting to remote server:

If you have an attached device with GPS support, you can enable a graphical view of your router's location which will appear in **Status → GPS**.

Users can configure GPS NMEA GGA format sentence reporting, available through a router-based server and/or a remote server.

NOTE: Some carriers disable GPS support in otherwise supported modems. If you encounter issues with obtaining a fix, contact your carrier and ensure that GPS is supported.

- **Enable GPS support:** Enables support for querying GPS information from supported modems.
- **Active GPS:** Keep the GPS receiver active at all times, even if no destination exists for position messages. This will place additional load on the router similar to sending reports to a remote server, but without consuming the network bandwidth.

- **Include System ID:** Include the routers "System ID" sentence with every NMEA message. This can be useful when a single remote client or server is handling NMEA position reports from multiple routers.
- **Report Interval:** Set the interval in seconds between periodic NMEA sentence reports. Use as long an interval as is practical for your application. The shorter the interval the more router resources and bandwidth will be used by the GPS subsystem. Too frequent reports may cause performance and/or availability issues.
- **Enable GPS server on WAN:** Enables a server on the WAN side of the firewall which will periodically send GPS NMEA sentences to TCP connected clients. It also responds to incoming UDP datagrams.
- **Enable GPS server on LAN:** Enables a server on the LAN side of the firewall which will periodically send GPS NMEA sentences to TCP connected clients. It also responds to incoming UDP datagrams.
 - **GPS server port number**
- **Enable GPS reporting to remote server:** Enables periodic reporting of GPS NMEA sentences to a remote server. The router will buffer NMEA data if errors are encountered or if the Internet connection goes down and send the buffered sentences when the connection is restored.
 - **Remote server hostname or IP**
 - **Remote server port**
 - **UDP remote server:** Using UDP instead of TCP reduces the load on the router and may save bandwidth. However UDP does not provide any guarantee for delivery. The router will typically assume sentences have been received by the remote UDP server and will not buffer those sentences.
 - **Report only over specific time interval:** Restricts the NMEA sentence reporting to a remote server to a specific time interval.

The following GPS spec is copied from <http://aprs.gids.nl/nmea/>

8.1.6 \$GPGGA – Global Positioning System Fix Data

Name	Example Data	Description
Sentence Identifier	\$GPGGA	Global Positioning System Fix Data
Time	170834	17:08:34 Z

Latitude	4124.8963, N	41d 24.8963' N or 41d 24' 54" N
Longitude	08151.6838, W	81d 51.6838' W or 81d 51' 41" W
Fix Quality: - 0 = Invalid - 1 = GPS fix - 2 = DGPS fix	1	Data is from a GPS fix
Number of Satellites	05	5 Satellites are in view
Horizontal Dilution of Precision (HDOP)	1.5	Relative accuracy of horizontal position
Altitude	280.2, M	280.2 meters above mean sea level
Height of geoid above WGS84 ellipsoid	-34.0, M	-34.0 meters
Time since last DGPS update	blank	No last update
DGPS reference station id	blank	No station id
Checksum	*75	Used by program to check for transmission errors

Courtesy of [Brian McClure](#), N8PQI.

Global Positioning System Fix Data. Time, position, and fix related data for a GPS receiver.

eg2. \$--GGA,hhmmss.ss,IIII.II,a,yyyyy.yy,a,x,xx,x.x,x.x,M,x.x,M,x.x,xxxx

hhmmss.ss = UTC of position

IIII.II = latitude of position

a = N or S


yyyyy.yy = Longitude of position

a = E or W
 x = GPS Quality indicator (0=no fix, 1=GPS fix, 2=Dif. GPS fix)
 xx = number of satellites in use
 x.x = horizontal dilution of precision
 x.x = Antenna altitude above mean-sea-level
 M = units of antenna altitude, meters
 x.x = Geoidal separation
 M = units of geoidal separation, meters
 x.x = Age of Differential GPS data (seconds)
 xxxx = Differential reference station ID

eg3. \$GPGGA,hhmmss.ss,llll.ll,a,yyyy.yy,a,x,xx,x.x,x.x,M,x.x,M,x.x,xxxx*hh

- 1 = UTC of Position
- 2 = Latitude
- 3 = N or S
- 4 = Longitude
- 5 = E or W
- 6 = GPS quality indicator (0=invalid; 1=GPS fix; 2=Diff. GPS fix)
- 7 = Number of satellites in use [not those in view]
- 8 = Horizontal dilution of position
- 9 = Antenna altitude above/below mean sea level (geoid)
- 10 = Meters (Antenna height unit)
- 11 = Geoidal separation (Diff. between WGS-84 earth ellipsoid and mean sea level. -=geoid is below WGS-84 ellipsoid)
- 12 = Meters (Units of geoidal separation)
- 13 = Age in seconds since last update from diff. reference station
- 14 = Diff. reference station ID#
- 15 = Checksum

8.1.7 System Logging

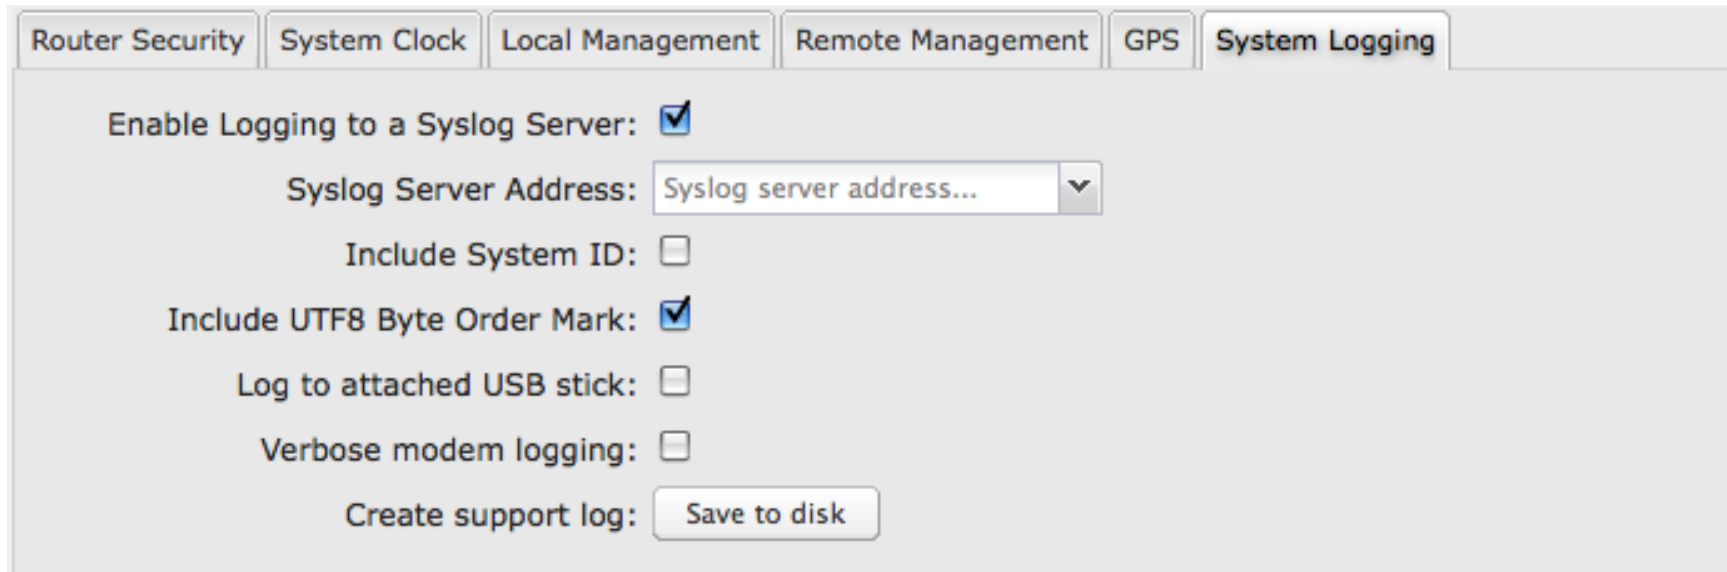

Router Security System Clock Local Management Remote Management GPS System Logging

Enable Logging to a Syslog Server:

Syslog Server Address: Syslog server address... ▼

Include System ID:

Include UTF8 Byte Order Mark:

Log to attached USB stick:

Verbose modem logging:

Create support log: Save to disk

Enable Logging to a Syslog Server: Enabling this option will send log messages to a specified Syslog server. After enabling, type the Hostname or IP address of the Syslog server (or select from the dropdown menu).

Syslog Server Address: Select the Hostname or IP address from the dropdown menu, or type this in manually.

Include System ID: This option will include the router's "System ID" at the beginning of every log message. This is often useful when a single remote Syslog server is handling logs for several routers.

Include UTF8 Byte Order Mark: The log message is sent using UTF-8 encoding. By default the router will attach the Unicode Byte Order Mark (BOM) to the Syslog message in compliance with the Syslog protocol, RFC5424. Some Syslog servers may not fully support RFC5424 and will treat the BOM as ASCII text, which will appear as garbled characters in the log. If this occurs, disable this option.

Log to attached USB stick: Only enable this option if instructed by a CradlePoint support agent. This will write a very verbose log file to the root level of an attached USB stick. Please disable the feature before removing the USB stick, or you may lose some logging data.




Verbose modem logging: Only enable this option if instructed by a CradlePoint support agent.

Create support log: This functionality allows for a quick collection of system logging. Create this log file when instructed by a CradlePoint support agent.

8.2 Device Alerts

The Device Alerts submenu choice allows you to receive email notifications of specific system events. **YOU MUST ENABLE AN SMTP EMAIL SERVER TO RECEIVE ALERTS.** Alerts can be included for the following:

- **Firmware Upgrade Available:** A firmware update is available for this device.
- **System Reboot Occurred:** This router has rebooted. This depends on NTP being enabled and available to report the correct time.
- **WAN Device Status Change:** An attached WAN device has changed status. The possible statuses are plugged, unplugged, connected, and disconnected.
- **Configuration Change:** A change to the router configuration.
- **Login Failure:** A failed login attempt has been detected.
- **Full System Log:** The system log has filled. This alert contains the contents of the system log.
- **Recurring System Log:** The system log is sent periodically. This alert contains all of the system events since the last recurring alert. It can be scheduled for daily, weekly and monthly reports. You also choose the time you want the Alert sent.

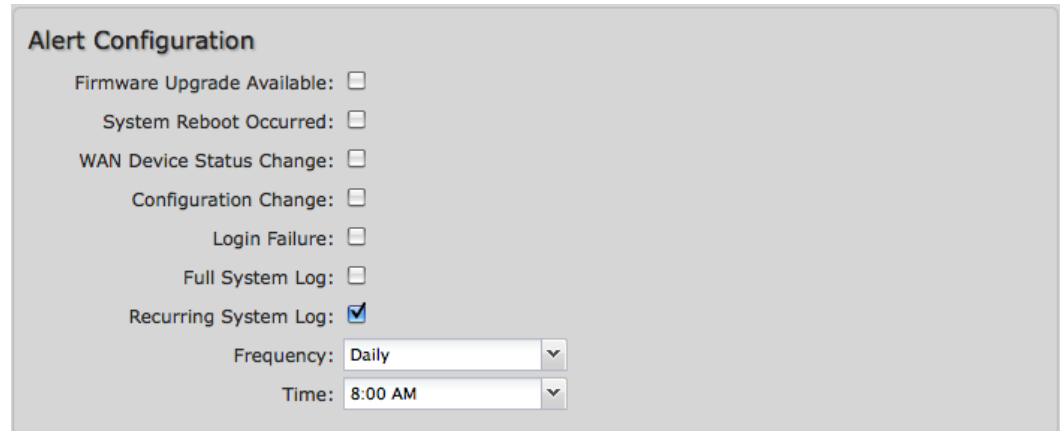

Alert Configuration

Firmware Upgrade Available:

System Reboot Occurred:

WAN Device Status Change:

Configuration Change:

Login Failure:

Full System Log:

Recurring System Log:

Frequency:


Time:

8.2.1 SMTP Mail Server

Since the IBR600 does not have its own email server, to receive alerts you must enable an SMTP server. This is possible through most email services (Gmail, Yahoo, etc.).

Each SMTP server will have different specifications for setup, so you have to look those up separately. The following is an example using Gmail:

- **Server Address:** smtp.gmail.com
- **Server Port:** 587 (for TLS, or Transport Layer Security port; the IBR600 does not support SSL).
- **Authentication Required:** For Gmail, mark this checkbox.
- **User Name:** Your full email address
- **Password:** Your Gmail password
- **From Address:** Your email address
- **To Address:** Your email address

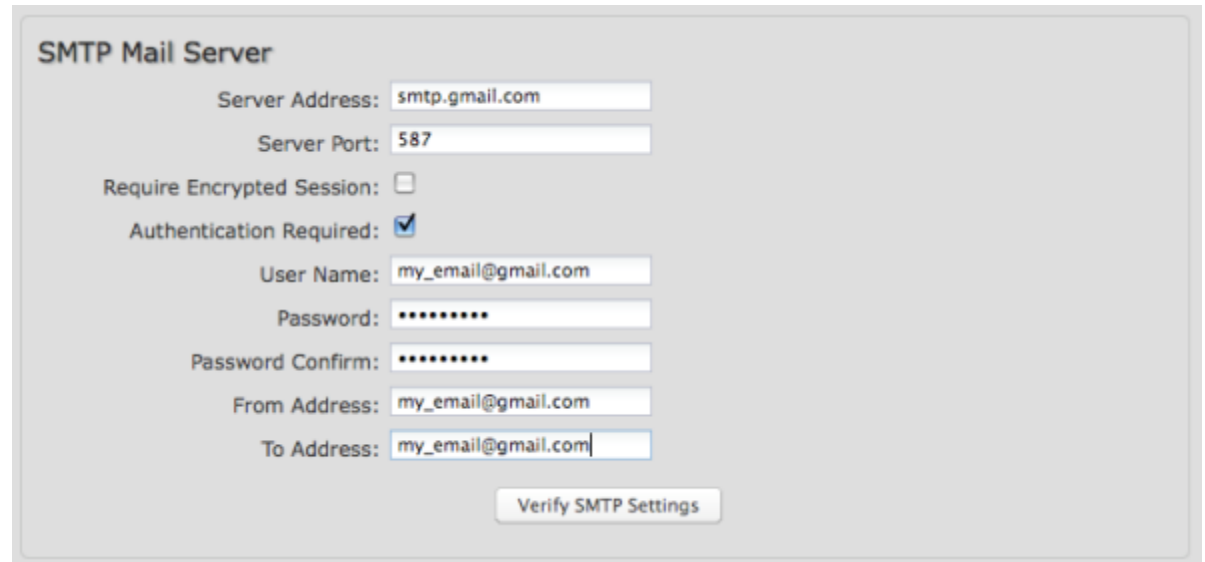


Once you have filled in the information for the SMTP server, click on the “Verify SMTP Settings” button. You should receive a test email at your account.

Advanced: **Delivery Options**

Email Subject Prefix: This optional string is prefixed to the alert subject. It can be customized to help you identify alerts from specific routers.

Retry Attempts: The number of attempts made to send an alert to the mail server. After the attempts are exhausted, the alert is discarded.

Retry Delay: The delay between retry attempts.

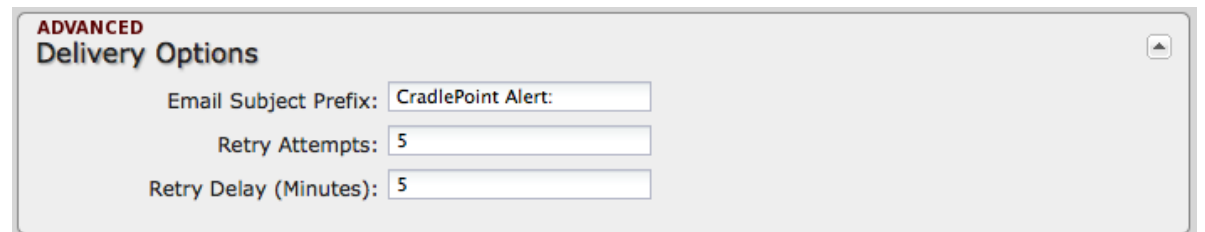


8.3 GPIO Connector

The power connector includes two pins defined for general purpose LVTTTL compatible input and output. These pins are ESD protected and the input is 5V tolerant.

NOTE: GPIO functionality requires a separate adapter to connect to the I/O pins.

Pin	Definition
1	Ground
2	12VDC Power
3	Input: LVTTTL Digital Input with 50K ohm pullup to 3.3VDC (5V tolerant)
4	Output: LVTTTL Digital Output (capable of source/sink of 50mA)

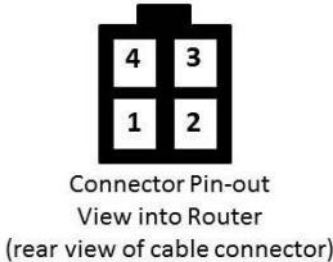

This section is used to configure these Input and Output General Purpose I/O pins.

Input Pin

Current Value: HIGH

Input Mode:

Output Pin

Current Value: LOW

Output Mode:


Current Value: Displays HIGH or LOW for both the Input Pin and Output Pin.

Input Pin – The Input Pin can be used to read a value—either high or low—from an external device and either display that value on this administration page (as the Current Value) or cause the router to reset. Select one of the following options from the dropdown menu:

- **Default/Ignored:** In this mode the input pin is not used.
- **Input Sensing:** In this mode the logic state (high or low) is automatically sensed by the router and is readable as the Current Value.
- **Router Reset:** In this mode an external device can reset the router by holding the input low for 10-seconds.

Output Pin – The Output Pin can be used to allow an external device to read either whether the router is running or whether the modem is connected. Select one of the following options from the dropdown menu:

- **Default/Low:** In this mode the output pin is not used and is at 0V (ground potential).
- **Set High/Router Running:** In these modes the output pin is logic low while the router is booting and transitions to logic high when the router is fully running. If the router is reset, the output returns to low until the router has fully rebooted.
- **Modem Connected:** In this mode the output pin is logic low until the modem has connected to a tower. If the connection drops, this output is set low until the connection is restored.

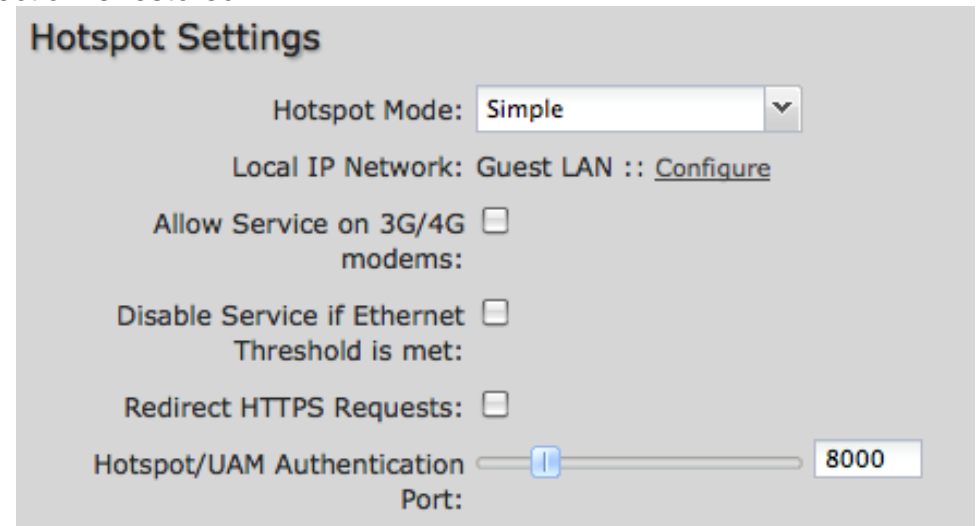

Hotspot Settings

Hotspot Mode: Simple

Local IP Network: Guest LAN :: [Configure](#)

Allow Service on 3G/4G modems:

Disable Service if Ethernet Threshold is met:

Redirect HTTPS Requests:

Hotspot/UAM Authentication Port: 8000

8.4 Hotspot Services

Any of your networks can be enabled as a hotspot. To enable a hotspot, you need to select a network and set it as a hotspot in **Network Settings** → **WiFi / Local Networks**.

NOTE: Although any network can be a hotspot, the IBR600 allows only one hotspot.

Hotspot Mode: Choose from the following dropdown options:

- **Simple:** Allows “Terms of Use” page and timeout settings controlled within the router.
- **RADIUS/UAM:** Allows you to set up external authentication servers.

Local IP Network: A single LAN Group—including both WiFi and Ethernet—can be configured as your hotspot. If you do not already have a LAN Group configured as a hotspot, go to the [WiFi / Local Networks](#) page (you can click **Configure** to link to this page) and set the **Routing Mode** to "Hotspot" for the LAN Group you want to use.

NOTE: Routing Mode is in the Local Network Editor under the IP Settings tab. Select a network in **Network Settings** → **WiFi / Local Networks** and click **Edit** to open the Local Network Editor. The IP Settings tab will already be open: the Routing Mode dropdown menu is at the bottom.

Allow Service on 3G/4G Modems: Allows you to enable or disable hotspot access to the Internet over a modem. This is often used if the router has a main wired link and a secondary modem for failover (typically with a more expensive/limited data plan). Select this option if you want the router to allow data traffic over the modem if the wired connection goes down.

Disable Service if Ethernet Threshold is met: This will block Hotspot use of the WAN when the threshold is met. This can be used if the router is being used as a backup failover connection to another router with a wired connection. If that other router’s wired connection goes down and it starts using this router for its primary connection, then disable Hotspot use of the WAN connection. Set the limiting **Rate** (KB/s) and **Time Period** (seconds).

Redirect HTTPS Requests: This allows initial requests to HTTPS websites to be redirected appropriately.

Hotspot/UAM Authentication Port: Default: 8000. Type in a different port number, or use the slider to change the port.

Simple Mode Settings

Display: ▼

Terms of Use Text:

Redirection On Successful Authentication: ▼

Redirect URL:

Session Timeout: 60 Mins (0 = Disabled)

Idle Timeout: 15 Mins (0 = Disabled)

Bandwidth (upload): Kbits/sec (0 = No Limit)

Bandwidth (download): Kbits/sec (0 = No Limit)

8.4.1 Simple Mode Settings

Display: This section allows you to choose if a "Terms of Use" page will be given to the user connecting to the hotspot.

- **Internal Terms of Use.** Fill in your own terms of use.
- **External Terms of Use.** Specify a URL that has the Terms of Use page. Users will automatically be directed to this page.
- **No Terms of Use. Redirect Only.**

Redirection on Successful Authentication: Depending on your choice for the "Terms of Use" page, you have further options for where the user will be directed. After the user accepts the terms, you can either let him/her continue to the URL they were trying to reach or you can force the user to go to a specified URL once before continuing on.

- **To the URL the user intended to visit.**
- **To an administrator-defined URL.**

Redirect URL: If you have chosen to send users to an administrator-defined URL, you will need to specify the address.

Session Timeout: (Default: 60 minutes.) The amount of time the user may use the router before being forced to authenticate again.

Idle Timeout: (Default: 15 minutes.) If the user is idle for this amount of time, make them re-authenticate.


Bandwidth (upload): (Default: 512 Kbits/sec.) The data rate limit for users uploading data through the hotspot.

Bandwidth (download): (Default: 1024 Kbits/sec.) The data rate limit for users downloading data through the hotspot.

8.4.2 RADIUS/UAM Settings

This section allows you to configure a RADIUS and Universal Access Method server. After the user accepts the terms, you can either let him/her continue to the URL they were trying to reach or you can force the user to go to a specified UAM Server or URL once before continuing on.

RADIUS settings:

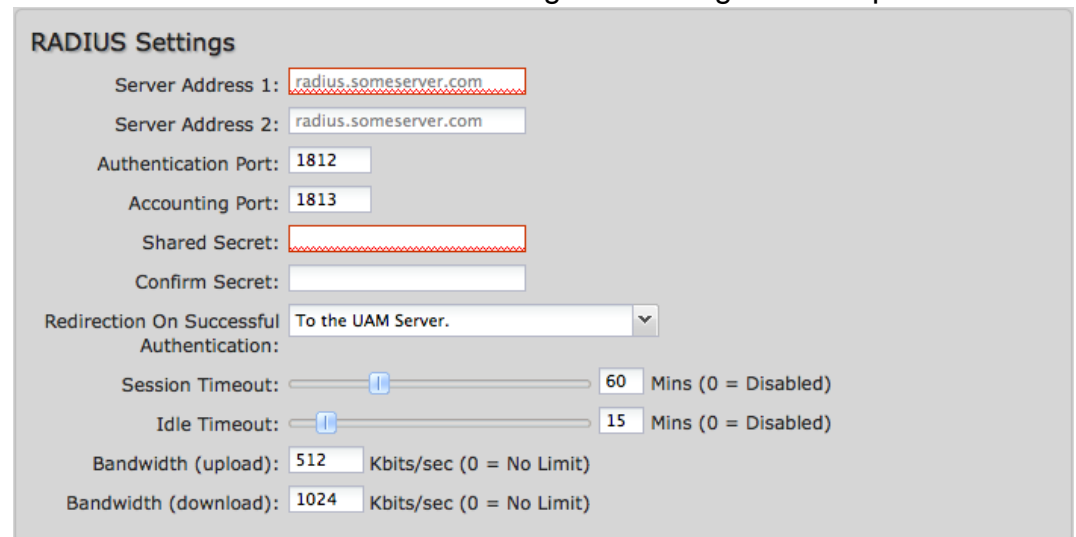

RADIUS Settings

Server Address 1:

Server Address 2:

Authentication Port:

Accounting Port:

Shared Secret:

Confirm Secret:

Redirection On Successful Authentication: ▾

Session Timeout: 60 Mins (0 = Disabled)

Idle Timeout: 15 Mins (0 = Disabled)

Bandwidth (upload): Kbits/sec (0 = No Limit)

Bandwidth (download): Kbits/sec (0 = No Limit)

- **Server Address 1:** Assigned by RADIUS service.
- **Server Address 2:** This is an optional backup server.
- **Authentication Port:** The standard port number, 1812, will usually be sufficient.
- **Accounting Port:** The standard port number, 1813, will usually be sufficient.
- **Shared Secret:** Assigned by RADIUS service.
- **Redirection On Successful Authentication:** Choose from the dropdown list of options for redirection:
 - Redirect to the UAM Server.
 - Redirect to the URL that the user intends to visit.
 - Redirect to the following URL (input the desired URL).
- **Session Timeout:** (Default: 60 minutes.) The amount of time the user may use the router before being forced to authenticate again. This value can be overwritten by the RADIUS server.
- **Idle Timeout:** (Default: 15 minutes.) If the user is idle for this amount of time, make them re-authenticate.
- **Bandwidth (upload):** (Default: 512 Kbits/sec.) The data rate limit for users uploading data through the hotspot.
- **Bandwidth (download):** (Default: 1024 Kbits/sec.) The data rate limit for users downloading data through the hotspot.

UAM Settings:

- **Login URL:** Assigned by UAM service.
- **Shared Secret:** Optional, depending on the UAM service.
- **NAS/Gateway ID:** Assigned by UAM service.


8.4.3 Allowed Hosts Prior to Authentication

Adding host names to this list will **allow** access from your network to any external domain or website prior to being authenticated. For example, a hotel might allow access to its own website prior to authentication.

Click **Add** to enter new hostnames you wish to allow.

Enter the Host or Domain Name of the website you wish to **allow**, i.e. **www.company.com** or **company.com**. To allow all domain and sub-domain options, use a wildcard, i.e. ***.company.com**.

Click **Submit** to save your additions.

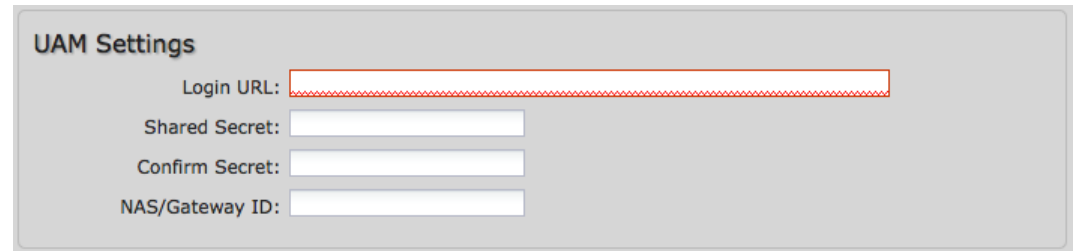

UAM Settings

Login URL:

Shared Secret:


Confirm Secret:

NAS/Gateway ID:



Allowed Hosts Prior to Authentication

<input type="checkbox"/>	Host Name
<input type="checkbox"/>	

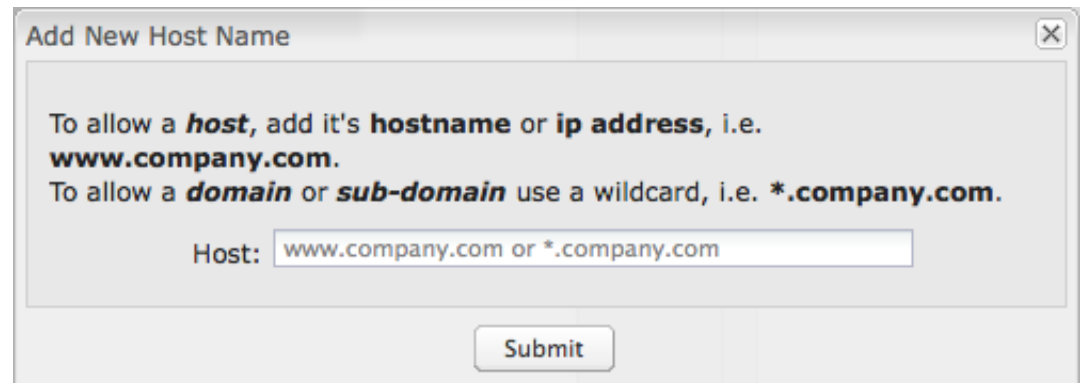

Add New Host Name

To allow a **host**, add its **hostname** or **ip address**, i.e. **www.company.com**.

To allow a **domain** or **sub-domain** use a wildcard, i.e. ***.company.com**.

Host:


8.5 Managed Services ASK YOUR CRADLEPOINT SALES REPRESENTATIVE FOR DETAILS

Managed Services allow you to centralize your router configuration using the WiPipe Central server. WiPipe Central services must be purchased separately.

Enable Services: Enables the WiPipe Central client to contact the server.

Ethernet Communication Only: Select this to ensure that the WiPipe Central client will not start unless the WAN is Ethernet.

Registration URL: Register your router using the code provided by CradlePoint when you purchase WiPipe Central.

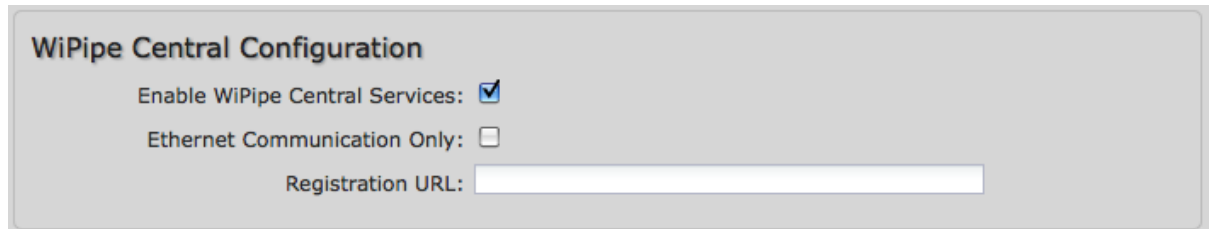

WiPipe Central Configuration

Enable WiPipe Central Services:

Ethernet Communication Only:


Registration URL:

8.5.1 SNMP Configuration

SNMP, or Simple Network Management Protocol, is an Internet standard protocol for remote management. You might use this instead of WiPipe Central if you want to remotely manage a set of routers that include both CradlePoint and non-CradlePoint products.

Enable SNMP: Selecting “Enable SNMP” will reveal the router’s SNMP configuration options.

Enable SNMP on LAN: Enabling SNMP on LAN will make SNMP services available on the LAN networks provided by this router. SNMP will not be available on guest or virtual networks that do not have administrative access.

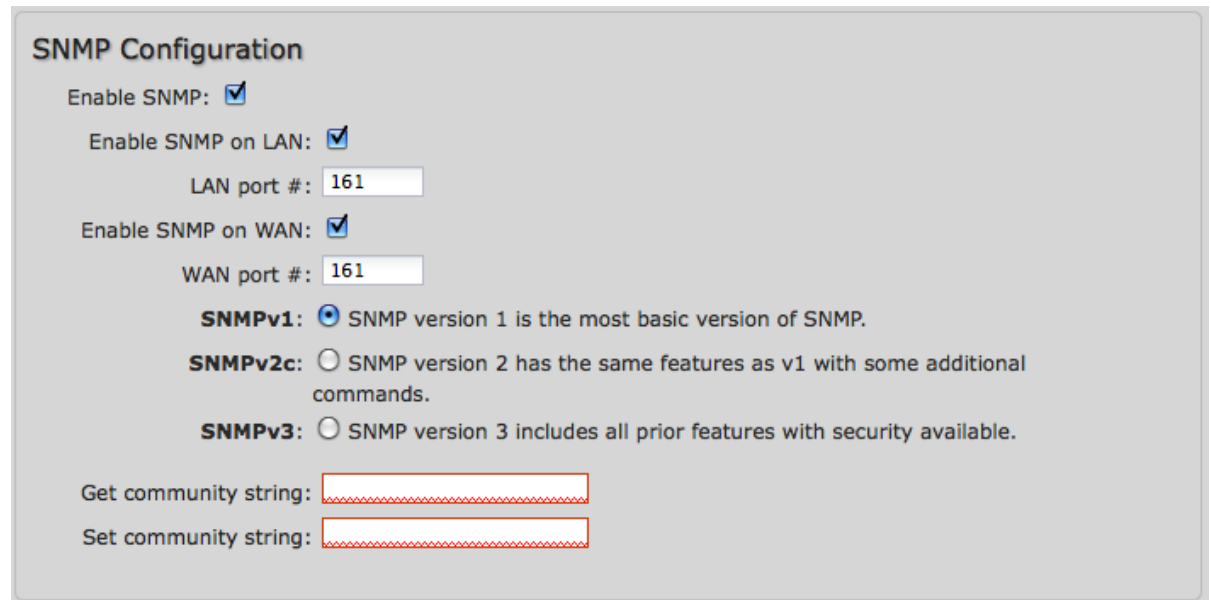

SNMP Configuration

Enable SNMP:

Enable SNMP on LAN:

LAN port #:

Enable SNMP on WAN:

WAN port #:

SNMPv1: SNMP version 1 is the most basic version of SNMP.

SNMPv2c: SNMP version 2 has the same features as v1 with some additional commands.

SNMPv3: SNMP version 3 includes all prior features with security available.

Get community string:

Set community string:

LAN port #: Use the LAN port # field to configure the LAN port number you wish to access SNMP services on. (Default: 161)

Enable SNMP on WAN: Enabling SNMP on WAN will make SNMP services available to the WAN interfaces of the router.

WAN port #: Use the WAN port # field to configure which publicly accessible port you wish to make SNMP services available on. (Default: 161)

SNMPv1: SNMP version 1 is the most basic version of SNMP. SNMPv1 will configure the router to transmit with settings compatible with SNMP version 1 protocols.

SNMPv2c: SNMP version 2c has the same features as v1 with some additional commands. SNMPv2c will configure the router to use settings and data formatting compatible with SNMP version 2c.

SNMPv3: SNMP version 3 includes all prior features with security available. SNMPv3 is the most secure setting for SNMP. If you wish to configure traps then you must use SNMP version 3.

Get community string: The “Get community string” is used to read SNMP information from the router. This string is like a password that is transmitted in regular text with no protection.

Set community string: The “Set community string” is used when writing SNMP settings to the router. This string is like a password. It is a good idea to make it different than the “Get community string.”

8.5.2 SNMPv3

If you select SNMPv3, you have several additional configuration options for added security.

Authentication type: Select the authentication and encryption type that will be used when connecting to the router from the following dropdown list. These settings must match the configuration used on any SNMP clients.

- MD5 with no encryption
- SHA with no encryption

SNMPv3: SNMP version 3 includes all prior features with security available.

Authentication type: ▼

Username:

Password:

Verify Password:

Enable SNMP traps:

Trap community string:

Address for trap server:

Trap server port #:

- MD5 with DES encryption
- SHA with DES encryption
- MD5 with AES encryption
- SHA with AES encryption

Username: Enter the Username configured on your SNMP host in the username field.

Password: Enter the Password for your SNMP host in the password and verify password fields. This password must be at least 8 characters long.

Enable SNMP traps: Enabling traps will allow you to configure a destination server, community, and port for trap notifications. Trap notifications are returned to the server with SNMPv1.

Trap community string: The trap notifications will be returned to the trap server using this SNMPv1 trap community name.

Address for trap server: Enter the address of the host system that you want trap alerts sent to.

Trap server port #: Enter the port number that the remote host will be listening for trap alerts on. (Default: 162)

8.6 Serial Redirector

Attach a USB serial device to establish a serial link to a host port on the router. The serial console support allows a USB-to-serial connection to another router or similar device. Through a telnet session over the RS232 interface, you can monitor health, pass data, or configure the attached device.

Enabled: Select to reveal serial configuration options.

LAN: Enable serial redirector for LAN connections.


Authenticated LAN: Enable serial redirector for Authenticated LAN connections, you must be logged into the router to use the redirector.

WAN: Enable serial redirector for WAN connections.

Server Port: Enter a port number for the redirector to use. (Default: 7218)

Baud Rate: Select from the dropdown list.

- 50
- 75
- 110
- 134
- 150
- 200
- 300

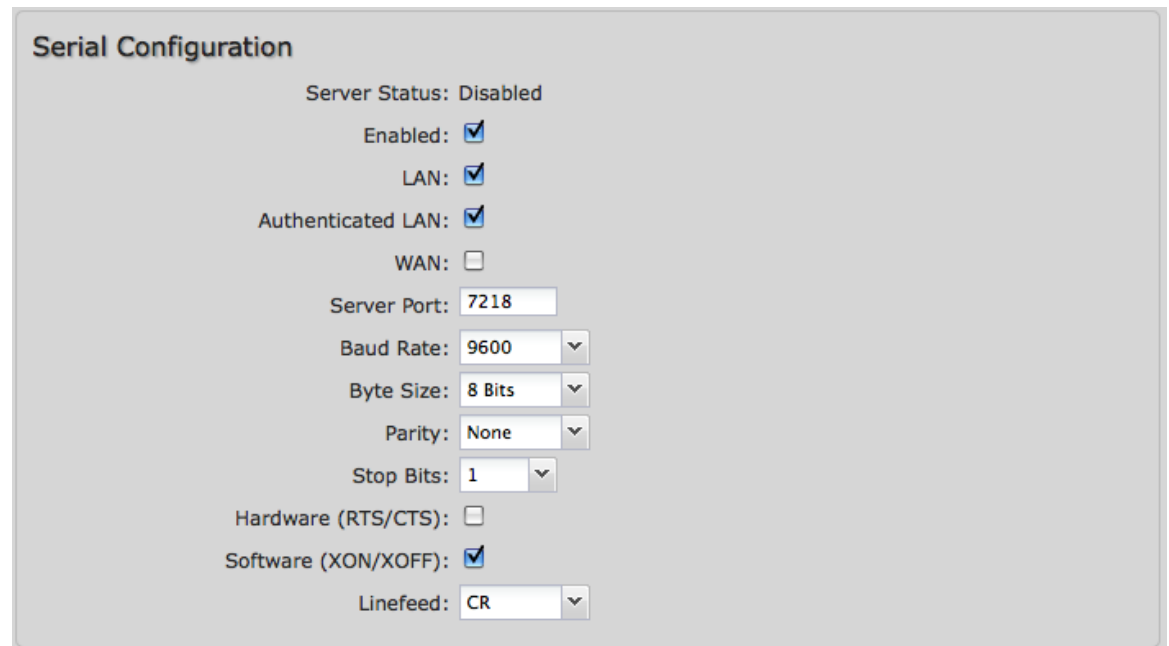

The screenshot shows the 'Serial Configuration' interface with the following settings:

- Server Status: Disabled
- Enabled:
- LAN:
- Authenticated LAN:
- WAN:
- Server Port: 7218
- Baud Rate: 9600
- Byte Size: 8 Bits
- Parity: None
- Stop Bits: 1
- Hardware (RTS/CTS):
- Software (XON/XOFF):
- Linefeed: CR

- 600
- 1200
- 1800
- 2400
- 4800
- 9600
- 19200

Byte Size: The number of bits in a byte. Select from: 5, 6, 7, and 8.

Parity: Change this value to enable parity bit checking. Select from the following dropdown options:

- None: No parity checking. (Default)
- Even: parity bit will always be even.
- Odd: parity bit will always be odd.
- Mark: parity bit will always be odd and always 1.
- Space: parity bit will always be even and always 0.

Stop Bits: Number of bits to initiate the stop period. Select from these dropdown values: 1, 1.5, and 2.

Hardware (RTS/CTS): Use RTS (Request To Send)/CTS (Clear To Send) to enable flow control.

Software (XON/XOFF): Use XON/XOFF to enable flow control.

Linefeeds: Select how you want linefeeds translated (CR = carriage return and LF = line feed).

- Ignore
- CR/LF
- CR
- LF

8.7 System Control

Restore to Factory Defaults: This changes all settings back to their default values.


Reboot The Device: This causes the router to restart.

Advanced: System Automatic Reboot and Ping Test

Scheduled Reboot: This causes the router to restart at a user-determined time.

Watchdog Reboot: This causes the router to automatically restart when it determines an unrecoverable error condition has occurred.

Ping Test: A simple test to check Internet connectivity. Type the Hostname or IP address of the computer you want to ping and press 'Enter' or click the 'Ping' button.

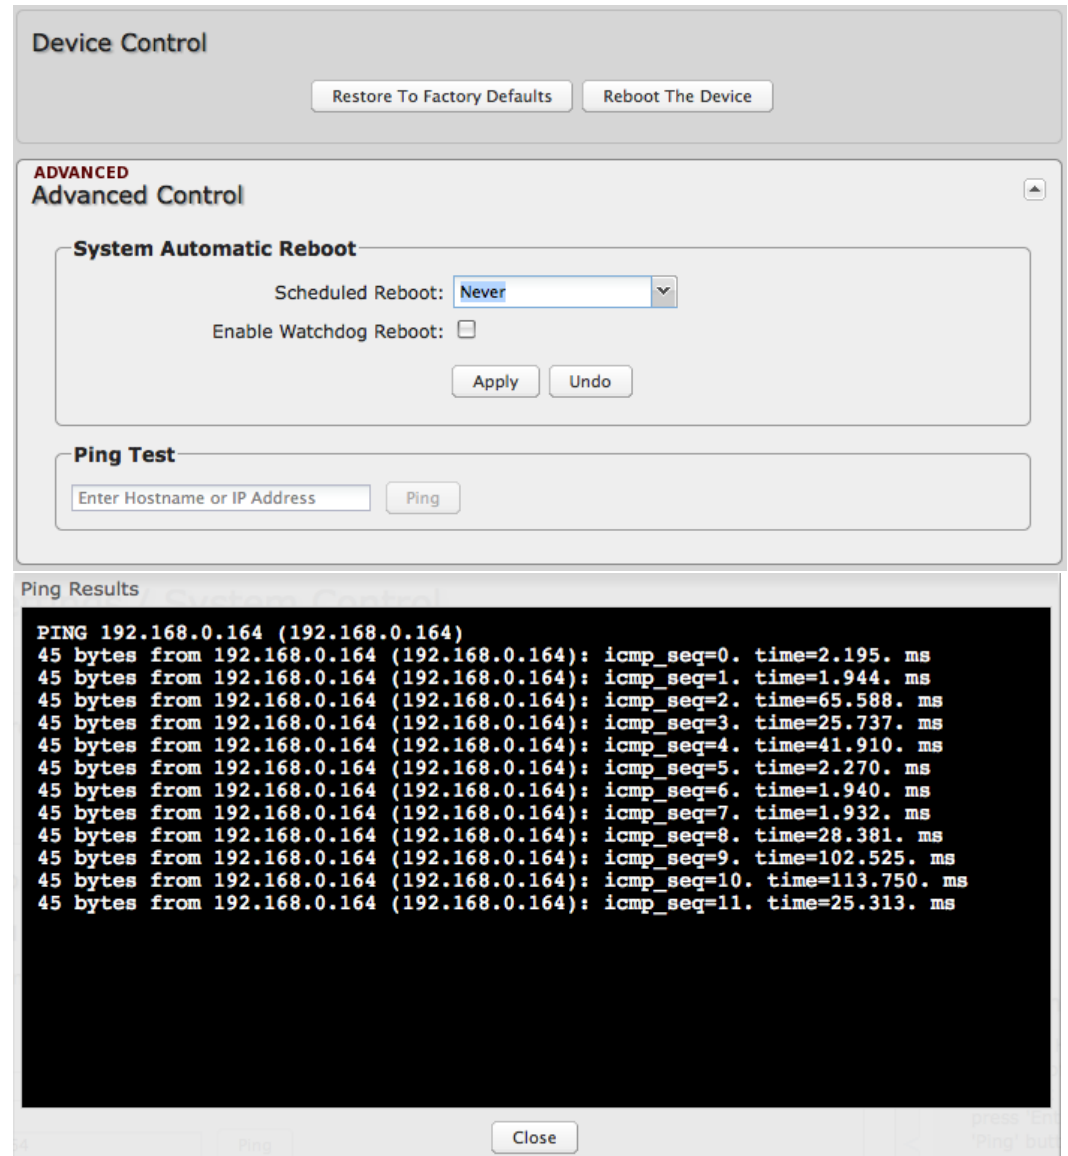

The screenshot displays the 'Device Control' interface. At the top, there are two buttons: 'Restore To Factory Defaults' and 'Reboot The Device'. Below this is the 'ADVANCED' section, titled 'Advanced Control'. Under 'System Automatic Reboot', there is a 'Scheduled Reboot' dropdown menu set to 'Never' and an 'Enable Watchdog Reboot' checkbox which is unchecked. 'Apply' and 'Undo' buttons are located below these settings. The 'Ping Test' section features an input field for 'Enter Hostname or IP Address' and a 'Ping' button. At the bottom, a 'Ping Results' window is open, showing a terminal-style output of ping commands to 192.168.0.164. The results show 11 successful pings with varying response times. A 'Close' button is visible at the bottom right of the results window.

```

PING 192.168.0.164 (192.168.0.164)
45 bytes from 192.168.0.164 (192.168.0.164): icmp_seq=0. time=2.195. ms
45 bytes from 192.168.0.164 (192.168.0.164): icmp_seq=1. time=1.944. ms
45 bytes from 192.168.0.164 (192.168.0.164): icmp_seq=2. time=65.588. ms
45 bytes from 192.168.0.164 (192.168.0.164): icmp_seq=3. time=25.737. ms
45 bytes from 192.168.0.164 (192.168.0.164): icmp_seq=4. time=41.910. ms
45 bytes from 192.168.0.164 (192.168.0.164): icmp_seq=5. time=2.270. ms
45 bytes from 192.168.0.164 (192.168.0.164): icmp_seq=6. time=1.940. ms
45 bytes from 192.168.0.164 (192.168.0.164): icmp_seq=7. time=1.932. ms
45 bytes from 192.168.0.164 (192.168.0.164): icmp_seq=8. time=28.381. ms
45 bytes from 192.168.0.164 (192.168.0.164): icmp_seq=9. time=102.525. ms
45 bytes from 192.168.0.164 (192.168.0.164): icmp_seq=10. time=113.750. ms
45 bytes from 192.168.0.164 (192.168.0.164): icmp_seq=11. time=25.313. ms
  
```

8.8 System Software

Firmware Upgrade allows the administrator to load new firmware onto the router to add new features or fix defects. If you are happy with the operation of the router, you may not want to upgrade just because a new version is available. Check the firmware release notes for information to decide if you should upgrade or not.

Current Firmware Version: Shows the number of the current firmware and the date it was updated.

Available Firmware Version: If there is a new firmware version available, this will list the version number. Click “Check Again” to have the router check the newest firmware.

Factory Reset: Set default settings to match the new firmware. This is safest, as settings may have changed. You should back up your current settings and restore them after the new firmware is loaded.

Automatically check for new firmware: Check for an available firmware update once a day.

Automatic (Internet): Have the router download the file and perform the upgrade with no user interaction.

Manual Firmware Upload: Upload the router firmware from an attached computer.

8.8.1 System Config Save/Restore

Backup Current Settings: Click on “Save to disk” to save your current settings to a file on a computer.

Restore Settings: Click on “Upload from file” to restore your previous settings from a file on a computer.



The screenshot shows a web interface with two main sections. The top section is titled "Firmware Upgrade" and contains the following elements:

- Current Firmware Version: v3.4.1 (Fri Dec 09 2011)
- Available Firmware Version: Check
- Factory Reset:
- Automatically check for new firmware:
- Two buttons at the bottom: "Automatic (Internet)" and "Manual Firmware Upload".

 The bottom section is titled "System Config Save/Restore" and contains:

- Backup Current Settings:
- Restore Settings:

9 GLOSSARY

802.11

A family of specifications for wireless local area networks (WLANs) developed by a working group of the Institute of Electrical and Electronics Engineers (IEEE).

Access Control List

ACL. This is a database of network devices that are allowed to access resources on the network.

Access Point

AP. Device that allows wireless clients to connect to it and access the network.

ActiveX

A Microsoft specification for the interaction of software components.

Ad-hoc network

Peer-to-Peer network between wireless clients.

Address Resolution Protocol

ARP. Used to map MAC addresses to IP addresses so that conversions can be made in both directions.

ADSL

Asymmetric Digital Subscriber Line.

Advanced Encryption Standard

AES. Government encryption standard.

Alphanumeric

Characters A-Z and 0-9.

Antenna

Used to transmit and receive RF signals.

AppleTalk

A set of Local Area Network protocols developed by Apple for their computer systems.

AppleTalk Address Resolution Protocol

AARP. Used to map the MAC addresses of Apple computers to their AppleTalk network addresses, so that conversions can be made in both directions.

Application layer

7th Layer of the OSI model. Provides services to applications to ensure that they can communicate properly with other applications on a network.

ASCII

American Standard Code for Information Interchange. This system of characters is most commonly used for text files.

Attenuation

The loss in strength of digital and analog signals. The loss is greater when the signal is being transmitted over long distances.

Authentication

To provide credentials, like a Password, in order to verify that the person or device is really who they are claiming to be.

Automatic Private IP Addressing

APIPA. An IP address that a Windows computer will assign itself when it is configured to obtain an IP address automatically but no DHCP server is available on the network.

Backward Compatible

The ability for new devices to communicate and interact with older legacy devices to guarantee interoperability.

Bandwidth

The maximum amount of bytes or bits per second that can be transmitted to and from a network device.

Basic Input/Output System

BIOS. A program that the processor of a computer uses to startup the system once it is turned on.

Baud

Data transmission speed.

Beacon

A data frame by which one of the stations in a WiFi network periodically broadcasts network control data to other wireless stations.

Bit rate

The amount of bits that pass in given amount of time.

Bit/sec

Bits per second.

BOOTP

Bootstrap Protocol. Allows for computers to be booted up and given an IP address with no user intervention.

Bottleneck

A time during processes when something causes the process to slowdown or stop all together.

Broadband

A wide band of frequencies available for transmitting data.

Broadcast

Transmitting data in all directions at once.

Browser

A program that allows you to access resources on the web and provides them to you graphically.

Cable modem

A device that allows you to connect a computer up to a coaxial cable and receive Internet access from your Cable provider.

CardBus

A newer version of the PC Card or PCMCIA interface. It supports a 32-bit data path, DMA, and consumes less voltage.

CAT 5

Category 5. Used for 10/100 Mbps or 1Gbps Ethernet connections.

Client

A program or user that requests data from a server.

Collision

When do two devices on the same Ethernet network try and transmit data at the exact same time.

Cookie

Information that is stored on the hard drive of your computer that holds your preferences to the site that gave your computer the cookie.

Data

Information that has been translated into binary so that it can be processed or moved to another device.

Data Encryption Standard

Uses a randomly selected 56-bit key that must be known by both the sender and the receiver when information is exchanged.

Data-Link layer

The second layer of the OSI model. Controls the movement of data on the physical link of a network.

Database

Organizes information so that it can be managed updated, as well as easily accessed by users or applications.

DB-25

A 25-pin male connector for attaching External modems or RS-232 serial devices.

DB-9

A 9-pin connector for RS-232 connections

dBd

Decibels related to dipole antenna.

dBi

Decibels relative to isotropic radiator.

dBm

Decibels relative to one milliwatt.

Decrypt

To unscramble an encrypted message back into plain text.

Default

A predetermined value or setting that is used by a program when no user input has been entered for this value or setting.

Demilitarized zone

DMZ: A single computer or group of computers that can be accessed by both users on the Internet as well as users on the Local Network, but that is not protected by the same security as the Local Network.

DHCP

Dynamic Host Configuration Protocol: Used to automatically assign IP addresses from a predefined pool of addresses to computers or devices that request them.

Digital certificate

An electronic method of providing credentials to a server in order to have access to it or a network.

Direct Sequence Spread Spectrum

DSSS: Modulation technique used by 802.11b wireless devices.

DMZ

“Demilitarized Zone”. A computer that logically sits in a “no-mans-land” between the LAN and the WAN. The DMZ computer trades some of the protection of the router’s security mechanisms for the convenience of being directly addressable from the Internet.

DNS

Domain Name System: Translates Domain Names to IP addresses.

Domain name

A name that is associated with an IP address.

Download

To send a request from one computer to another and have the file transmitted back to the requesting computer.

DSL

Digital Subscriber Line. High bandwidth Internet connection over telephone lines.

Duplex

Sending and Receiving data transmissions at the same time.

Dynamic DNS service

Dynamic DNS is provided by companies to allow users with Dynamic IP addresses to obtain a Domain Name that will always be linked to their changing IP address. The IP address is updated by either client software running on a computer or by a router that supports Dynamic DNS, whenever the IP address changes.

Dynamic IP address

IP address that is assigned by a DHCP server and that may change. Cable Internet providers usually use this method to assign IP addresses to their customers.

EAP

Extensible Authentication Protocol.

Email

Electronic Mail is a computer-stored message that is transmitted over the Internet.

Encryption

Converting data into cyphertext so that it cannot be easily read.

Ethernet

The most widely used technology for Local Area Networks.

Fiber optic

A way of sending data through light impulses over glass or plastic wire or fiber.

File server

A computer on a network that stores data so that the other computers on the network can all access it.

File sharing

Allowing data from computers on a network to be accessed by other computers on the network with different levels of access rights.

Firewall

A device that protects resources of the Local Area Network from unauthorized users outside of the local network.

Firmware

Programming that is inserted into a hardware device that tells it how to function.

Fragmentation

Breaking up data into smaller pieces to make it easier to store.

FTP

File Transfer Protocol. Easiest way to transfer files between computers on the Internet.

Full-duplex

Sending and Receiving data at the same time.

Gain

The amount an amplifier boosts the wireless signal.

Gateway

A device that connects your network to another, like the Internet.

Gbps

Gigabits per second.

Gigabit Ethernet

Transmission technology that provides a data rate of 1 billion bits per second.

GUI

Graphical user interface.

H.323

A standard that provides consistency of voice and video transmissions and compatibility for video conferencing devices.

Half-duplex

Data cannot be transmitted and received at the same time.

Hashing

Transforming a string of characters into a shorter string with a predefined length.

Hexadecimal

Characters 0-9 and A-F.

Hop

The action of data packets being transmitted from one router to another.

Host

Computer on a network.

HTTP

Hypertext Transfer Protocol is used to transfer files from HTTP servers (web servers) to HTTP clients (web browsers).

HTTPS

HTTP over SSL is used to encrypt and decrypt HTTP transmissions.

Hub

A networking device that connects multiple devices together.

ICMP

Internet Control Message Protocol.

IEEE

Institute of Electrical and Electronics Engineers.

IGMP

Internet Group Management Protocol is used to make sure that computers can report their multicast group membership to adjacent routers.

IIS

Internet Information Server is a WEB server and FTP server provided by Microsoft.

IKE

Internet Key Exchange is used to ensure security for VPN connections.

Infrastructure

In terms of a wireless network, this is when wireless clients use an access point to gain access to the network.

Internet

A system of worldwide networks that use TCP/IP to allow for resources to be accessed from computers around the world.

Internet Explorer

A World Wide Web browser created and provided by Microsoft.

Internet Protocol

The method of transferring data from one computer to another on the Internet.

Internet Protocol Security

IPsec provides security at the packet processing layer of network communication.

Internet Service Provider

An ISP provides access to the Internet to individuals or companies.

Intranet

A private network.

Intrusion Detection

A type of security that scans a network to detect attacks coming from inside and outside of the network.

IP

Internet Protocol.

IP address

A 32-bit number, when talking about Internet Protocol Version 4, that identifies each computer that transmits data on the Internet or on an intranet.

IPsec

Internet Protocol Security.

IPX

Internetwork Packet Exchange is a networking protocol developed by Novell to enable their Netware clients and servers to communicate.

ISP

Internet Service Provider.

Java

A programming language used to create programs and applets for web pages.

Kbps

Kilobits per second.

Kbyte

Kilobyte.

L2TP

Layer 2 Tunneling Protocol.

LAN

Local Area Network.

Latency

The amount of time that it takes a packet to get from the one point to another on a network. Also referred to as delay.

LED

Light Emitting Diode.

Legacy

Older devices or technology.

Local Area Network

LAN. A group of computers in a building that usually access files from a server.

LPR/LPD

“Line Printer Requestor”/“Line Printer Daemon”. A TCP/IP protocol for transmitting streams of printer data.

MAC Address

A unique hardware ID assigned to every Ethernet adapter by the manufacturer.

Mbps

Megabits per second.

MDI

Medium Dependent Interface is an Ethernet port for a connection to a straight-through cable.

MDIX

Medium Dependent Interface Crossover is an Ethernet port for a connection to a crossover cable.

MIB

Management Information Base is a set of objects that can be managed by using SNMP.

Modem

A device that modulates digital signals from a computer to an analog signal in order to transmit the signal over phone lines. It also demodulates the analog signals coming from the phone lines to digital signals for your computer.

MPPE

Microsoft Point-to-Point Encryption is used to secure data transmissions over PPTP connections.

MTU

Maximum Transmission Unit is the largest packet that can be transmitted on a packet-based network like the Internet.

Multicast

Sending data from one device to many devices on a network.

NAT

Network Address Translation allows many private IP addresses to connect to the Internet, or another network, through one IP address.

NetBEUI

NetBIOS Extended User Interface is a Local Area Network communication protocol. This is an updated version of NetBIOS.

NetBIOS

Network Basic Input/Output System.

Netmask

Determines what portion of an IP address designates the Network and which part designates the Host.

Network Interface Card

NIC. A card installed in a computer or built onto the motherboard that allows the computer to connect to a network.

Network Layer

The third layer of the OSI model which handles the routing of traffic on a network.

Network Time Protocol

Used to synchronize the time of all the computers in a network.

NIC

Network Interface Card.

NTP

Network Time Protocol.

OFDM

Orthogonal Frequency-Division Multiplexing is the modulation technique for both 802.11a and 802.11g.

OSI

Open Systems Interconnection is the reference model for how data should travel between two devices on a network.

OSPF

Open Shortest Path First is a routing protocol that is used more than RIP in larger scale networks because only changes to the routing table are sent to all the other

routers in the network as opposed to sending the entire routing table at a regular interval, which is how RIP functions.

Password

A sequence of characters that is used to authenticate requests to resources on a network.

Personal Area Network

The interconnection of networking devices within a range of 10 meters.

Physical layer

The first layer of the OSI model. Provides the hardware means of transmitting electrical signals on a data carrier.

Ping

A utility program that verifies that a given Internet address exists and can receive messages. The utility sends a control packet to the given address and waits for a response.

PoE

Power over Ethernet is the means of transmitting electricity over the unused pairs in a category 5 Ethernet cable.

POP3

Post Office Protocol 3 is used for receiving email.

Port

A logical channel endpoint in a network. A computer might have only one physical channel (its Ethernet

channel) but can have multiple ports (logical channels) each identified by a number.

PPP

Point-to-Point Protocol is used for two computers to communicate with each over a serial interface, like a phone line.

PPPoE

Point-to-Point Protocol over Ethernet is used to connect multiple computers to a remote server over Ethernet.

PPTP

Point-to-Point Tunneling Protocol is used for creating VPN tunnels over the Internet between two networks.

Preamble

Used to synchronize communication timing between devices on a network.

QoS

Quality of Service.

RADIUS

Remote Authentication Dial-In User Service allows for remote users to dial into a central server and be authenticated in order to access resources on a network.

Reboot

To restart a computer and reload its operating software or firmware from nonvolatile storage.

Rendezvous

Apple's version of UPnP, which allows for devices on a network to discover each other and be connected without the need to configure any settings.

Repeater

Retransmits the signal of an access point in order to extend its coverage.

RIP

Routing Information Protocol is used to synchronize the routing table of all the routers on a network.

RJ-11

The most commonly used connection method for telephones.

RJ-45

The most commonly used connection method for Ethernet.

RS-232C

The interface for serial communication between computers and other related devices.

RSA

Algorithm used for encryption and authentication.

Server

A computer on a network that provides services and resources to other computers on the network.

Session key

An encryption and decryption key that is generated for every communication session between two computers.

Session layer

The fifth layer of the OSI model which coordinates the connection and communication between applications on both ends.

Simple Mail Transfer Protocol

Used for sending and receiving email.

Simple Network Management Protocol

Governs the management and monitoring of network devices.

SIP

Session Initiation Protocol. A standard protocol for initiating a user session that involves multimedia content, such as voice or chat.

SMTP

Simple Mail Transfer Protocol.

SNMP

Simple Network Management Protocol.

SOHO

Small Office/Home Office.

SPI

Stateful Packet Inspection.

SSH

Secure Shell is a command line interface that allows for secure connections to remote computers.

SSID

Service Set Identifier is a name for a wireless network.

Stateful Packet Inspection

A feature of a firewall that monitors outgoing and incoming traffic to make sure that only valid responses to outgoing requests are allowed to pass through the firewall.

Subnet mask

Determines what portion of an IP address designates the Network and which part designates the Host.

Syslog

System Logger -- a distributed logging interface for collecting in one place the logs from different sources. Originally written for UNIX, it is now available for other operating systems, including Windows.

TCP

Transmission Control Protocol.

TCP Raw

A TCP/IP protocol for transmitting streams of printer data.

TCP/IP

Transmission Control Protocol/Internet Protocol.

TFTP

Trivial File Transfer Protocol is a utility used for transferring files that is simpler to use than FTP but with less features.

Throughput

The amount of data that can be transferred in a given time period.

Traceroute

A utility displays the routes between your computer and specific destination.

UDP

User Datagram Protocol.

Unicast

Communication between a single sender and receiver.

Universal Plug and Play

UPnP. A standard that allows network devices to discover each other and configure themselves to be a part of the network.

Update

To install a more recent version of a software or firmware product.

Upgrade

To install a more recent version of a software or firmware product.

Upload

To send a request from one computer to another and have a file transmitted from the requesting computer to the other.

UPnP

Universal Plug and Play.

URL

Uniform Resource Locator is a unique address for files accessible on the Internet.

USB

Universal Serial Bus.

UTP

Unshielded Twisted Pair.

Virtual Private Network

VPN: A secure tunnel over the Internet to connect remote offices or users to their company's network.

VLAN

Virtual LAN.

Voice over IP

Sending voice information over the Internet as opposed to the PSTN

VoIP

Voice over IP.

Wake on LAN

Allows you to power up a computer through it's Network Interface Card.

WAN

Wide Area Network.

WCN

Windows Connect Now. A Microsoft method for configuring and bootstrapping wireless networking hardware (access points) and wireless clients, including PCs and other devices.

WDS

Wireless Distribution System. A system that enables the interconnection of access points wirelessly.

Web browser

A utility that allows you to view content and interact with all of the information on the World Wide Web.

WEP

Wired Equivalent Privacy is security for wireless networks that is supposed to be comparable to that of a wired network.

WiFi

Wireless Fidelity. Used to describe any of the 802.11 wireless networking specifications.

WiFi Protected Access

An updated version of security for wireless networks that provides authentication as well as encryption.

Wide Area Network

The larger network that your LAN is connected to, which may be the Internet itself, or a regional or corporate network.

Wireless (WiFi) LAN

Connecting to a Local Area Network over one of the 802.11 wireless standards.

Wireless ISP

WISP. A company that provides a broadband Internet connection over a wireless connection.

WISP

Wireless Internet Service Provider.

WLAN

Wireless Local Area Network.

WPA

WiFi Protected Access. A WiFi security enhancement that provides improved data encryption, relative to WEP.

xDSL

A generic term for the family of digital subscriber line (DSL) technologies, such as ADSL, HDSL, RADSL, and SDSL.

Yagi antenna

A directional antenna used to concentrate wireless signals on a specific location.

10 APPENDIX

10.1 Product Information and Safety Guide

This important Product Information and Safety Guide contains safety, handling, disposal, regulatory, trademark, copyright, and software licensing information. Read all safety information below and operating instructions before using the IBR600 3G device to avoid injury.

SAFETY AND HAZARDS

Under no circumstances should the IBR600 3G device be used in any areas (a) where blasting is in progress, (b) where explosive atmospheres may be present, or (c) that are near (i) medical or life support equipment, or (ii) any equipment which may be susceptible to any form of radio interference. In such areas, the IBR600 3G device **MUST BE POWERED OFF AT ALL TIMES** (since the device otherwise could transmit signals that might interfere with such equipment). In addition, under no circumstances should the IBR600 3G device be used in any aircraft, regardless of whether the aircraft is on the ground or in flight. In any aircraft, the IBR600 3G device **MUST BE POWERED OFF AT ALL TIMES** (since the device otherwise could transmit signals that might interfere with various onboard systems on such aircraft). Furthermore, under no circumstances should the IBR600 3G device be used by the driver or operator of any vehicle. Such use of the device will detract from the driver or operator's control of that vehicle. In some jurisdictions, use of the IBR600 3G device while driving or operating a vehicle constitutes a civil and/or criminal offense.

Due to the nature of wireless communications, transmission and reception of data by the IBR600 3G device can never be guaranteed, and it is possible that data communicated or transmitted wirelessly may be delayed, corrupted (i.e., contain errors), or totally lost. The IBR600 3G device is not intended for, and CradlePoint recommends the device not be used in any critical applications where failure to transmit or receive data could result in property damage or loss or personal injury of any kind (including death) to the user or to any other party. CradlePoint expressly disclaims liability for damages of any kind resulting from: (a) delays, errors, or losses of any data transmitted or received using the device; or (b) any failure of the device to transmit or receive such data.

Warning: This product is only to be installed by qualified personnel!

To comply with FCC/IC regulations limiting both maximum RF output power and human exposure to RF radiation, the maximum antenna gain must not exceed 5 dBi in the Cellular band and 4 dBi in the PCS band.

ANTENNA CONSIDERATIONS

Although the antenna model(s) used with these devices meet(s) the Industry Canada Radio Frequency requirements, it is possible that the future customers may swap them for different ones without network providers knowledge and approval. Such customers must be made aware of, and follow, the Radio Frequency requirements applied in the Technical Approval:

- RSS-102 "Radio Frequency Exposure Compliance of Radiocommunication Apparatus (All Frequency Bands)"
- RSS-129 "800 MHz Dual-Mode CDMA Cellular Telephones"
- RSS-132e "Cellular Telephones Employing New Technologies Operating in the Bands 824-849 MHz and 869-894 MHz"
- RSS-133 r1 "2 GHz Personal Communications Services"

FEDERAL COMMUNICATION COMMISSION INTERFERENCE STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC CAUTION: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

For product available in the USA/Canada market, only channel 1~11 can be operated. Selection of other channels is not possible.

This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

IMPORTANT NOTE

FCC Radiation Exposure Statement: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

OPEN SOURCE SOFTWARE

This product contains software distributed under one or more of the following open source licenses: GNU General Public License Version 2, NetBSD Foundation License, and PSF License Agreement for Python 3.1.1. For more information on this software, including licensing terms and your rights to access source code, contact CradlePoint at www.cradlepoint.com/opensource.

WARRANTY INFORMATION

Limited 1 Year Warranty included featuring 5x12 technical support + access to software updates + hardware repair or replacement. Optional Enterprise Support Agreement available with 24x7 technical support + software updates and upgrades + advanced hardware exchange.

CradlePoint, Inc. warrants this product against defects in materials and workmanship to the original purchaser (or the first purchaser in the case of resale by an authorized distributor) for a period of one (1) year from the date of shipment. This warranty is limited to a repair or replacement of the product, at CradlePoint's discretion. CradlePoint does not warrant that the operation of the device will meet your requirements or be error free. Within thirty (30) days of receipt should the product fail for any reason other than damage due to customer negligence, purchaser may return the product to the point of purchase for a full refund of the purchase price. If the purchaser wishes to upgrade or convert to another CradlePoint, Inc. product within the thirty (30) day period, purchaser may return the product and apply the full purchase price toward the purchase of another CradlePoint product. Any other return will be subject to CradlePoint, Inc.'s existing return policy.

LIMITATION OF CRADLEPOINT LIABILITY

The information contained in this Quick Start Guide is subject to change without notice and does not represent any commitment on the part of CradlePoint or its affiliates. CRADLEPOINT AND ITS AFFILIATES HEREBY SPECIFICALLY DISCLAIM LIABILITY FOR ANY AND ALL: (A) DIRECT, INDIRECT, SPECIAL, GENERAL, INCIDENTAL, CONSEQUENTIAL, PUNITIVE OR EXEMPLARY DAMAGES, INCLUDING WITHOUT LIMITATION FOR LOSS OF PROFITS OR REVENUE OR OF ANTICIPATED PROFITS OR REVENUE ARISING OUT OF THE USE OR INABILITY TO USE THE IBR600 3G DEVICE, EVEN IF CRADLEPOINT AND/OR ITS AFFILIATES HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, AND EVEN IF SUCH DAMAGES ARE FORESEEABLE; OR (B) CLAIMS BY ANY THIRD PARTY. Notwithstanding the foregoing, in no event shall the aggregate liability of CradlePoint and/or its affiliates arising under or in connection with the IBR600 3G device, regardless of the number of events, occurrences, or claims giving rise to liability, exceed the price paid by the original purchaser of the IBR600 3G device.

PRIVACY

CradlePoint may collect general data pertaining to the use of CradlePoint products via the Internet including, by way of example, IP address, device ID, operating system, browser type and version number, etc. To review CradlePoint's privacy policy, please visit: <http://www.cradlepoint.com/privacy>.

OTHER BINDING DOCUMENTS; TRADEMARKS; COPYRIGHT



By activating or using your IBR600 3G device, you agree to be bound by CradlePoint's Terms of Use, User License and other Legal Policies, all as posted at www.cradlepoint.com/legal. Please read these documents carefully. CradlePoint, the CradlePoint logo, and IBR600 are trademarks of CradlePoint, Inc.

10.2 Specifications

MODEL NAME

CradlePoint COR Integrated Broadband Router IBR600

DATA IN

3G via internal EVDO Rev. A modem, backwards compatible to EVDO Rev 0 and 1xRTT, 10/100 Ethernet Port, WiFi

DATA OUT

WiFi (802.11 b/g/n), Two 10/100 Ethernet Ports (WAN/LAN Switchable)

ANTENNAS

2 external 2.4 GHz WiFi antennas (500+ feet range); 2 external 4G LTE / 3G EV-DO modem antennas

BUTTONS / SWITCHES

Power Switch, Reset

LED INDICATORS

Power, WiFi, Modem, Signal Strength, Ethernet LAN, Ethernet WAN

DIMENSIONS

3.3-in x 4-in x 0.9-in (85mm x 102mm x 22mm)

WEIGHT: 7.2 oz (200g)

CERTIFICATIONS: FCC, IC, CE, WiFi Alliance, PTCRB, 802.3, plus Carrier specific certifications

OPERATING TEMPERATURE

-10°C to 60°C (14°F to 140°F) Operating Modem as WAN

-10°C to 50°C (14°F to 122°F) Operating Ethernet as WAN

-20°C to 70°C (-4°F to 158°F) Storage

DETAILS

- **WAN Security** NAT, SPI, ALG, inbound filtering of IP Addresses (future), Port Blocking, Service Filtering (FTP, SMTP, HTTP, RPL, SNMP, DNS, ICMP, NNTP, POP3, SSH), Protocol filtering, WAN ping (allow/ignore)
- **Redundancy and Load Balancing** Failover/Failback with 3G/ Ethernet, Load Balancing, WAN Failure Detection via ping
- **Intelligent Routing** UPnP, DMZ, Virtual Server/Port Forwarding, Routing Rules, Route Management, Content Filtering, Website Filtering, Local DHCP server, DHCP Client, DNS, DNS Proxy. ALGs: PPTP, L2TP, PPPoE pass-through, IPSec pass-through, FTP (passive), FTP (active), MAC Address Filtering, Dynamic DNS
- **Management** Remote WAN Web-based Management Access (HTTP, HTTPS), Web-based GUI (Easy Management), One-button firmware upgrade, USB firmware upgrade, Modem Configuration and Management, Server-based centralized Management (WiPipe™ Central), Modem configuration and management
- **Performance & Health Monitoring** WiPipe™ QoS, with Traffic Shaping, SSID-based priority, WAN port speed control
- **VPN (IPSec)**. Device to CradlePoint, Cisco/Linksys, Linux system, Transfer Modes, Hash (MD5, SHA128, SHA256, SHA384, SHA512), Cipher (AES, 3DES, DES), Support for 5 concurrent connections, GRE Tunneling

A large version of the Cradlepoint logo, featuring the word "cradlepoint" in white lowercase letters on a red rectangular background.

<http://www.cradlepoint.com/>

Copyright © 2012 by CradlePoint, Inc. All rights reserved.