

USER GUIDE

JAWBONE®
ICON HD™

ENGLISH/ESPAÑOL


CONTENTS

	ICON HD ANATOMY	PAGE 4
	POWER UP	6
1	FIND YOUR FIT	8
2	GET CONNECTED	11
3	START TALKING & MORE	14
	GET APPS & UPDATES	16
	SPECS & CHEAT SHEET	18



GET TIPS & HELP AT
JAWBONE.COM/SUPPORT

ICON HD ANATOMY

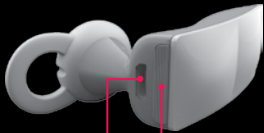

MICRO USB

TALK BUTTON



ON/OFF SWITCH

VOICE ACTIVITY SENSOR

LED RING

IF THE **LED RING** IS...



FLASHING RED + WHITE

ICON HD is in pairing mode.



FLASHING WHITE

ICON HD is trying to connect to your phone.



FLASHING RED

Battery is low. Power up!

POWER UP

To charge, plug your headset into the wall charger or USB port on your computer.



NOTE It takes 40 minutes to get your ICON HD 80% charged. A full charge takes 90 minutes. When fully charged, the LED RING on your ICON HD will turn white.

TO HEAR REMAINING BATTERY LIFE

Press the **TALK BUTTON** when not on a call.

WHEN BATTERY IS LOW

The **LED RING** on your ICON HD will flash **RED**.

BATTERY METER ON YOUR PHONE

IPHONE®


Shows up automatically when connected.

OTHERS (ANDROID™ & BLACKBERRY®)

Go to **MYTALK.JAWBONE.COM/APPS**

1 GET COMFORTABLE

FIND YOUR FIT

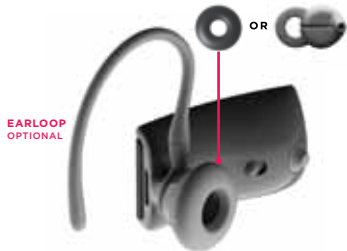


Mix and match earbuds with the optional earloop to find the most comfortable and secure fit option for you.



If you try a Spout earbud, tuck the tab behind this fold in your ear.

ENSURE BEST QUALITY


VOICE ACTIVITY SENSOR

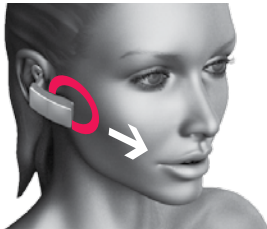

For best performance, the rubber Voice Activity Sensor should touch your cheek and the headset should point towards your mouth.

2 GET CONNECTED

Before you can begin using your ICON HD™, you must pair it with your phone or Bluetooth device.

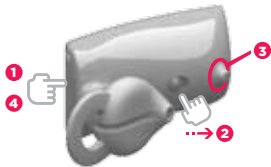

- 1 Press & hold the **TALK BUTTON**.
- 2 Slide the **POWER SWITCH** on.
- 3 Wait for the **LED RING** to flash red & white.
- 4 Release the **TALK BUTTON**.

PAIR ICON HD WITH YOUR PHONE

- 1 Activate pairing mode on your ICON HD.
- 2 Turn on Bluetooth®.

ON AN IPHONE®

Go to **SETTINGS > GENERAL >**
and enable **BLUETOOTH**.

ON A BLACKBERRY®

Go to **SETTINGS/OPTIONS >**
BLUETOOTH and enable **BLUETOOTH**.

ON AN ANDROID™ PHONE

Go to **SETTINGS > WIRELESS
& NETWORK > BLUETOOTH SETTINGS**
and enable **BLUETOOTH**.

OTHER CELL PHONES

Go to **JAWBONE.COM/PAIRING** or
review the instruction manual that
came with your phone.

- 3 Go to your phone's Bluetooth® settings.

ADD OR SEARCH FOR DEVICES

When "Jawbone ICON HD" appears,
select it.

IF ASKED FOR A PASSCODE

Enter "**0000**".

This is a one-time event per phone.
To pair your ICON HD to another phone,
repeat these steps.

3 GET TALKING & MORE

ANSWER/END A CALL

Press the **TALK BUTTON** on your ICON HD to both answer and end a call.

DECLINE AN INCOMING CALL

Hold the **TALK BUTTON** for 2 seconds.

MAKE A CALL

Use your phone or computer to dial as usual. Listen and talk through your ICON HD.

ACTIVATE DIALAPP (PHONE ONLY)

Hold the **TALK BUTTON** until you hear a beep, then release and follow the voice prompts. VoiceDial is pre-loaded.

REDIAL LAST NUMBER (PHONE ONLY)

Press the **TALK BUTTON** twice.

SIMULTANEOUS CALLS

To switch between calls, press the **TALK BUTTON**. To end one call and switch to the other, press the **TALK BUTTON** twice.

ADJUST THE VOLUME

Use the volume control on your phone or computer. Or, while on a call or listening to music, **PRESS + HOLD** the **TALK BUTTON**. The volume level will cycle up and down. Release the button to set your volume.

CONTROL MEDIA

To pause streaming audio playing from your mobile device, press the **TALK BUTTON** once. To play, press three times.

GET APPS & UPDATES

Jawbone® MY**TALK** lets you personalize and update your Jawbone via the web.



Visit **MYTALK.JAWBONE.COM**

PERSONALIZE YOUR ICON HD

AUDIOAPPS

Change the voice that tells you information such as battery life and caller ID.

DIALAPPS

Customize the **TALK BUTTON** to speed dial your favorite number, or link directly to 411, voice-to-text, and other voice services.

INNOVATIONS

Try our newest software creations designed exclusively for your Jawbone ICON HD.

UPDATE ICON HD SOFTWARE

Make sure you are using the latest version of the Jawbone ICON HD software by logging on to **MYTALK.JAWBONE.COM**.

EXTRAS

Extras is a collection of helpful apps that can enhance your ICON HD experience. They might just change the way you use your ICON HD.

Check them out at **MYTALK.JAWBONE.COM**.

SPECIFICATIONS & CHEAT SHEET

ICON HD SPECIFICATIONS

TALK TIME Up to 4.5 hours

STANDBY TIME Up to 10 days

CHARGING 40 minutes (80%); 90 Minutes (full)

WIRELESS RANGE 33ft (10m)

BLUETOOTH* 2.1 +EDR, HSP 1.1, HFP 1.5, A2DP 1.2, AVRCP 1.0

CONNECTIONS Supports up to 8 paired devices and 2 active HFP and A2DP connections with Multipoint

SPEAKER Wideband-capable

AUDIO QUALITY HD Audio (16KHz)

WEIGHT 8.2 grams

DIMENSIONS 44 mm x 18 mm x 25 mm

ICON HD CHEAT SHEET

ACTION

ACTIVATE PAIRING MODE*

ANSWER / END CALL

SWITCH BETWEEN CALLS

END CALL & ANSWER INCOMING

REDIAL LAST NUMBER*

ADJUST VOLUME

PAUSE MEDIA*

PLAY MEDIA*

ACTIVATE VOICEDIAL/ DIALAPPS*

HEAR BATTERY STATUS*

RE-CONNECT TO PAIRED DEVICE

HEADSET CONTROL

Hold TALK Button + Switch On (LED flashes Red + White)

Press TALK Button

Press TALK Button

Press TALK Button 2X

Press TALK Button 2X

Hold TALK button or adjust on your device

Press TALK Button

Press TALK Button 3X

Hold TALK Button

Press TALK Button

Press TALK Button

*not during a call

SAFETY INFORMATION

WARNING

Failure to follow these safety instructions could result in hearing damage or in fire, electric shock, or other injury or damage.

Avoiding Hearing Damage

Permanent hearing loss may occur if the Jawbone® headset is used at a high volume. Set the volume to a safe level. Even though you may become accustomed to a higher volume of sound, and even though it may sound normal, any higher volume of sound can be damaging to your hearing. If you experience ringing in your ears or muffled speech, stop listening and have your hearing checked. The louder the volume, the less time is required before your hearing could be affected. The Jawbone® headset has been initially set at a medium volume for sound. Do not increase the level of volume unless you are in conditions where you need a higher level for a short period of time. If this level of volume is uncomfortably high for you, you should decrease this level.

HEARING EXPERTS SUGGEST THAT TO PROTECT YOUR HEARING:

- 1 Limit the amount of time you use the Jawbone® headset including use at high volume.
- 2 Avoid turning up the volume to block out noisy surroundings.
- 3 Turn the volume down if you can't hear people speaking near you.

Jawbone Headset Care

- Do not expose your Jawbone® headset to liquid, moisture, humidity, or rain. The Jawbone® headset is not waterproof.
- Do not tamper with or abuse the Jawbone® headset. For example, without limitation, do not drop, disassemble, open, crush, bend, deform, puncture, shred, microwave, incinerate, paint, or insert foreign objects into the Jawbone® headset.
- Do not use abrasive cleaners to clean your Jawbone® headset.
- Do not expose your Jawbone® headset to extremely high or low temperatures.
- Do not leave your Jawbone® headset in direct sunlight for an extended period of time.
- Do not leave your Jawbone® headset near open flames such as cooking burners.
- Do not dispose of your Jawbone® headset in a fire. The battery could explode.
- Do not bring your Jawbone® headset into contact with any sharp objects. This can cause scratches and damage.
- Do not insert anything into your Jawbone® headset unless otherwise specified in the user manual. This may damage the internal components.
- Do not attempt to disassemble your Jawbone® headset, it does not contain serviceable components.
- Do not wear your Jawbone® headset without an Jawbone® approved earbud.

Built-in Battery Care

- Do not attempt to replace your Jawbone® headset's battery. It is built-in and not changeable.
- Charge the battery in accordance with the instructions supplied with this guide.
- Use only the charger supplied by Jawbone® headset's original manufacturer to charge the battery.

Charger Care

- Use only the charger supplied by the Jawbone® headset's original manufacturer to charge your Jawbone® headset. Other chargers may look similar but using them could be dangerous and could damage the Jawbone® headset.
- Do not attempt to disassemble the charger as it may expose you to dangerous electric shock.
- Do not use the charger outdoors or in damp areas.
- Only charge your Jawbone® headset's built-in battery in accordance with the instructions described in this guide.
- Avoid charging your Jawbone® headset in extremely high or low temperatures.
- Do not use your Jawbone® headset while it is charging.
- Do not connect the Jawbone® headset to the charger while on an active call.

Safety Information

- Check and observe local laws regarding the use of a mobile phone and headset while driving. If you use the Jawbone® headset while driving, ensure that you maintain your full attention and focus; it is your responsibility to drive safely. Consider pulling off the road before making or answering a call.
- Never allow children to play with the Jawbone® headset; the small components of the headset may be a choking hazard.
- Do not leave or store the Jawbone® headset or any of its accessories in the area over the air bag or in the air bag deployment area of an automobile as serious injury may result when an air bag deploys.
- Observe all signs and displays that require an electrical device or RF radio product to be switched off in designated areas.
- Turn off your Jawbone® headset prior to boarding aircraft. Do not use the Jawbone® headset inside an aircraft in flight unless allowed by your airline.
- Never use the Jawbone® headset while taking a bath.
- Do not use the Jawbone® headset in a sauna or steam room.
- Do not keep your Jawbone® headset near a sink or other wet areas.
- Do not clean your Jawbone® headset while it is being charged. Always unplug the charger first before cleaning the Jawbone® headset.

- Do not attempt to repair or modify the Jawbone® headset yourself. The Jawbone® headset does not contain any user-serviceable parts. If the Jawbone® headset has been submerged in water, punctured, or subjected to a severe fall, do not use it until you take it back to your original place of purchase.
- Do not attempt to force open the built-in battery.
- Dispose of the battery in the Jawbone® headset according to local regulations. Do not dispose of the battery with household waste.
- Disposal of the packaging and your Jawbone® headset should be done in accordance with local regulations.
- Please only use with the power supply adapter provided, Jawbone model number **SPA-K901**.
- The short wave radio frequency signals of a Bluetooth device may impair the operation of other electronic and medical devices.
- Switch off the device where it is prohibited. Do not use the device in medical facilities, aircraft, refueling points, close to automatic doors, automatic fire alarms or other automatically controlled devices.
- Keep this device at least 20 cm from pacemakers and other medical devices. Radio waves may impair the operation of pacemakers and other medical devices.

Other Notes

PACKAGING AND PRODUCT DISPOSAL Dispose of the packaging and this product in accordance with the latest provisions.

FCC NOTICE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTIONS Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC COMPLIANCE This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1 This device may not cause harmful interference, and
- 2 This device must accept any interference received, including interference that may cause undesired operation.

IC RSS-GEN Operation is subject to the following two conditions:

- 1 This device may not cause interference, and
- 2 This device must accept any interference, including interference that may cause undesired operation of the device.

FCC ID: V3J-JBG. IC: 7589A-JBG.

To locate the FCC and IC identification numbers, please remove the earbud from the Jawbone headset.

FCC ID: V3J-JBD. IC: 7589A-JBD.

To locate the FCC and IC identification numbers, please look on the underside of the Jawbone device.

FOR MORE INFORMATION



VISIT JAWBONE.COM/SUPPORT
for additional help



CALL 1-877-254-7426



GO TO JAWBONE.COM/WARRANTY
for warranty info



PURCHASE the official Jawbone Cable Kit, Jawbone ICON HD™ Fit Kit and other accessories at WWW.JAWBONE.COM



FOLLOW us on Facebook® & Twitter®
JAWBONE.COM/FACEBOOK



JAWBONE.COM/TWITTER



This product is compliant with the CE directive.

All returns must be made to the original place of purchase.

©2011 Jawbone. Reproduction in whole or in part is prohibited. All rights reserved. Jawbone®, NoiseAssassin®, ICON HD™, THE NERD™ and Wire-Free™ are trademarks of Jawbone. The Bluetooth® word mark and logos are owned by Bluetooth SIG, Inc. and any use of such marks by Jawbone is under license. iPhone® is a registered trademark of Apple Inc. BlackBerry® is a registered trademark of Research In Motion Limited. Android and Google Talk are trademarks of Google Inc. Use of these trademarks are subject to Google Permissions. Other trademarks and trade names are those of their respective owners.

©2011 JAWBONE. ALL RIGHTS RESERVED. 770-00624 REV A

